

# QUICK-START GUIDE

## DENON DJ DN-HC1000S

serato



# Installation and Setup

The Denon DN-HC1000S is a class compliant USB plug and play device and requires no further driver installation.

**NOTE:** The Denon DN-HC1000S is an additional controller that will only work in addition to supported Serato DJ hardware. [Click here to see a list of supported Serato DJ hardware.](#)


- Download and install the latest version of Serato DJ from <http://serato.com/dj/downloads>
- Connect your supported Serato DJ hardware to a USB port.
- Connect your Denon DN-HC1000S to an available USB Port.
- Open Serato DJ.

**serato**



**DJ**

# Controller

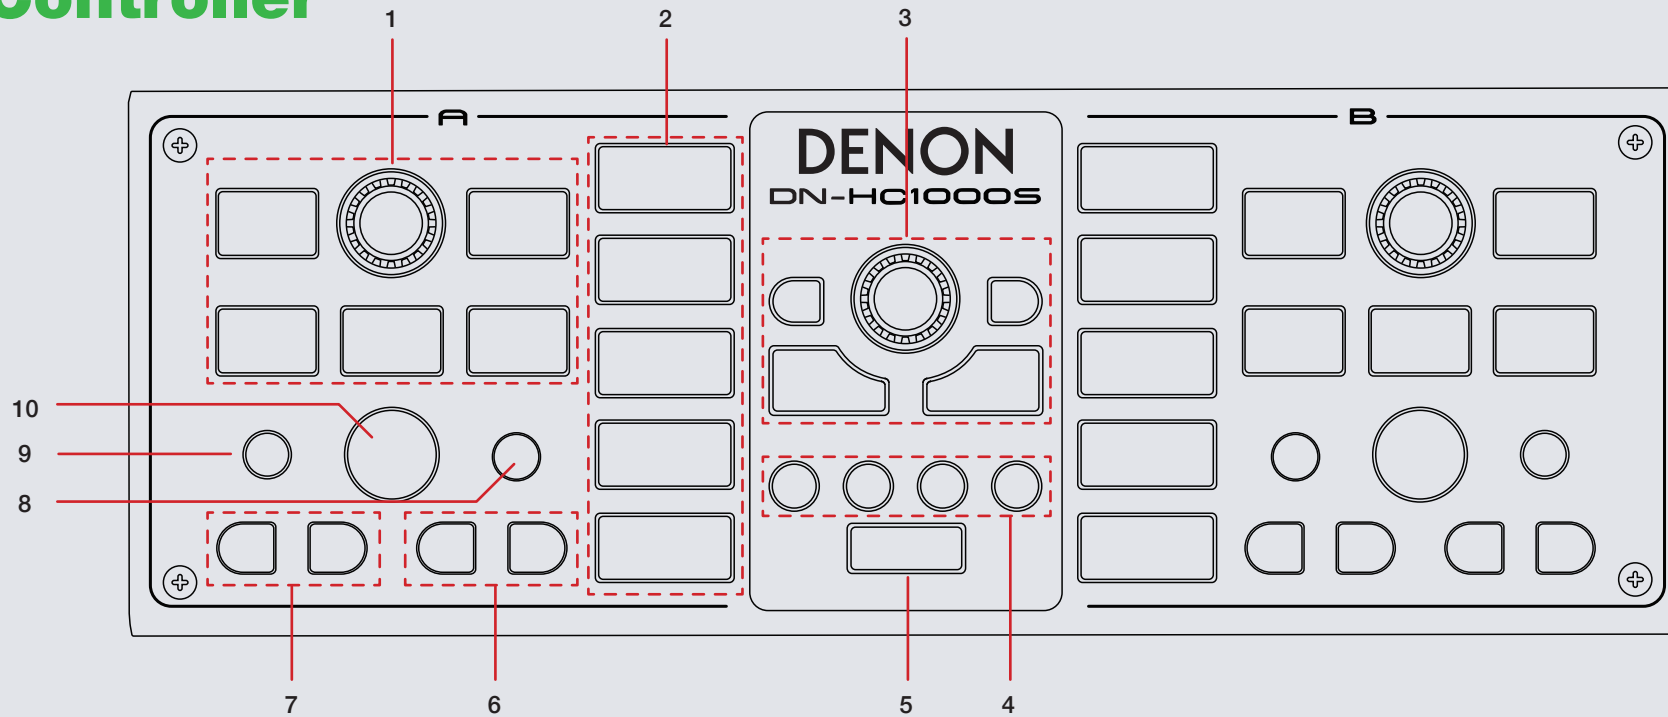


#	DENON DN-HC1000S	Function	Shift Function
1	LOOPING CONTROL	See 1. Looping Control	
2	CUE POINT CONTROL	See 2. Cue Point Control	
3	LIBRARY CONTROL	See 3. Library Control	
4	AREA SELECT	See 4. Areas	

5	SHIFT		
6	TRACK SEARCH	Loads previous track	Fast Search
7	PITCH BEND	Pitch bend down/up	Fast Search
8	SAMP (1-3) / (4-6)	Activate SP-6 sample player	
9	CENSOR	Censor	Key lock on/off
10	TAP	NO SYNC: Tap BPM of loaded track SYNC: Activate Edit Beatgrid mode	

## Looping

You have up to 8 loops per track in Serato DJ, and the choice between either manual or auto loops. You can choose whether you have 2 loops (and 8 cuepoints) showing on screen, or 8 loops. Manual loop view is only available when the Loop Tab is selected. Auto Loop controls are available when either the Cue Point tab or Loop tab are selected.

#	DENON DN-HC1000S	Function	Shift Function
1	LOOP ROLL	Loop Roll on/off	
2	LOOP CUT	Scroll: Halves/doubles loop. / Push: Halves loop	Select saved loop slot
3	AUTO LOOP	Auto Loop on/off	
4	IN	Set/Adjust loop in point	
5	OUT	Set/Adjust loop out point	
6	LOOP	Loop on/off, hold button down to delete Loop	Re-loop

**NOTE:** You can also save a loop to the next available free loop slot in the software. To do this, click the  button on an available loop slot. Your loops are saved to the file and recalled the next time it is loaded. They are not lost if the file is moved or renamed.

## Cue Points

#	DENON DN-HC1000S	Function	Shift Function
1	CUE 1 - CUE 5	Place or trigger Cue Points 1-5	Clear Cue Points 1-5
2	Hold SAMP + SAMP.1 - SAMP.6	Activate SP-6 sample slots 1 - 6	


## Library


#	DENON DN-HC1000S	Function	Shift Function
1	BACK	Toggle between Crates and track library	
2	FILE SELECT	Scroll: Scroll through selected library / Push: Jump cursor to crate library	Push: Start and stop recording
3	FWD	Toggle between Crates and track library	Slot 3 Effect On/Off
4	A-LOAD	Load selected track to deck A	Instant Double deck A
5	B-LOAD	Load selected track to deck B	Instant Double deck B

## Areas

#	DENON DN-HC1000S	Function	Shift Function
1	FILES	Open the Import panel	Change MIDI ch. to No.1
2	BROWSE	Open the Browse panel	Change MIDI ch. to No.2
3	HISTORY	Open the History panel	Change MIDI ch. to No.3
4	PREPARE	Open the Prepare panel	Change MIDI ch. to No.4

## Using the Tool Tips

Click on the  icon to enable Tool Tips. This is located in between the MIDI and setup button in the top right hand corner of the screen. Tool Tips provide a handy way to learn the various features of Serato DJ.

Move the mouse over a section of the screen to bring up a context sensitive tool tip. Holding the mouse over the  button with Tool Tips turned on will show you a list of all keyboard shortcuts.

For more information about how to use Serato DJ, please go to our website [www.serato.com](http://www.serato.com) or refer to the Serato DJ Software Manual. For more information on your controller, please refer to the hardware manual.

For further help, please contact [support@serato.com](mailto:support@serato.com) or go to [www.serato.com/dj/support](http://www.serato.com/dj/support)