

KORG KAOSS DJ QUICK START GUIDE

serato



DJ INTRO

Installation and Setup

The Korg KAOSS DJ is a class compliant USB plug and play device for Mac, however requires drivers for Windows. You will find these on the installation cd provided with your Korg KAOSS DJ.

NOTE: Please ensure you have the latest available drivers AND firmware updates, which may be required in order to be compatible with Serato DJ Intro Intro. Please go to <http://serato.com/dj-intro/support>

1. Download and Install the latest version of Serato DJ Intro Intro from <http://serato.com/dj/downloads>
2. Connect your Korg KAOSS DJ to an available USB Port. Open Serato DJ Intro Intro.

Operating Modes

The Korg KAOSS DJ has 2 operating modes, Controller Mode and Audio Interface Mode (external audio interface mode). Change the operating mode by toggling the switch on the left side panel of the KAOSS DJ controller.

NOTE: You can not change the Operating mode during operation. Make sure the switch is set to the correct mode before connecting the USB.


To control Serato DJ Intro Intro, make sure the KAOSS DJ is set to Controller Mode.

serato



DJ INTRO

Controller

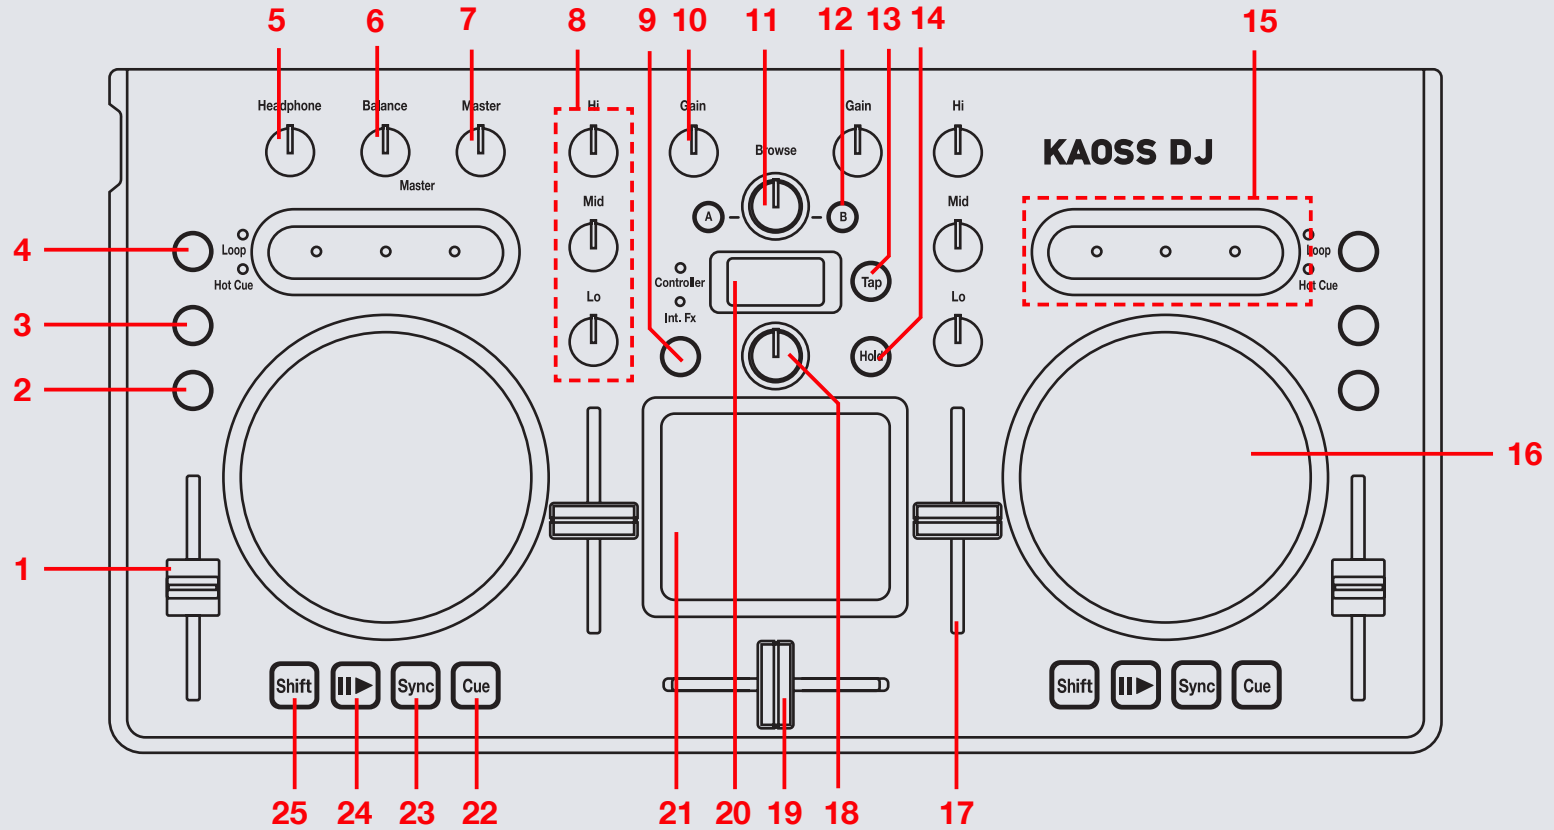





NOTE: SHIFT button is used with other buttons that have shift modifier functions.

#	KAOSS DJ Control	Serato DJ Intro Function	Shift Function
1	TEMPO SLIDER	Adjusts playing speed	
2	HEADPHONE CUE	Press to monitor respective deck through headphone cue	Select type of LED level meter
3	FX	Press to select which deck to control FX with the Touch Pad.	
4	TOUCH SLIDER MODE	SEE TOUCH SLIDER SECTION FOR MORE INFORMATION	
5	HEADPHONE GAIN	Adjust the audio level output from headphone terminal	
6	BALANCE	Adjust the balance of the master output	
7	MASTER	Adjust the gain level output from the master	
8	CHANNEL EQ	Adjust the EQ (Lo, Mid, Hi)	
9	TOUCH PAD MODE	SEE TOUCH PAD SECTION FOR MORE INFORMATION	
10	CHANNEL GAIN	Adjust the channel gain for each deck	
11	BROWSE	Library scroll	Back
12	LOAD A/B	Load highlighted track to respective deck	
13	TAP	N/A	Key mode (KAOSS FX)
14	HOLD	Hold the On state of the TOUCH PAD	Scale Mode (KAOSS FX)
15	TOUCH SLIDER	SEE TOUCH SLIDER SECTION FOR MORE INFORMATION	
16	TOUCH WHEEL	Playing speed can be adjusted by turning the outer part of jog wheel	Search mode
17	CHANNEL FADER	Adjust the output volume of respective deck	
18	PROGRAM / VALUE	Select the KAOSS FX effect	Select the KEY/SCALE (KAOSS FX)
19	CROSSFADER	Cross-fade audio output between decks	
20	DISPLAY	Display the FX number and other values	Display the KEY/SCALE number (KAOSS FX)
21	TOUCH PAD	SEE TOUCH PAD SECTION FOR MORE INFORMATION	Adjusts Dry/Wet of effect level
22	CUE	Play from or set temporary cue	Stutter play
23	SYNC	SYNC On	SYNC Off
24	PLAY/PAUSE	Play/Pause loaded track on respective deck	Turn keylock On/Off
25	SHIFT	Used in conjunction with other controls that have SHIFT modifier functions	

serato



DJ INTRO

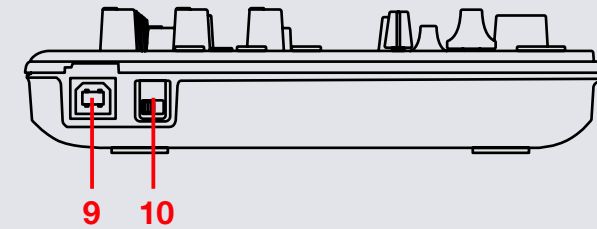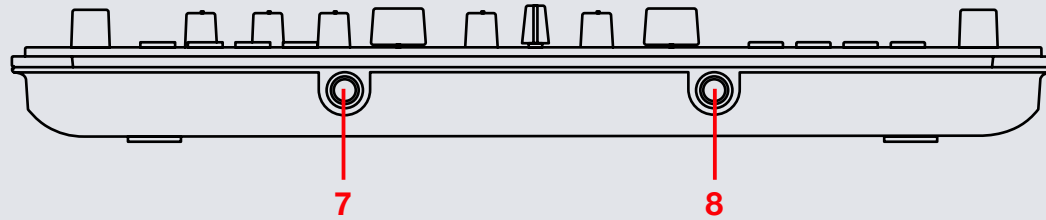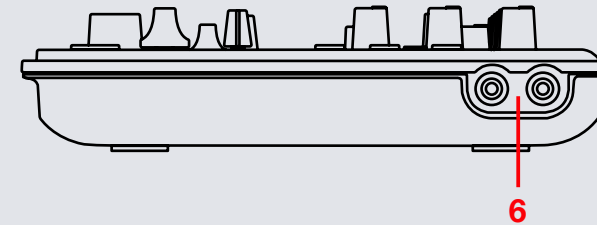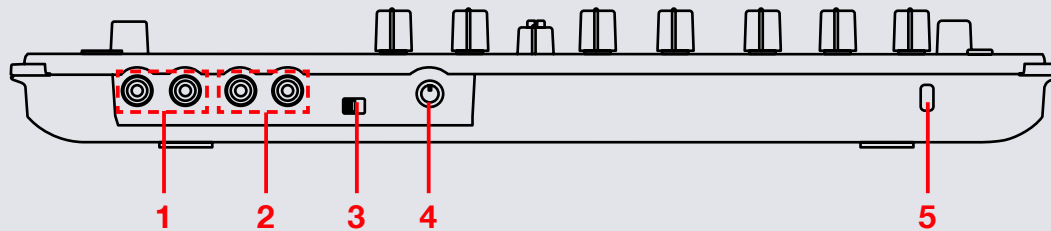

NOTE: SHIFT button is used with other buttons that have shift modifier functions.


#	KAOSS DJ Control	Serato DJ Intro Function
1	INPUT B	Connect RCA cables to input B
2	INPUT A	Connect RCA cables to input A
3	INPUT A SELECT	Change the input type for Input A
4	MIC GAIN	Adjust the Mic gain
5	KENSINGTON LOCK	Connect a Kensington lock to the controller
6	MASTER OUTPUT	Connect RCA cables from speakers to the KAOSS DJ
7	HEADPHONES IN	Headphone output jack
8	MIC IN	Microphone input jack
9	USB	Connect the KAOSS DJ to your computer with a USB cable
10	STANDALONE SWITCH	Change USB type from Controller to Standalone

serato



DJ INTRO


TOUCH SLIDER

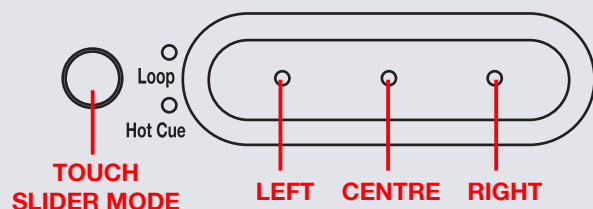

The KAOSS DJ **TOUCH SLIDER** has three button controls (Left, Center, Right) and can be set to three different function modes, **Normal mode**, **Loop mode** and **Hot Cue mode**. Toggle through these modes by pressing the **TOUCH SLIDER MODE** button.

- **Normal Mode (Hot Cue LED:Off, Loop LED:Off):**
When in **Normal mode** the **TOUCH SLIDER** acts like a tempo nudge/pitch bend and allows you to temporarily adjust the tempo of your playing track. Press the **Left** button to nudge the track down (slower) and press the **Right** button to nudge the track up (faster). You can press the **Center** button to toggle jog/scratch mode for the **TOUCH WHEEL**.
- **Loop Mode (Loop LED:ON):**
In **Loop Mode** press the **Center** button to turn on an Auto Loop and use the **Left** and **Right** buttons to half/double the size of the Auto Loop. When holding **SHIFT**, pressing the **Left** and **Right** buttons will allow you to manually adjust the loop **In** and **Out** points using the **TOUCH WHEEL**. Holding **SHIFT** and pressing the **Center** button will **Reloop/Exit** the loop.
- **Hot Cue Mode (Hot Cue LED:ON):**
While in **Hot Cue Mode**, pressing the three **TOUCH SLIDER** buttons will set/play three Hot Cues. To delete a Hot Cue, hold **SHIFT** and press the respective Hot Cue button on the **TOUCH SLIDER**.

TOUCH PAD

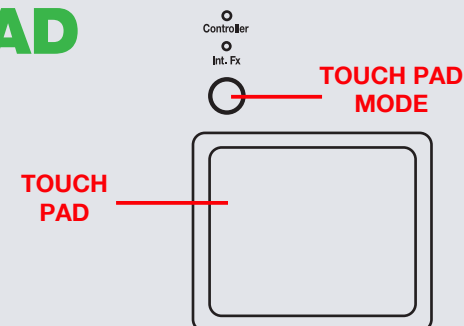

The KAOSS DJ **TOUCH PAD** has three different modes, **Controller Mode**, **Sampler Mode** and **KAOSS FX Mode**. Toggle through these modes by pressing the **TOUCH PAD MODE** button. Control the effect by rubbing or tapping your finger on the touch pad. Each axis (X,Y) will provide realtime control of a different effect parameter.

- **Controller Mode (Controller LED:Red):**
Touching the **TOUCH PAD** will adjust the effect in Serato DJ Intro. Moving your finger over the X/Y axis of the **TOUCH PAD** will adjust the Wet/Dry parameter of the set effect. Press **FX** on the KAOSS DJ to select which deck to control effects with the Touch Pad.
- **Sampler Mode (Controller LED:Blue):**
Press and hold the **TOUCH PAD MODE** button to enable Sampler Mode. Once in Sampler mode, pressing the **TOUCH PAD** in each of its four corners will start and stop playback of the first 4 samples loaded into the Sample Player. If no samples are loaded, pressing the four corners will load the highlighted track to the respective slot.
- **KAOSS FX Mode (KAOSS FX LED:Red):**
Use this mode to control the KAOSS FX parameter. Using KAOSS FX mode will not control DJ FX from Serato DJ Intro, but will use the in-built effects unit of the Korg KAOSS DJ routed through the controller. Use the **PROGRAM/VALUE** knob to change selected KAOSS effect.

Looping

You have the choice of Auto or Manual Looping within Serato DJ Intro with the Korg KAOS DJ. Looping is controlled by the **TOUCH SLIDER** buttons for each deck. Manual Looping is controlled by holding **SHIFT** and pressing a loop button control.

TOUCH SLIDER in Loop Mode	LEFT	CENTRE	RIGHT
Press	Half loop length (1/2x)	Autoloop On/Off	Double loop length (2x)
Press w/ SHIFT held	Adjust manual Loop In point	Re-loop/Exit loop	Adjust manual Loop Out point


NOTE: The easiest way to edit the in and out points of a manual loop is with the jog wheel/platter on your KAOS DJ.


DJ-FX

To activate an effect, click the **ON** button on your FX UNIT in the software, or use the **TOUCH PAD** on your controller. Touching the **TOUCH PAD** in Controller Mode will allow you to control the FX of Serato DJ Intro. Moving your finger over the X/Y axis of the **TOUCH PAD** will adjust the Wet/Dry parameter of the set effect. Press **FX** on the KAOS DJ to select which deck to control effects with the Touch Pad.

SEE TOUCH PAD SECTION FOR MORE INFORMATION.

Using the Tool Tips

Click on the  icon to enable Tool Tips. This is located in between the MIDI and setup button in the top right hand corner of the screen. Tool Tips provide a handy way to learn the various features of Serato DJ Intro.

Move the mouse over a section of the screen to bring up a context sensitive tool tip. Holding the mouse over the  button with Tool Tips turned on will show you a list of all keyboard shortcuts.

For more information about how to use Serato DJ Intro, please go to our website www.serato.com or refer to the Serato DJ Intro Software Manual. For more information on your controller, please refer to the hardware manual.

For further help, please contact support@serato.com or go to www.serato.com/dj-intro/support

serato



DJ INTRO