

**QUICK-START  
GUIDE  
NUMARK  
MIXTRACK PRO  
MKII**

**serato**



**DJ**

# Installation and Setup


The Numark Mixtrack Pro MKII is a class compliant USB plug and play device and requires no further driver installation.

**NOTE:** Please ensure you have the latest available drivers AND firmware updates, which may be required in order to be compatible with Serato DJ. Please go to <http://serato.com/dj/support>

1. Download and install the latest version of Serato DJ from <http://serato.com/dj/downloads>
2. After installing drivers, connect your Mixtrack Pro MKII to an available USB Port.
3. Open Serato DJ.
4. The Mixtrack Pro MKII platters require a few touches by the user in order to calibrate to their environment. After power up and start of Serato DJ, tap the platters a few times to set their sensitivity.


## Serato DJ Activation

To find out how to activate Serato DJ by either starting your free 14 day trial, or purchasing a license for Serato DJ, [click here](#) for the most up to date information.

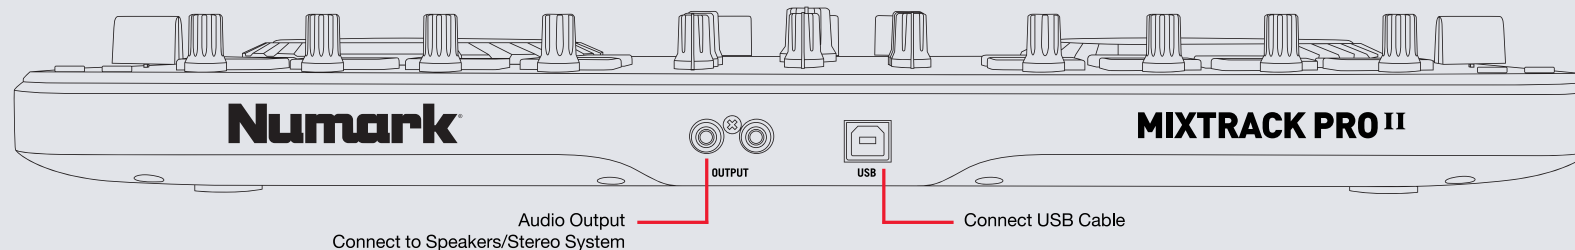

serato



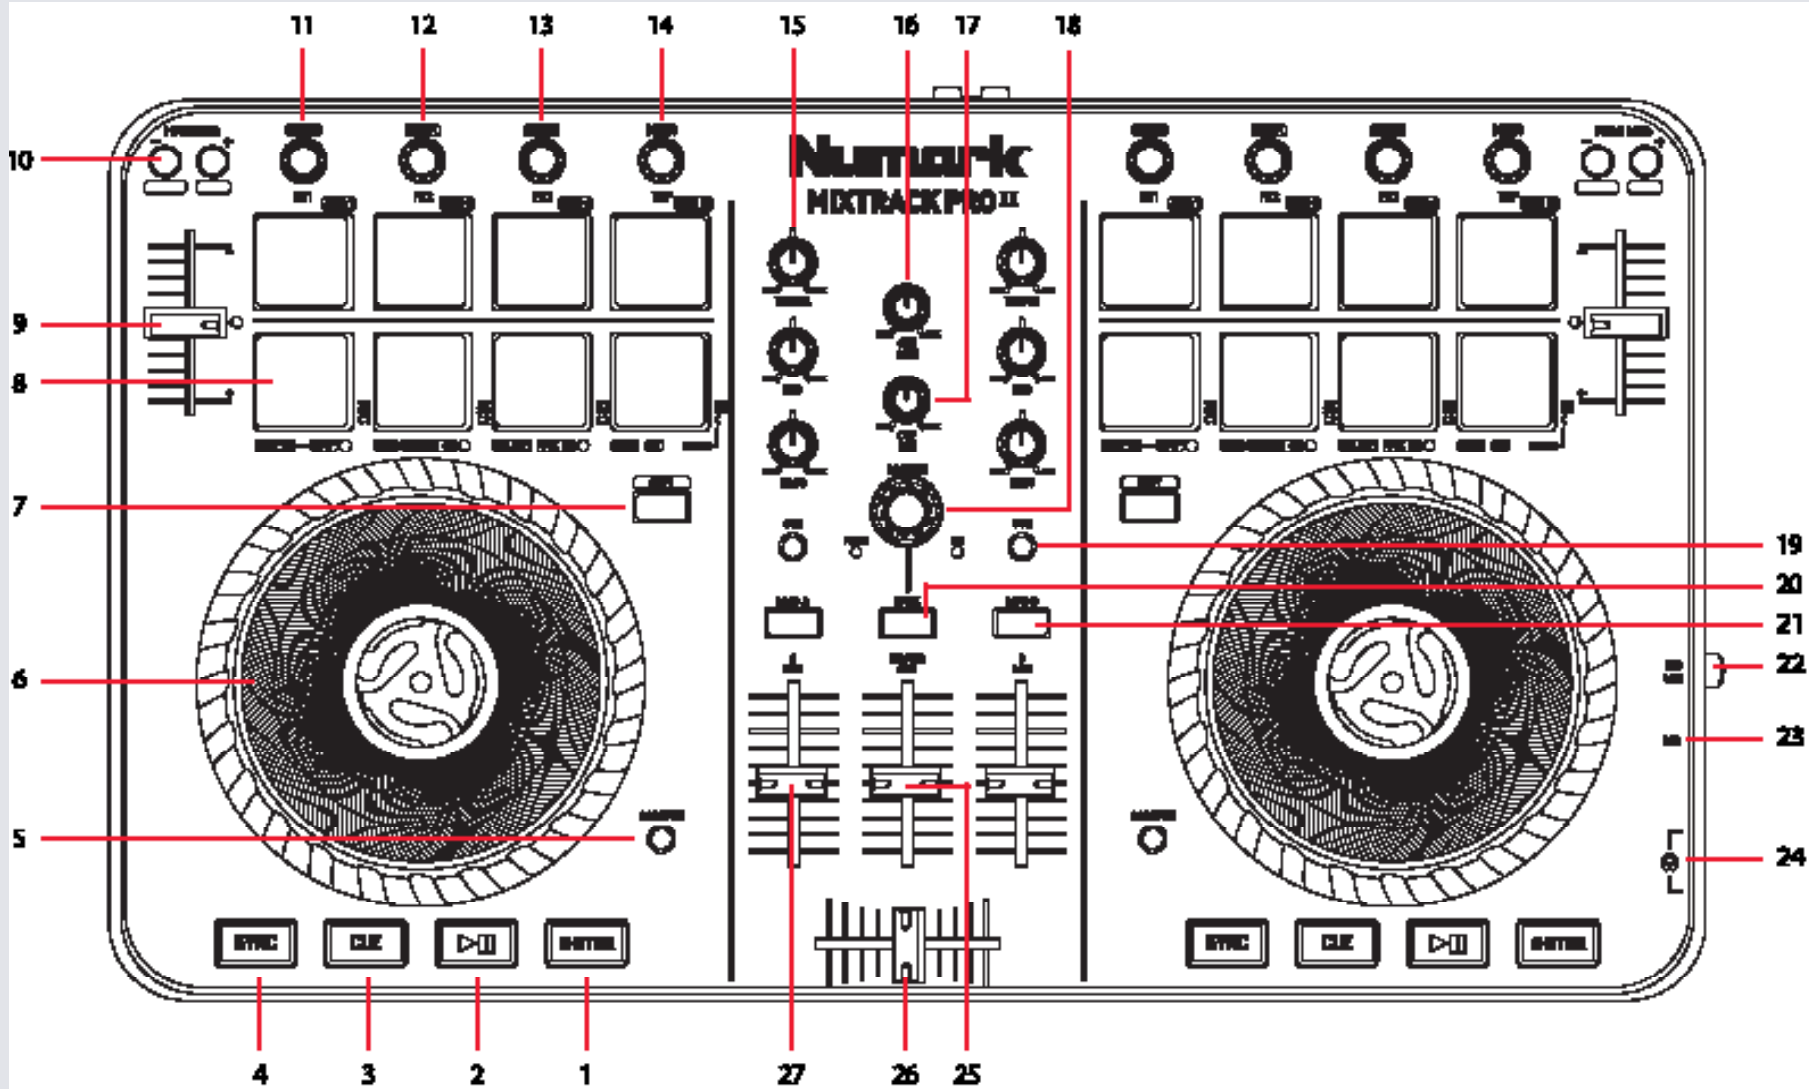

**NOTE:** SHIFT button is used with other buttons that have shift modifier functions.

#	Mixtrack Pro MK II Control	Serato DJ Function	Shift Function
1	STUTTER	Stutter Play	
2	PLAY/PAUSE	Play/Pause	
3	CUE	Add/Trigger Temp Cue	Previous track
4	SYNC	Sync On	Sync Off (Press twice to return to Absolute Pitch when in Relative Mode)
5	SCRATCH	Toggle between Scratch or Jog	
6	PLATTER	Touch the top to scratch or jog. Moving the outside of the wheel will jog.	Beat Skip
7	SHIFT	SHIFT button is used with other buttons that have shift modifier functions.	
8	PERFORMANCE PADS	See Performance pads section for more information	See Performance pads section for more information
9	TEMPO FADER	Adjust Tempo	
10	PITCH BEND-/+	Use to nudge the pitch up or down. This will slightly speed or slow down your track temporarily.	SHIFT + KEYLOCK ( PITCH BEND - ), SHIFT + (PITCH RANGE + )
11	SELECT 1	Adjust Slot 1 FX Parameter	Select Effect in Slot 1
12	SELECT 2	Adjust Slot 2 FX Parameter	Select Effect in Slot 2
13	SELECT 3	Adjust Slot 3 FX Parameter	Select Effect in Slot 3
14	BEATS	Adjust Beats Multiplier	
15	CHANNEL EQ'S	Bass, Mid, Treble channel equalizers	
16	CUE GAIN	Adjust Headphone Output	
17	CUE MIX	Mixes between the headphone cue and master output	
18	BROWSE	Scroll through library/crates. When a crate is selected, click knob to open crate	Click to Cycle through Files/Browse/Prepare/History Panels
19	CUE	Cue selected channel	

#	Mixtrack Pro MKII Control	Serato DJ Function	Shift Function
20	BACK	Toggles focus between library/crates/open panels	
21	LOAD A/B	Load selected track to deck A/B.	
22	MIC GAIN	Mic volume level	
23	MIC INPUT	Mic input	
24	HEADPHONE INPUT	Headphones input	
25	MASTER GAIN	Master output level	
26	CROSS FADER	Faders between Channel A/B	
27	CHANNEL GAIN A/B	Channel faders for A/B	

## Performance Pads



 
The performance pads have three different modes you can select. The three modes are; LOOP, SAMPLE (S), CUE (C).

**NOTE** To enter a performance mode, press SHIFT + LOOP, SAMPLE or CUE pads. The LED will light up below the pad to indicate this mode is active.

- **Loop mode:** The LOOP IN and OUT pads place the IN and OUT points of a manual loop. RELOOP will turn loop ON/OFF. You can set Auto Loops by Holding SHIFT + AUTO1, AUTO2, AUTO4, AUTO16.
- **Sampler Mode:** S1, S2, S3 and S4 trigger samples loaded in your Sample Player.
- **Hot Cue Mode:** C1, C2, C3 and C4 will add or trigger Cue Points. To remove Cue Points, hold SHIFT and press C1, C2, C3 and C4.

# Looping

You have the choice of Auto or Manual Looping within Serato DJ with the Numark Mixtrack Pro MKII.

**NOTE** You can also save a loop to the next available free loop slot in the software. To do this, click  on an available loop slot. Your loops are saved to the file and recalled the next time it is loaded. They are not lost if the file is moved or renamed.



## Manual Mode

Mixtrack Pro MKII Control	Manual Loop Mode
Loop IN	Set loop in point (Loop not active)
Loop IN	Adjust loop in point (Loop active)
Loop OUT	Set loop out point (If loop in point is set)
Loop OUT	Adjust loop out point (Loop active)
Reloop	Exit Loop (Loop Active)
Reloop	Reloop (Loop not active)


**NOTE** The best way to edit the in and out points of a loop is with the jog wheel/platter on your Mixtrack Pro MKII.

## Auto Mode



Mixtrack Pro MKII Control	Auto Loop Mode
SHIFT + AUTO 1	Auto Loop 1 Bar ON/OFF
SHIFT + AUTO 2	Auto Loop 2 Bar ON/OFF
SHIFT + AUTO 3	Auto Loop 3 Bar ON/OFF
SHIFT + AUTO 4	Auto Loop 4 Bar ON/OFF

**NOTE** You can also save a loop to the next available free loop slot in the software. To do this, either click the  button in the manual/auto loop tab or click  on an available loop slot. Your loops are saved to the file and recalled the next time it is loaded. They are not lost if the file is moved or renamed.

# DJ-FX

The DJ-FX in Serato DJ are powered by iZotope™. Click the FX tab  to open the FX panel. Select either 1, 2 or M to assign the selected effect bank to a deck or Master Output. To activate an effect, click the ON button on your FX UNIT in the software, or the FX1 button on your controller. You can adjust effect parameters by using either software controls, or the SELECT/BEATS on the controller.

There are two available modes in the DJ-FX. Single FX Mode allows you to select one effect per FX bank, and has multiple parameters that can be adjusted. Multi FX Mode allows you to select up to three effects per FX bank, and adjust only one parameter, the FX Depth. The same effects available in Single FX mode are available in Multi FX mode, as well some additional presets.

You can select between the two FX modes by clicking either the Single FX mode button  or Multi FX mode button .

Mixtrack Pro MKII Control	Single FX Mode	Multi FX Mode	Shift
AUTO 1 (Button)	Effect On/Off	Slot 1 Effect On/Off	
AUTO 2 (Button)	Adjust FX Parameter 2	Slot 2 Effect On/Off	
AUTO 3 (Button)	Adjust FX Parameter 4	Slot 3 Effect On/Off	
BEATS	Adjust Beats Multiplier	Adjust Beats Multiplier	
SELECT 1 (Knob)	Adjust FX Parameter 1	Adjust Slot 1 FX Parameter	Select Effect in Slot 1

SELECT 2 (Knob)	Adjust FX Parameter 3	Adjust Slot 2 FX Parameter	Select Effect in Slot 2 (Multi FX)
SELECT 3 (Knob)	Adjust FX Parameter 5	Adjust Slot 3 FX Parameter	Select Effect in Slot 3 (Multi FX)
TAP (Button)	Tap to the desired FX tempo. To return to AUTO mode, press and hold	Tap to the desired FX tempo. To return to AUTO mode, press and hold	

The effect time is set using the tracks BPM value, but by applying the Beats Multiplier you can increase or decrease the effect timing. Modify this by using the SELECT knob on the controller. Automatic tempo requires that the track on the deck assigned to the FX Unit has BPM information. Manual tempo mode allows you to tap in the tempo yourself.



## MIDI

The MIDI feature in Serato DJ provides the ability to remap Serato DJ software functions to your primary Serato DJ controller, interface or mixer. You can also assign controls to a secondary MIDI controller to further enhance your performance.

[For more information on MIDI mapping with Serato DJ click here.](#)

To remap your supported Serato DJ device, open the **SETUP** screen and click the **MIDI** tab. If your Serato DJ device supports hardware remapping it will show up in the **MIDI Devices** list at the top.

Select your connected device from the MIDI Devices list and make sure the “Allow Serato Hardware Remapping” option is checked.

Allow Serato Hardware Remapping

Once checked, the MIDI assign button at the top of the screen will become available for you to start remapping.


MIDI


You can save, edit or delete MIDI presets in the **MIDI** tab of the **SETUP** screen. Clicking ‘**Restore Defaults**’ will erase any custom mappings for all connected devices and revert their functions back to default.

[Download the Serato DJ software manual for further information.](#)

**NOTE:** Official Serato Accessories do not currently support user remapping. Hardware features that cannot be remapped at this stage are Jogwheels/ Platters, Input Switches, Shift buttons and Performance Pad Mode buttons. Re-mapping any pad(s) in Hot Cue mode will also re-map the same pad in Saved Flip mode and vice versa.

## Using the Tool Tips

Click on the  icon to enable Tool Tips. This is located in between the MIDI and setup button in the top right hand corner of the screen. Tool Tips provide a handy way to learn the various features of Serato DJ.

Move the mouse over a section of the screen to bring up a context sensitive tool tip. Holding the mouse over the  button with Tool Tips turned on will show you a list of all keyboard shortcuts.

For more information about how to use Serato DJ, please go to our website [www.serato.com](http://www.serato.com) or refer to the Serato DJ Software Manual. For more information on your controller, please refer to the hardware manual.

For further help, please contact [support@serato.com](mailto:support@serato.com) or go to [www.serato.com/dj/support](http://www.serato.com/dj/support)

serato

