



Numark Party Mix Quick-Start Guide

Setup

Serato Software

The Numark Party Mix is a “Serato DJ Lite hardware unlocked” device, meaning it works with Serato DJ Lite out of the box.

It is also a “paid upgrade to Serato DJ Pro device”, meaning it requires the purchase & activation of a Serato DJ Pro license, in order to be used with Serato DJ Pro.

You can also trial Serato DJ Pro, for up to 14-days.

[Click here to find out more about buying or activating Serato DJ Pro](#)

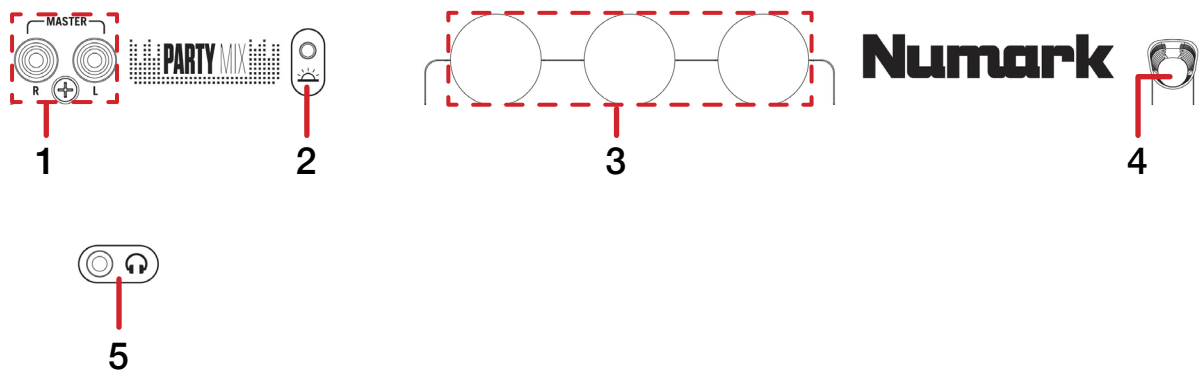 
Please ensure you have the latest version of Serato DJ Lite installed:

[Click here to download Serato DJ Lite](#)

Driver Software

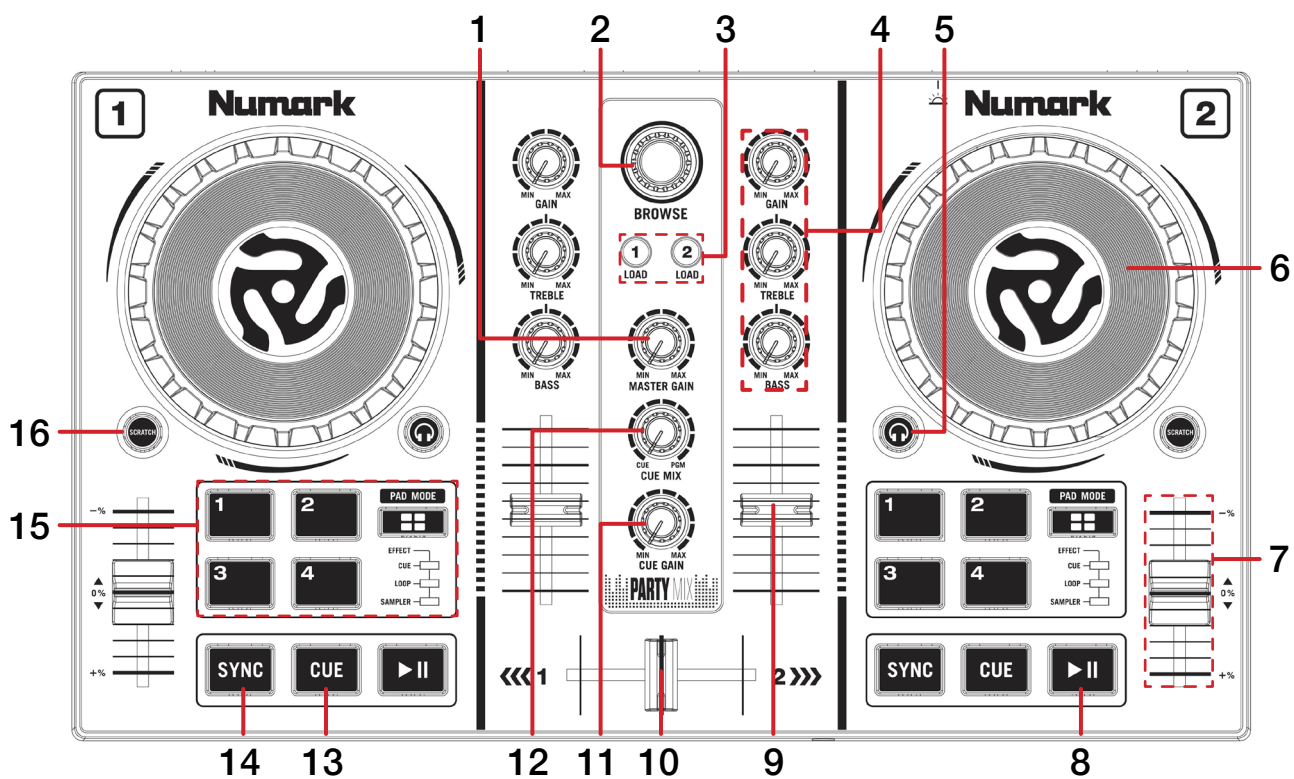 
The Numark Party Mix does not require manufacturer specific drivers on either Mac & Windows operating systems. Simply connect the device to your PC, and launch the latest version of Serato DJ Lite.

Overview



#	NUMARK PARTY MIX CONTROL	FUNCTION
1	MASTER	Connect RCA output
2	PARTY BALL MODE	Press to cycle through Party Ball modes, mode 1 & 2 work with Serato DJ Lite SEE LIGHTS FOR MORE INFORMATION
3	PARTY BALL LIGHTS	Reactive lights
4	USB	Connect USB data cable to PC
5	HEADPHONE	Output to headphones (3.5mm or 1/8")

Overview

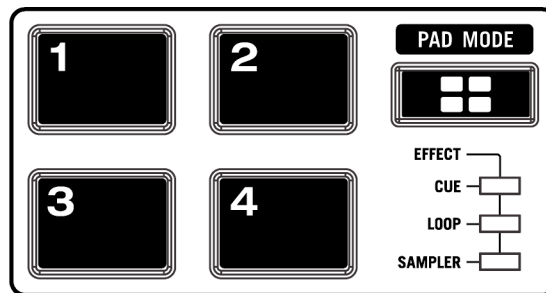 


#	NUMARK PARTY MIX CONTROL	FUNCTION
1	MASTER GAIN	Adjust Master output level
2	BROWSE	Library Scroll. Press to toggle between track and crate selection
3	LOAD 1 / 2	Load highlighted track to respective deck. Double press to Instant Double
4	EQ/GAIN	Adjust channel EQ (treble & bass) and channel gain (level)
5	CHANNEL CUE	Press to cue channel for monitoring in headphones
6	JOG WHEEL	Control waveform within Serato DJ in vinyl mode, or pitch bend
7	TEMPO SLIDER	Adjust tempo/pitch
8	PLAY/PAUSE	Toggles Play/Pause on selected deck
9	CHANNEL FADER	Adjust channel volume
10	CROSSFADER	Crossfade audio between channel 1-2
11	CUE GAIN	Adjust cue gain
12	CUE MIX	Adjust headphone mix between CUE and PGM (Master)
13	CUE	Cues from temp cue point/Set temp cue point
14	SYNC	Turn SYNC on
15	PERFORMANCE PADS	SEE PERFORMANCE PADS FOR MORE INFORMATION
16	SCRATCH	Press to toggle between scratch vinyl mode and pitch bend

Performance Pads

The Numark Party Mix comes with 4 performance pads, that can be used across 4 different performance pad modes.

Repeatedly pressing the PAD MODE button will cycle through the available pad modes, lighting up that pad modes respective LED to indicate a selection. The last pad mode, PAD FX, will illuminate all 3 LED's to indicate it has been selected.



These consist of:


CUE mode: Pads 1-4 trigger Serato DJ Lite Cue points, and if no Cue point is present on that slot/pad, pressing that pad will set a Cue point.

LOOP mode: Pads 1-4 trigger triggers an autoloop of variable sizes. Use the loop selection area in the Serato DJ Lite user interface, to influence the 4 available autoloop sizes.

SAMPLER mode: Press pads 1-4 to trigger samples loaded into the Serato DJ Lite Sampler.

PAD FX mode: Press pads 1-4 to trigger FX via multi & single FX modes.


DJ-FX

The DJ-FX in Serato DJ Lite are powered by iZotope™. Click the FX button  to open the FX panel.

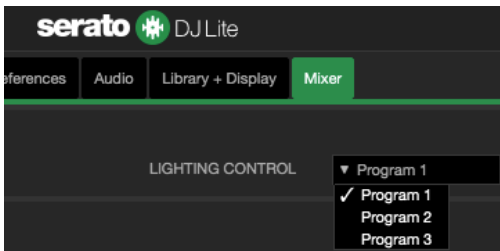 
Serato DJ Lite's Multi FX Mode allows you to select up to three effects per FX bank, and adjust one parameter, the FX Depth.

PARTY MIX Control	Multi FX mode
PAD 1	Hold & release for Slot 1 Effect On/Off
PAD 2	Hold & release for Slot 2 Effect On/Off
PAD 3	Hold & release for Slot 3 Effect On/Off
PAD 4	Cycle Beats multiplier

Lights

The Numark Party Mix comes equipped with Party Ball lights that are reactive to Serato software. Press the  button on the rear of the unit, to cycle through the Party Ball modes. Mode 1 (default) and mode 2 are compatible with Serato software.

Mode 1: Lights respond to RGB setting from Serato software, and 3 further Programs can be selected via Setup --> Mixer --> Lighting Control (see image below)



Program 1 turns the RGB lights on and off in a sequential order, based on the beat played.

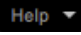 
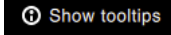 
Program 2 flashes the RGB lights rapidly in a sequential order, based on the beat played.

Program 3 illuminates all 3 RGB lights at the same time, but their intensity is determined by the Master output level.

Mode 2: Lights randomly illuminate in response to beat information from Serato software.

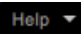 
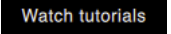 
Help

Show Tooltips

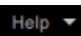 
Click on the  button in the upper right-hand corner of Serato DJ Lite, then  to enable tooltips. Tool tips provide a handy way to learn the various features of Serato DJ Lite.

Move the mouse over a section of the screen to bring up a context sensitive tool tip.

Watch Tutorials

Click on the  button in the upper right-hand corner of Serato DJ Lite, then  to launch your default internet browser and watch tutorials, to help you get familiar with Serato DJ Lite.

Get Support

Click on the  button in the upper right-hand corner of Serato DJ Lite, then  to launch your default internet browser and navigate to the Serato DJ Lite knowledge base, where you can find helpful articles and guides on Serato DJ Lite. Alternatively, type in the  box, with keywords, to search the Serato DJ Lite knowledge base for specific, related topics.