



Numark DJ2GO2 Touch Quick-Start Guide

Setup

Serato Software

The Numark DJ2GO2 Touch is a “Serato DJ Lite hardware unlocked” device, meaning it works with Serato DJ Lite out of the box.

It is also a “paid upgrade to Serato DJ Pro device”, meaning it requires the purchase & activation of a Serato DJ Pro license, in order to be used with Serato DJ Pro.

You can also trial Serato DJ Pro, for up to 14-days.

[Click here to find out more about buying or activating Serato DJ Pro](#)

Please ensure you have the latest version of Serato DJ Lite installed:

[Click here to download Serato DJ Lite](#)

Driver Software

The Numark DJ2GO2 Touch does not require manufacturer specific drivers on either Mac & Windows operating systems. Simply connect the device to your PC, and launch the latest version of Serato DJ Lite.

Help

Show Tooltips

Click on the **Help** button in the upper right-hand corner of Serato DJ Lite, then **Show tooltips** to enable tooltips. Tool tips provide a handy way to learn the various features of Serato DJ Lite.

Move the mouse over a section of the screen to bring up a context sensitive tool tip.


Watch Tutorials

Click on the **Help** button in the upper right-hand corner of Serato DJ Lite, then **Watch tutorials** to launch your default internet browser and watch tutorials, to help you get familiar with Serato DJ Lite.

Get Support

Click on the **Help** button in the upper right-hand corner of Serato DJ Lite, then **Get support** to launch your default internet browser and navigate to the Serato DJ Lite knowledge base, where you can find helpful articles and guides on Serato DJ Lite. Alternatively, type in the **Go** box, with keywords, to search the Serato DJ Lite knowledge base for specific, related topics.


Overview

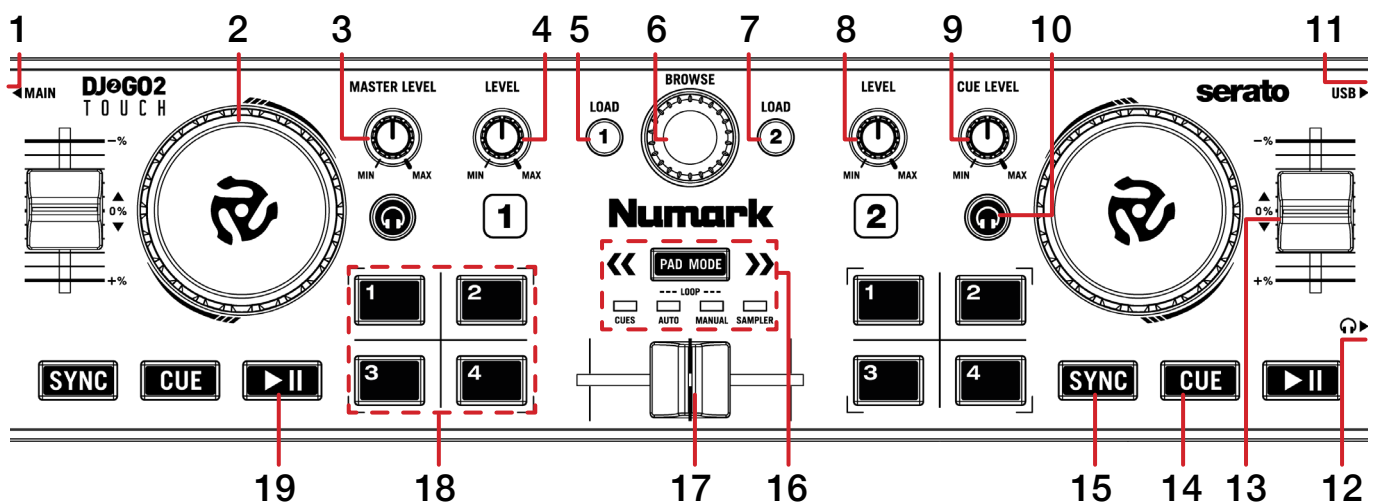

#	DJ2GO2 TOUCH CONTROL	FUNCTION
1	MASTER	Connect master output via 3.5mm audio output
2	JOG WHEEL	Control waveform within Serato DJ Lite
3	MASTER LEVEL	Adjust Master output level
4	LEVEL	Adjust channel volume for channel 1
5	LOAD 1	Load selected track to deck 1
6	BROWSE	Library scroll. Press in to cycle between Crates & Library area. Double-press to Instant Double selected track
7	LOAD 2	Load selected track to deck 2
8	LEVEL	Adjust channel volume for channel 2
9	CUE LEVEL	Adjust headphone cue volume
10	CHANNEL CUE	Press to monitor channel via headphones (per deck)
11	USB	Connect USB to PC
12	HEADPHONE OUTPUT	Connect headphones via 3.5mm audio output
13	TEMPO SLIDER	Adjust tempo/pitch
14	CUE	Cues from temp cue point/Set temp cue point
15	SYNC	Toggle Sync on/off
16	PERFORMANCE MODE	Press to toggle between Performance Pad modes
17	CROSSFADER	Crossfade audio between channel 1-2
18	PERFORMANCE PADS	SEE PERFORMANCE PADS FOR MORE INFORMATION
19	PLAY/PAUSE	Toggle Play/Pause on selected channels

Performance Pads

The Numark DJGo2Touch comes with 4 performance pads, that can be used across 4 different performance pad modes. These consist of:

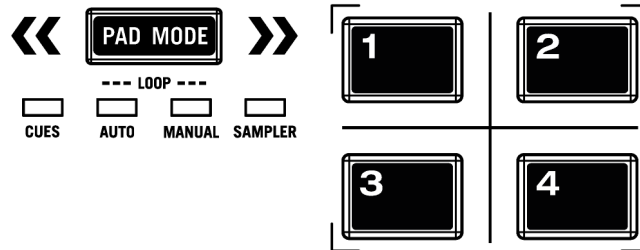

HOT CUE mode: Pads 1-4 trigger Serato DJ Lite Cue points, and if no Cue point is present on that slot/pad, pressing that pad will set a Cue point. Holding down the **PAD MODE** button while pressing a pad will delete the Cue point from the respective pad/slot.

LOOP mode: Pads 1-4 trigger triggers an autoloop of variable sizes. Use the loop selection area in the Serato DJ Lite user interface, to influence the 4 available autoloop sizes.

MANUAL LOOP mode: Pressing pad 1 will start and set a Loop In point, while pressing pad 2 will set the Loop Out point, and pads 3 & 4 will turn the Loop On/Off, or retrigger the Loop.

SAMPLER mode: Press pads 1-4 in this mode to trigger samples loaded into the Serato DJ Lite Sampler.