



ReLoop Ready Quick-Start Guide

Setup

Serato Software

The Reloop Ready is a “Serato DJ Lite hardware unlocked” device, so it works with Serato DJ Lite out of the box. It is a “paid upgrade to Serato DJ Pro device”, meaning it requires the purchase & activation of a Serato DJ Pro license, in order to be used with Serato DJ Pro.

You can trial Serato DJ Pro, for up to 14-days.

[Click here to find out more about buying or activating Serato DJ Pro](#)


Please ensure you have the latest version of Serato DJ Pro installed:

[Click here to download Serato DJ Pro](#)

Driver Software


The Reloop Ready does not require manufacturer specific drivers on Mac computers. Windows computers require a device driver to be installed. This can be downloaded from Reloop’s website [here](#).

Overview

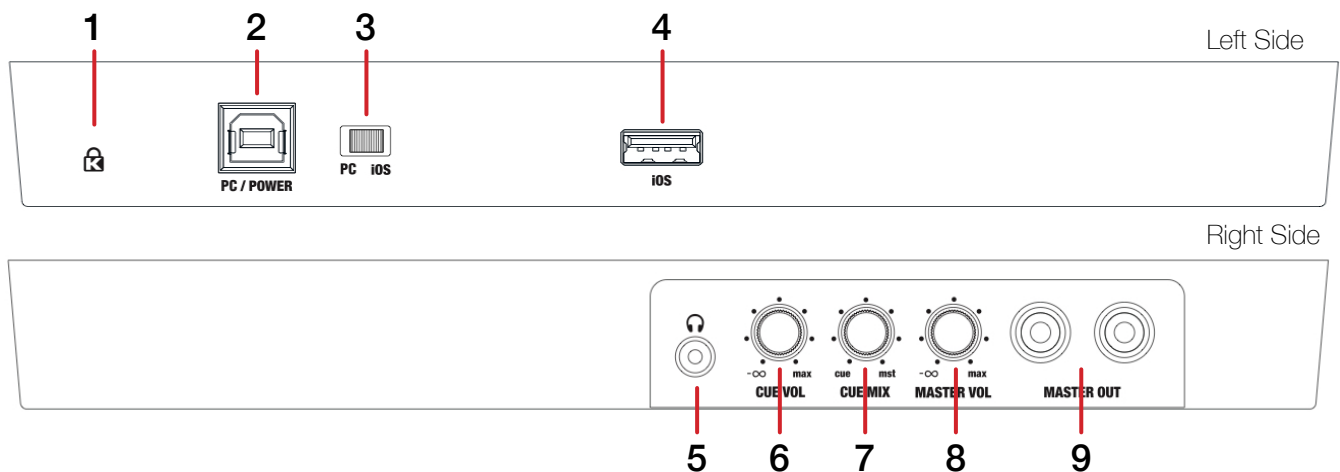

#	Reloop Ready CONTROL	FUNCTION
1	KENSINGTON LOCK	Connect your 1/4" headphones to this output for cueing
2	PC USB	Connect USB cable to this port from computer
3	PC/IOS SWITCH	Switch between PC (Serato) and IOS device
4	IOS USB	Used for IOS connection
5	1/8" HEADPHONE JACK	Connect your 1/8" headphones to this output for cueing
6	CUE VOL	Adjust the volume of the headphones
7	CUE MIX	Adjust the level of cue and master heard in the headphones
8	MASTER VOL	Adjust the master output volume
9	MASTER OUTPUT	Use RCA cables to connect this output to a speaker or powered monitors

Overview

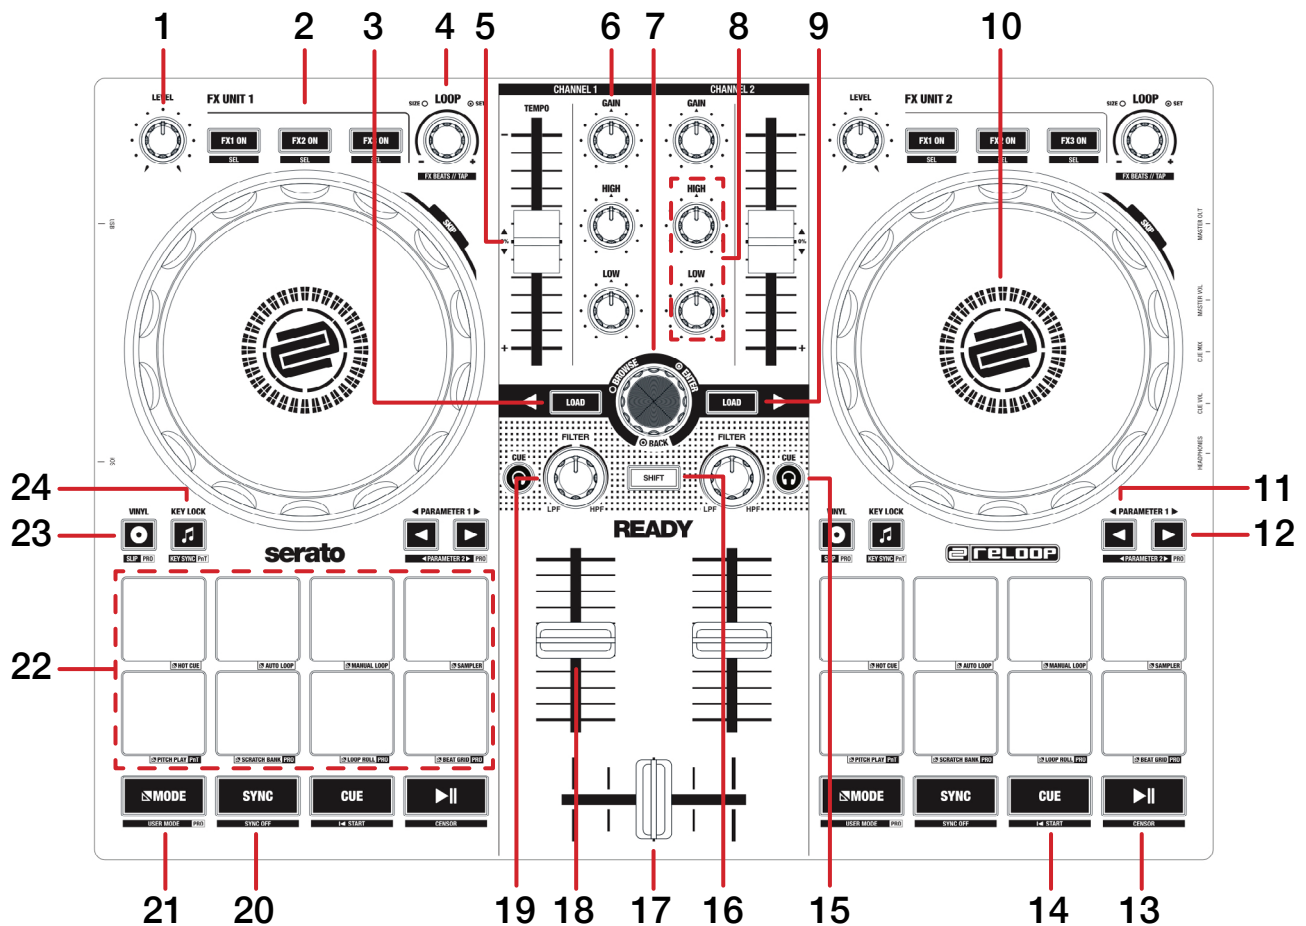


#	Ready CONTROL	FUNCTION	Shift
1	FX LEVEL	Adjust FX depth parameter for FX 1, 2 & 3	-
2	FX UNIT	Enable FX 1, 2 & 3	FX select
3	LOAD CHANNEL 1	Load currently highlighted track to deck 1	-
4	LOOP	Scroll to choose size of loop, press to activate loop	FX beat select/Tap
5	TEMPO SLIDER	Adjust playback tempo of current loaded track	Ignore tempo slider
6	CHANNEL GAIN	Adjust channel gain	-
7	BROWSE	Scroll library or crate list/Library back	Fast scroll
8	CHANNEL EQ	Adjust channel EQ	-
9	LOAD CHANNEL 2	Load currently highlighted track to deck 2	-
10	JOG WHEEL	Control the waveform within Serato DJ Pro	Platter skip
11	PARAMETER LEFT	Adjust the pad mode parameters	Parameter 2 Left
12	PARAMETER RIGHT	Adjust the pad mode parameters	Parameter 2 Right
13	PLAY	Play or pause the currently loaded track	Censor
14	CUE	Set/play from a temporary cue point	Jump to start
15	HEADPHONE CUE	Enable to monitor the channel through the headphones	Adjust Tempo Range

Overview

#	Ready CONTROL	FUNCTION	SHIFT
16	SHIFT	Used with other controls that have shift modifier functions	-
17	CROSSFADER	Fade audio between the channels	-
18	CHANNEL FADER	Adjust channel volume	Fader Start
19	CHANNEL FILTER	High and Low pass channel filter	-
20	SYNC	Turn Sync on for the respective deck	Turn off Sync
21	MODE	Hold and press in combination with a pad to select a pad mode	User Mode
22	PERFORMANCE PADS	SEE PERFORMANCE PAD SECTION BELOW FOR MORE INFORMATION	-
23	VINYL	Turn vinyl mode on/off for the respective plater	Turn Slip on/off
24	KEYLOCK	Enable and disable Key Lock for deck	Key Sync (Requires Pitch N Time)

Performance Pads

The Reelock Ready comes with 8 performance pads, that can be used across 9 different performance pad modes in Serato DJ Pro. These consist of:

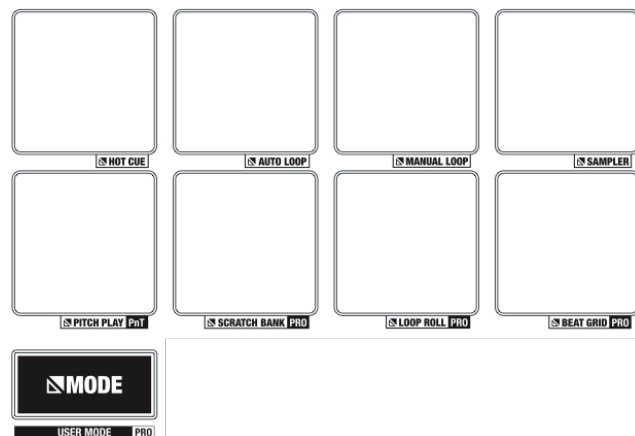


HOT CUE mode: Hold the **MODE** button and press **PAD 1** to select HOT CUE mode. In this mode pads 1-8 trigger Serato DJ Pro Cue points, and if no Cue point is present on that slot/pad, pressing that pad will set a Cue point. Holding down the **SHIFT** button while pressing a pad will delete the Cue point from the respective pad/slot.

AUTO LOOP mode: Hold the **MODE** button and press **PAD 2** to select AUTO LOOP mode. Pads 1-8 trigger an autoloop of variable sizes. Use the loop selection area in the Serato DJ Pro user interface, to influence the 8 available autoloop sizes. This can be adjusted with the **PARAMETER** buttons.

MANUAL LOOP mode: Hold the **MODE** button and press **PAD 3** to select MANUAL LOOP mode. In this mode, **PAD 1** sets the in point and **PAD 2** sets the out point. **PAD 3** will Enable/Disable the loop and **PAD 4** will trigger Reelock.

SAMPLER mode: Hold the **MODE** button and press **PAD 4** to select SAMPLER mode. Press pads 1-8 in this mode to trigger samples loaded into the Serato DJ Pro Sampler. Use the **PARAMETER** buttons to move through banks A to D.

Performance Pads

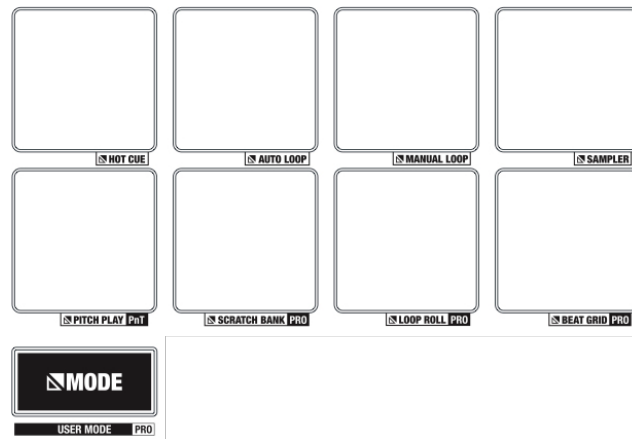

PITCH PLAY mode: Hold the **MODE** button and press **PAD 5** to select PITCH PLAY mode. This requires the Serato Pitch 'n Time DJ expansion pack activated, see the [PITCH PLAY section](#) for more Information.

SCRATCH BANK mode: Hold the **MODE** button and press **PAD 6** to select SCRATCH BANK mode. Scratch Bank Mode allows you to assign files in your Serato DJ Pro library to a pad. When a pad is triggered, the file corresponding file will be loaded to deck. See the [SCRATCH BANK section](#) for more information.



LOOP ROLL mode: Hold the **MODE** button and press **PAD 7** to select LOOP ROLL mode. Holding pads 1-8 activates a loop roll of varying sizes. Release the pad to exit the Loop Roll. Use the **PARAMETER** buttons to shift the roll position to the left or right. Hold **Shift** and press the **PARAMETER** buttons to change the 8 selected loop size options.

BEAT GRID mode: Hold the **MODE** button and press **PAD 8** to select BEAT GRID mode. In this mode, **PAD 1** is Large Adjust Left, **PAD 2** is Small Adjust Left, **PAD 3** is Small Adjust Right and **PAD 4** is Large Adjust Right. **PAD 5** is Large Slip Left, **PAD 6** is Small Slip Left, **PAD 7** is Small Slip Right and **PAD 8** is Large Slip Right.

USER mode: Hold the **SHIFT** button and press the **MODE** button to select USER mode. In this mode the pads are blank and available to be user mapped. See the [MIDI section](#) for more information.

Scratch Banks

Holding the **MODE** button and pressing **PAD 6** on the Reloop Ready will enable SCRATCH BANKS. This mode allows you to assign files in your Serato DJ Pro library to a pad. When a pad is triggered, the file corresponding file will be loaded to deck. The left set of pads will load to deck 1 where as the right will load to deck 2.

Click the Scratch Bank button  in the top tool bar of Serato DJ Pro to reveal the Scratch Bank Panel. In this panel you can load and eject files from the Scratch Banks, as well as choose the preferences you wish to load to the deck upon triggering the pad. These preferences include the start point of the file, Key Lock on/off and Repeat on/off. Clicking the  button in the top left corner of the panel will change between Advanced and Simple View.

Use the **PARAMETER** buttons to move through SCRATCH BANKS A to D.

Holding **SHIFT** and clicking on any Scratch Bank pad will unload the currently loaded Scratch Bank file and re-load the last track to be loaded to that deck.

Pitch Play

Hold the and press **PAD 5** to select PITCH PLAY mode Holding the **MODE** button and pressing **PAD 5** on the Reloop Ready will enable Pitch Play mode. In this mode you can play Cue Points over variable pitch ranges.

There are 3 key ranges to choose from. The following tables show pitched key ranges (in Semitones) while using the 8 performance pads in Pitch Play mode. To toggle between key ranges press the Parameter left & right buttons.

The root key pad (0) is always lit white, which will play the cue point at its regular pitch.

Pressing Parameter left & right while holding SHIFT will shift up or down a single semitone. In Pitch Play mode, pressing a pad will pitch the currently selected cue point up or down the following ranges:

Up Range: (Up 7 Semitones)

+4	+5	+6	+7
0	+1	+2	+3

Middle Range: (Up 3/Down 4 Semitones)

0	+1	+2	+3
-4	-3	-2	-1

Down Range: (Down 7 Semitones)

-3	-2	-1	0
-7	-6	-5	-4

When Pitch Play mode is first enabled, the middle range is selected. If a new track is loaded, key mode will default to middle range.

PITCH PLAY can only pitch one Cue point at a time. To change the selected Cue, hold the SHIFT button and press a performance pad where the cue point you want to select would be (as shown in the CUES performance pad mode). While holding SHIFT, press the corresponding performance pad for:

Cue 1	Cue 2	Cue 3	Cue 4
Cue 5	Cue 6	Cue 7	Cue 8

The selected cue point defaults to Cue Point 1 on track load, even if instant doubled. If a pad with no cue point is selected, then a new cue point will be created. Deleting a cue point however, is not possible in PITCH PLAY mode. Range is remembered if you choose another pad mode, then go back. If a new track is loaded, the mode will default to middle range.

NOTE: Pitch Play mode is available once the Pitch 'n Time DJ Expansion Pack has been activated in the MY SERATO window. Make sure "Enable Pitch 'n Time DJ" is checked in the Expansion Pack tab of the SETUP screen.

MIDI

The MIDI feature in Serato DJ Pro provides the ability to remap Serato DJ Pro software functions to your primary Serato controller, interface or mixer. You can also assign controls to a secondary MIDI controller to further enhance your performance.

[For more information on MIDI mapping with Serato DJ Pro click here](#)

To remap your supported Serato device, open the SETUP screen and click the MIDI tab. If your Serato device supports hardware remapping, it will show up in the MIDI Devices list at the top.

Select your connected device from the MIDI Devices list and make sure the “Allow Serato Hardware Remapping” option is checked.

Allow Serato Hardware Remapping

Once checked, the MIDI assign button at the top of the screen will become available for you to start remapping.

You can save, edit or delete MIDI presets in the MIDI tab of the SETUP screen. Clicking ‘Restore Defaults’ will erase any custom mappings for all connected devices and revert their functions back to default.

Help

Show Tooltips

Click on the **Help** button in the upper right-hand corner of Serato DJ Pro, then **Show tooltips** to enable tooltips. Tool tips provide a handy way to learn the various features of Serato DJ Pro.

Move the mouse over a section of the screen to bring up a context sensitive tool tip.

Watch Tutorials

Click on the **Help** button in the upper right-hand corner of Serato DJ Pro, then **Watch tutorials** to launch your default internet browser and watch tutorials, to help you get familiar with Serato DJ Pro.

Get Support

Click on the **Help** button in the upper right-hand corner of Serato DJ Pro, then **Get support** to launch your default internet browser and navigate to the Serato DJ Pro knowledge base, where you can find helpful articles and guides on Serato DJ Pro. Alternatively, type in the **Go** box, with keywords, to search the Serato DJ Pro knowledge base for specific, related topics.