



Denon DJ SC Live 2 Quick-Start Guide

Setup

Serato software

The Denon DJ SC Live 2 is a “Serato DJ Pro hardware unlocked” device, meaning it works with Serato DJ Pro out of the box.

Please ensure you have the latest version of Serato DJ Pro installed:

[Click here to download Serato DJ Pro](#)


Drivers & firmware

The Denon DJ SC Live 2 is class compliant when used with macOS, but requires manufacturer specific drivers on Windows operating systems. To install the driver, simply connect your SC Live 2 with a USB cable to your computer, and launch the latest version of Serato DJ Pro, where you will be prompted to ‘download drivers’ for the device.

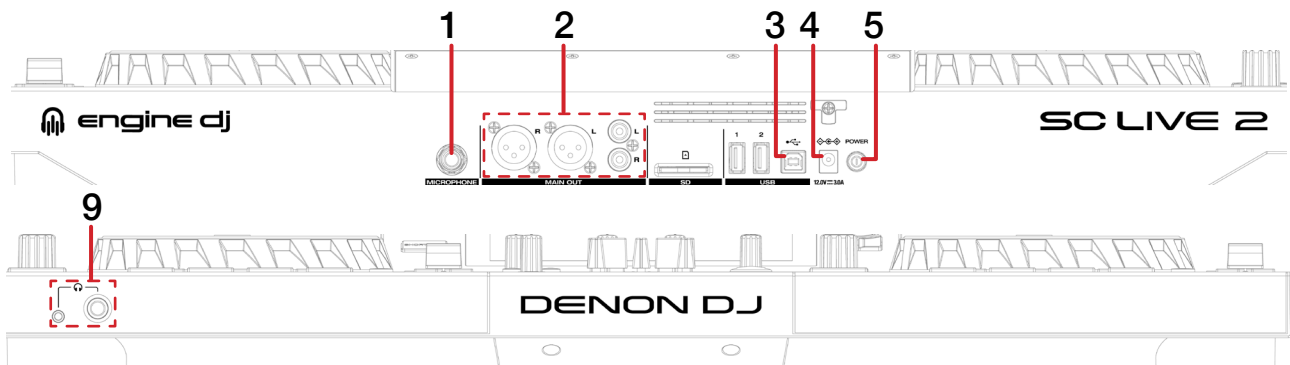
You also must have **firmware 1.0.0.36 or higher** installed on your Denon DJ SC Live 2, to allow the device to connect to Serato DJ Pro.

Visit the [Denon DJ Support](#) site to manually download and install the relevant SC Live 2 driver & to acquire and install the latest, required firmware.

Connection


1. Connect the device via USB cable to your PC, power it on, and launch Serato DJ Pro
2. Once the device has booted, swipe down from the top of the LCD display on the device, and tap **SOURCE**
3. Tap the computer/laptop button  then tap **YES** when prompted to restart the player into **Computer Mode**

Overview



#	SC Live 2 CONTROL	FUNCTION
1	MICROPHONE	Microphone input (TRS)
2	MAIN OUT	Main audio output via XLR or RCA
3	USB	Connect USB cable to PC
4	POWER IN	Connect supplied power adapter
5	POWER	Press to power device on
6	HEADPHONES	Headphone output for 3.5mm and 6.5mm jack

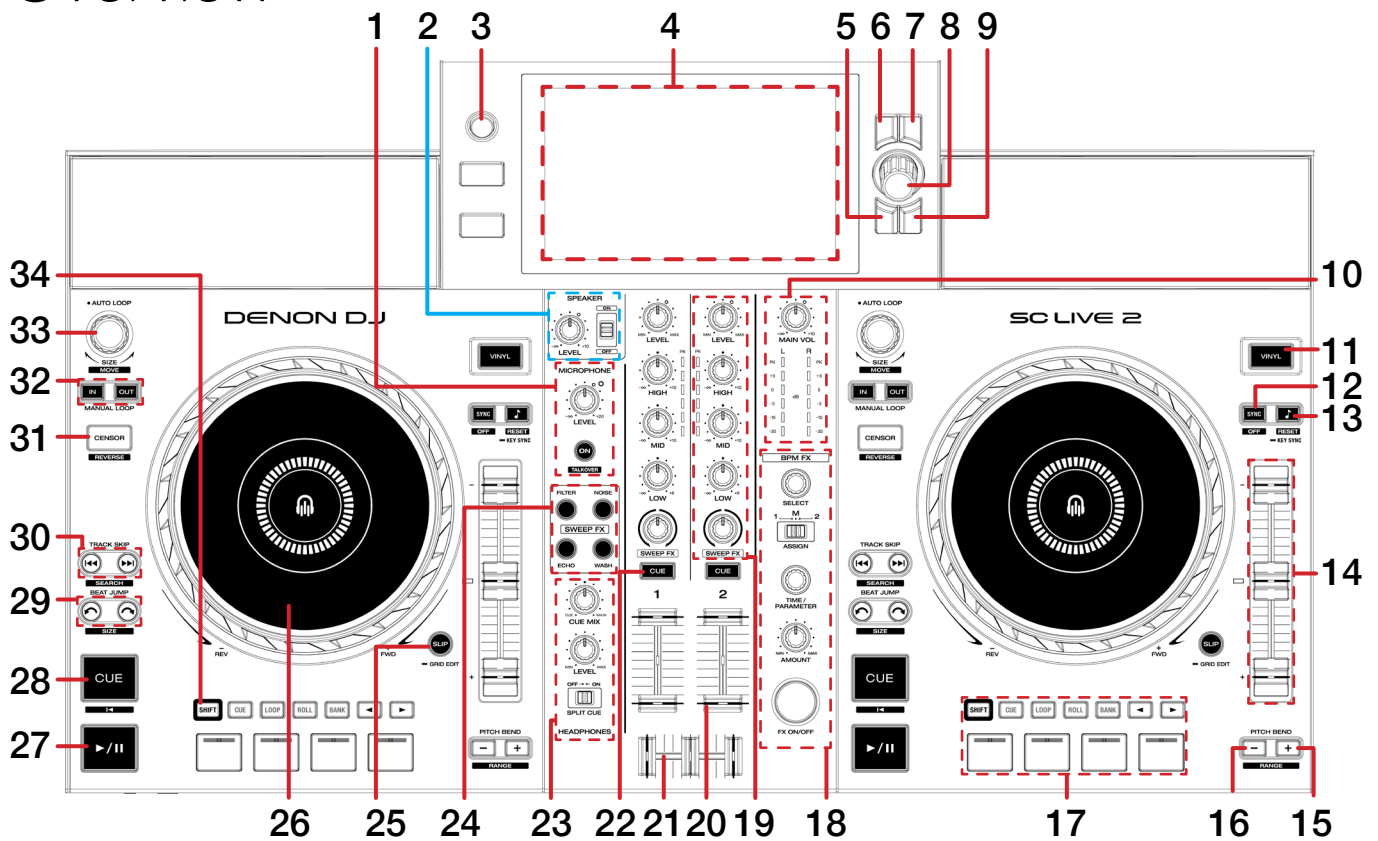Overview




#	SC Live 2 CONTROL	FUNCTION	SHIFT FUNCTION
1	MICROPHONE (SECTION)	Adjust Microphone level, and toggle on/off	-
2	SPEAKER (SECTION)	Adjust Speaker level, and toggle Speaker on/off	-
3	VIEW	Press to cycle view modes	Press to cycle panels
4	DISPLAY	LED Display	-
5	LOAD LEFT	Load selected track to Deck 1, double press to Instant Double selected track	Add selected track to Prepare crate
6	BACK	Toggle back between crate & track area	-
7	FORWARD	Toggle forward between crate & track area	-
8	BROWSE	Turn to scroll library. Press in to toggle forward between crate & track area	Fast Library scroll
9	LOAD RIGHT	Load selected track to Deck 2, double press to Instant Double selected track	Add selected track to Prepare crate
10	MAIN VOL (SECTION)	Adjust main volume and monitor master levels	-
11	VINYL	Toggle vinyl or jog platter mode (per deck)	-
12	SYNC	Press to turn SYNC on (per deck)	Disable Sync (per deck)
13	KEYLOCK	Toggle key lock	-
14	TEMPO SLIDER	Adjust tempo/pitch	Ignore tempo/pitch adjustment
15	PITCH BEND +	Pitch bend up	Pitch range up
16	PITCH BEND -	Pitch bend down	Pitch range down

Overview

#	SC Live 2 CONTROL	FUNCTION	SHIFT FUNCTION
17	PERFORMANCE PADS (SECTION)	SEE PERFORMANCE PADS FOR MORE INFORMATION	-
18	BPM FX (SECTION)	SEE FX SECTION FOR MORE INFORMATION	-
19	CHANNEL (SECTION)	Adjust level, adjust EQ (High, Mid, Low), and apply Sweep FX (per channel)	-
20	CHANNEL FADER	Adjust channel volume	Channel fader start (per channel)
21	CROSSFADER	Crossfade audio between channel 1-2	-
22	CHANNEL CUE	Toggle channel cue for monitoring	-
23	HEADPHONES (SECTION)	Adjust level, adjust cue/main mix, and toggle split cue	-
24	SWEEP FX	Toggle Sweep FX between Filter, Noise, Echo & Wash	-
25	SLIP	Toggle Slip on/off	-
26	JOG WHEEL	Turn jog to pitch bend, or control waveform within Serato DJ in vinyl mode	-
27	PLAY / PAUSE	Toggles Play / Pause on selected deck	Stutter play
28	CUE	Cues from temp cue point/Set temp cue point	Load previous track
29	BEAT JUMP LEFT / RIGHT	Beat Jump Left / Beat Jump Right	Halve Beat Jump size / Double Beat Jump size
30	TRACK SKIP LEFT / RIGHT	Load previous track / Load next track	Rewind / Fast forward
31	CENSOR	Toggle Censor for playing track	Toggle Reverse playback
32	IN / OUT (MANUAL LOOP)	Set or Edit Loop in point / Set or Edit Loop out point	-
33	AUTO LOOP	Press in to toggle Autoloop on/off. Turn left to halve loop size, turn right to double loop size	Turn left to shift loop left, turn right to shift loop right
34	SHIFT	Shift modifier. Hold while using another control for secondary function	-

Performance Pads

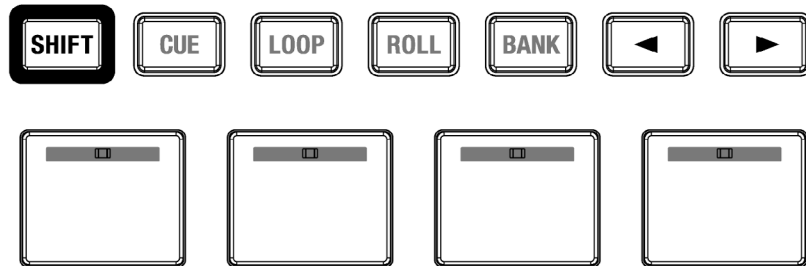The Denon DJ SC Live 2 comes with 4 performance pads, that can be used across 3 different performance pad modes. Press the BANK button to utilize pads 5-8, and press it again to return to pads 1-4 (default).



The 3 performance pad modes can be triggered by pressing the performance pad mode button of the same name once, and consist of:

CUE mode: Pads 1-8 trigger Serato DJ Pro Cue points, and if no Cue point is present on that slot/pad, pressing that pad will set a Cue point. Holding down the **SHIFT** button while pressing a populated pad will delete the Cue point from the respective pad/slot. If the Serato Flip expansion pack is enabled, Parameter Left & Right controls toggle Flip Record, and Flip start respectively. Holding **SHIFT** while pressing Parameter Left toggles Flip Loop, while pressing Parameter Right turns the Flip on/off.

LOOP mode: Pads 1-8 trigger Saved Loops, or save an Active Loop to an empty Loop Slot. Holding **SHIFT** while pressing a Pad will Reloop the Saved Loop Slot. Parameter Left & Right controls halve and double loop size respectively.





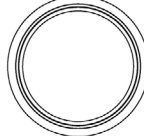
ROLL mode: Holding Pads 1-8 activate a loop roll of varying sizes. Release the pad to exit the Loop Roll. Use the loop selection area in the Serato DJ Pro user interface, to influence the 8 available loop roll sizes. Parameter Left & Right controls halve and double the Loop Roll size.

DJ-FX

Click the FX button  to open the Serato DJ Pro DJ-FX panel. Select either 1, 2, or M to assign the selected effect bank to a deck or the master output.

There are two available modes with DJ-FX. Single FX Mode allows you to select one effect per FX bank, and has multiple parameters that can be adjusted. Multi FX Mode allows you to select up to three effects per FX bank, and adjust only one parameter, the FX Depth. The same effects available in Single FX mode are available in Multi FX mode, as well some additional presets.

You can select between the two FX modes by clicking either the Single FX mode button  or Multi FX mode button .

SC Live 2 Control	Single FX mode	SHIFT function	Multi FX mode	SHIFT function	
BPM FX	Turn to select FX Slot 1, FX Unit 1	-	Turn to select FX Slot 1	-	 SELECT
CHANNEL ASSIGN	Turn to assign FX Unit 1 output	-	Turn to assign FX Unit 1 output	-	 2 4 M 1. 3. CHANNEL ASSIGN
TIME / PARAMETER	Turn to adjust Beats Multiplier value. Press in to set Tap FX Tempo. Press and hold to reset Tap FX Tempo value	Press in to reset Tap FX Tempo value	Turn to adjust Beats Multiplier value. Press in to set Tap FX Tempo. Press and hold to reset Tap FX Tempo value	Press in to reset Tap FX Tempo value	 TIME / PARAMETER
AMOUNT	Turn to adjust depth for FX Slot 1, FX Unit 1	-	Turn to adjust depth for FX Parameter 1	-	 MIN • MAX AMOUNT
FX ON / OFF	Turn on / off FX Slot 1, FX Unit 1	-	Turn FX on / off	-	 FX ON/OFF

Flip

Flip is an Expansion Pack for Serato DJ Pro. Flip controls are only available once the Flip expansion pack has been purchased and activated. The expansion pack can be purchased in-app through the My Serato window in Serato DJ Pro or online at <https://serato.com/dj/pro/expansions/flip>

 
In Cue mode, the Denon DJ SC Live 2's Parameter Left button arms & enables Flip for recording, and the Parameter Right button triggers a saved Flip. Holding SHIFT while pressing each button toggles Flip Loop and Flip On/Off respectively.

You can also use the dedicated pad mode, Saved Flip mode, by holding **SHIFT** while pressing the 'Saved Loop' pad mode button.


For more information on using Flip, please check-out our [Flip User Guide](#).

Beat Jump

To activate Beat Jump, open the Setup screen and under the DJ preferences tab turn on "Show Beat Jump Controls".



 When you close the Setup screen you will see Beat Jump controls underneath the existing Auto Loop values on each deck. Checking this box will turn on Beat Jump features in the deck area and let you control Beat Jump from on your supported Serato DJ Pro hardware.



When the Beat Jump option is enabled, performance pad modes AUTO LOOP or ROLL mode (where applicable) will use the bottom row of 4 pads (pads 5-8) as Beat Jump controls. This is designed to mirror the change in deck Auto Loop area (from 8 Auto Loop sizes to 4 Auto Loop sizes + Beat Jump controls).

MIDI

The MIDI feature in Serato DJ Pro provides the ability to remap Serato DJ Pro software functions to your primary Serato controller, interface or mixer. You can also assign controls to a secondary MIDI controller to further enhance your performance.

[For more information on MIDI mapping with Serato DJ Pro click here](#)

To remap your supported Serato device, open the SETUP screen and click the MIDI tab. If your Serato device supports hardware remapping, it will show up in the MIDI Devices list at the top.

Select your connected device from the MIDI Devices list and make sure the “Allow Serato Hardware Remapping” option is checked.

 
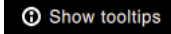


Once checked, the MIDI assign button at the top of the screen will become available for you to start remapping.

You can save, edit or delete MIDI presets in the MIDI tab of the SETUP screen. Clicking ‘Restore Defaults’ will erase any custom mappings for all connected devices and revert their functions back to default.

 
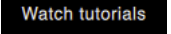
Help

Show Tooltips

 
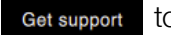

 
Click on the  button in the upper right-hand corner of Serato DJ Pro, then  to enable tooltips. Tool tips provide a handy way to learn the various features of Serato DJ Pro.

Move the mouse over a section of the screen to bring up a context sensitive tool tip.

Watch Tutorials

Click on the  button in the upper right-hand corner of Serato DJ Pro, then  to launch your default internet browser and watch tutorials, to help you get familiar with Serato DJ Pro.

Get Support

Click on the  button in the upper right-hand corner of Serato DJ Pro, then  to launch your default internet browser and navigate to the Serato DJ Pro knowledge base, where you can find helpful articles and guides on Serato DJ Pro. Alternatively, type in the   box, with keywords, to search the Serato DJ Pro knowledge base for specific, related topics.