# QUICK-START GUIDE PIONEER DDJ-SB2



# **Installation and Setup**

 
The Pioneer DDJ-SB2 is a class compliant USB plug and play device for Mac, however requires drivers for Windows. You will find these on the installation CD provided with your Pioneer DDJ-SB2.

 
NOTE: Please ensure you have the latest available drivers AND firmware updates, which may be required in order to be compatible with Serato DJ. Please go to http://serato.com/dj/support

- Download and install the latest version of Serato DJ from http://serato.com/ dj/downloads
- 2. Connect your Pioneer DDJ-SB2 to an available USB Port.
- 3. Open Serato DJ..

# **Serato DJ Activation**


To find out how to activate Serato DJ by either starting your free 14 day trial, or purchasing a license for Serato DJ, click here for the most up to date information.





#	Pioneer DDJ-SB2 Control	Function
1	USB	Connect USB to your computer
2	KENSINGTON LOCK	Connect Kensignton Lock
3	MASTER OUT	RCA master output
4	MIC LEVEL ADJUST	Adjust microphone level
5	MIC INPUT	1/4" micrphone input
6	HEADPHONES	1/8" headphones output
7	HEADPHONES	1/8" headphones output



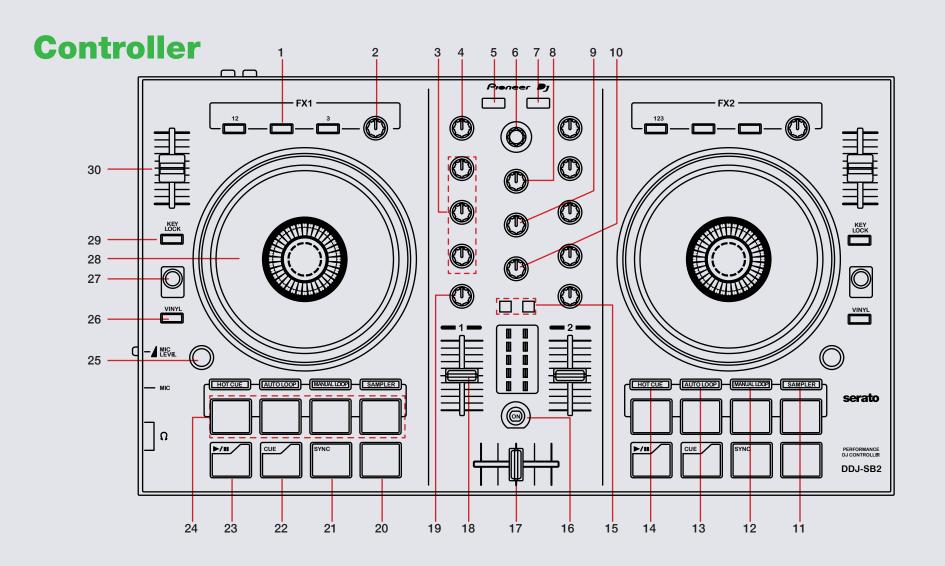



NOTE: The SHIFT button is used with other buttons that have shift modifier functions.

1 FX BUTTONS (P1,2,3) Slot 1-3 Effect On/Off 2 FX KNOBS Adjust Slot 1-3 FX Parameter Adjust Beats Multiplier 3 EQ (knobs) Adjust HI, MID and LOW 4 TRIM Adjust channel trim volume 5 LOAD Load selected track to Deck 1/3 (Press twice to Instant Double) 6 BROWSER Browses through currently focused area (library/crates/open panels) Click to move between library and crates 7 LOAD Load selected track to Deck 2/4 (Press twice to Instant Double) 8 MASTER LEVEL Adjusts the master output's audio level 9 HEADPHONES MIX Adjusts headphone output between cue and master 10 HEADPHONES LEVEL Adjusts the headphone output level 11 SAMPLER MODE Activates Sampler Performance Pad mode (SEE PERFORMANCE PADS) Activates Sampler Bank Performance Pad mode (SEE PERFORMANCE PADS) Activates Hot Loop Performance Pad mode (SEE PERFORMANCE PADS) Activates Hot Loop Performance Pad mode (SEE PERFORMANCE PADS) Activates Loop Roll Performance Pad mode (SEE PERFORMANCE PADS) 13 AUTO LOOP MODE Activates Auto Loop Performance Pad mode (SEE PERFORMANCE PADS) Activates Loop Roll Performance Pad mode (SEE PERFORMANCE PADS) Activates Hot Cue (5-8) Performance Pad mode (SEE PERFORMANCE PADS)  14 HOT CUE MODE Activates Hot Cue (1-4) Performance Pad mode (SEE PERFORMANCE PADS)  5 CUE Cue selected channel in headphones  Filter mix mode for crossfader On/Off CROSSFADER Crossfades the output sound between channels  6 CHANNEL FADERS Adjusts the Channel Output  Channel Fader Start  19 FILTER	#	Pioneer DDJ-SB2 Control	Function	Shift Function
Adjust HI, MID and LOW  TRIM Adjust channel trim volume  LOAD Load selected track to Deck 1/3 (Press twice to Instant Double)  BROWSER Browses through currently focused area (library/crates/open panels) Click to move between library and crates  LOAD Load selected track to Deck 2/4 (Press twice to Instant Double)  MASTER LEVEL Adjusts the master output's audio level  HEADPHONES MIX Adjusts headphone output between cue and master  HEADPHONES LEVEL Adjusts the headphone output level  Adjusts headphone output level  Activates Sampler Performance Pad mode (SEE PERFORMANCE PADS) Activates Sampler Bank Performance Pad mode (SEE PERFORMANCE PADS)  ACTIVATES ACTIVATE	1	FX BUTTONS (P1,2,3)	Slot 1-3 Effect On/Off	Slot 1-3 Select Effect
4 TRIM Adjust channel trim volume 5 LOAD Load selected track to Deck 1/3 (Press twice to Instant Double) 6 BROWSER Browses through currently focused area (library/crates/open panels) Click to move between library and crates 7 LOAD Load selected track to Deck 2/4 (Press twice to Instant Double) 8 MASTER LEVEL Adjusts the master output's audio level 9 HEADPHONES MIX Adjusts headphone output between cue and master 10 HEADPHONES LEVEL Adjusts the headphone output level 11 SAMPLER MODE Activates Sampler Performance Pad mode (SEE PERFORMANCE PADS) Activates Sampler Bank Performance Pad mode (SEE PERFORMANCE PADS) 12 MANUAL LOOP MODE Activates Manual Loop Performance Pad mode (SEE PERFORMANCE PADS) Activates Hot Loop Performance Pad mode (SEE PERFORMANCE PADS) 13 AUTO LOOP MODE Activates Auto Loop Performance Pad mode (SEE PERFORMANCE PADS) 14 HOT CUE MODE Activates Hot Cue (1-4) Performance Pad mode (SEE PERFORMANCE PADS) 15 CUE Cue selected channel in headphones 16 FILTER MIX MODE Filter mix mode for crossfader On/Off 17 CROSSFADER Crossfades the output sound between channels 18 CHANNEL FADERS Adjusts the Channel Output Channel Fader Start	2	FX KNOBS	Adjust Slot 1-3 FX Parameter	Adjust Beats Multiplier
LOAD Load selected track to Deck 1/3 (Press twice to Instant Double)  BROWSER Browses through currently focused area (library/crates/open panels) Click to move between library and crates  LOAD Load selected track to Deck 2/4 (Press twice to Instant Double)  MASTER LEVEL Adjusts the master output's audio level  HEADPHONES MIX Adjusts headphone output between cue and master  HEADPHONES LEVEL Adjusts the headphone output level  Activates Sampler Performance Pad mode (SEE PERFORMANCE PADS) Activates Sampler Bank Performance Pad mode (SEE PERFORMANCE PADS)  MANUAL LOOP MODE Activates Manual Loop Performance Pad mode (SEE PERFORMANCE PADS)  AUTO LOOP MODE Activates Auto Loop Performance Pad mode (SEE PERFORMANCE PADS)  Activates Loop Roll Performance Pad mode (SEE PERFORMANCE PADS)  Activates Loop Roll Performance Pad mode (SEE PERFORMANCE PADS)  Activates Loop Roll Performance Pad mode (SEE PERFORMANCE PADS)  Activates Hot Cue (5-8) Performance Pad mode (SEE PERFORMANCE PADS)  Tap BPM of loaded track to selected deck (No Sync) / Edit Grid Mode (Sync)  Fast library scroll  Fast library scro	3	EQ (knobs)	Adjust HI, MID and LOW	
Browses through currently focused area (library/crates/open panels) Click to move between library and crates  LOAD Load selected track to Deck 2/4 (Press twice to Instant Double)  MASTER LEVEL Adjusts the master output's audio level  HEADPHONES MIX Adjusts headphone output between cue and master  Adjusts the headphone output level  Adjusts the headphone output level  Adjusts the headphone output level  Adjusts sampler Performance Pad mode (SEE PERFORMANCE PADS)  MANUAL LOOP MODE Activates Manual Loop Performance Pad mode (SEE PERFORMANCE PADS)  Activates Hot Loop Performance Pad mode (SEE PERFORMANCE PADS)  Activates Loop Roll Performance Pad mode (SEE PERFORMANCE PADS)  Activates Loop Roll Performance Pad mode (SEE PERFORMANCE PADS)  Activates Loop Roll Performance Pad mode (SEE PERFORMANCE PADS)  Activates Loop Roll Performance Pad mode (SEE PERFORMANCE PADS)  Activates Hot Cue (5-8) Performance Pad mode (SEE PERFORMANCE PADS)  CUE  Cue selected channel in headphones  Tap BPM of loaded track to selected deck (No Sync) / Edit Grid Mode (Sync)  Filter MIX MODE Filter mix mode for crossfader On/Off  CROSSFADER  Crossfades the output sound between channels  Adjusts the Channel Output  Channel Fader Start	4	TRIM	Adjust channel trim volume	
move between library and crates  7 LOAD Load selected track to Deck 2/4 (Press twice to Instant Double)  8 MASTER LEVEL Adjusts the master output's audio level  9 HEADPHONES MIX Adjusts headphone output between cue and master  10 HEADPHONES LEVEL Adjusts the headphone output level  11 SAMPLER MODE Activates Sampler Performance Pad mode (SEE PERFORMANCE PADS) Activates Sampler Bank Performance Pad mode (SEE PERFORMANCE PADS)  12 MANUAL LOOP MODE Activates Manual Loop Performance Pad mode (SEE PERFORMANCE PADS) Activates Hot Loop Performance Pad mode (SEE PERFORMANCE PADS)  13 AUTO LOOP MODE Activates Auto Loop Performance Pad mode (SEE PERFORMANCE PADS) Activates Loop Roll Performance Pad mode (SEE PERFORMANCE PADS)  14 HOT CUE MODE Activates Hot Cue (1-4) Performance Pad mode (SEE PERFORMANCE PADS)  15 CUE Cue selected channel in headphones  16 FILTER MIX MODE Filter mix mode for crossfader On/Off  17 CROSSFADER Crossfades the output sound between channels  18 CHANNEL FADERS Adjusts the Channel Output Channel Start  18 CHANNEL FADERS Adjusts the Channel Output  19 Load selected to Instant Double  10 Activates Sampler Bank Performance Pad mode (SEE PERFORMANCE PADS)  10 Activates Hot Loop Performance Pad mode (SEE PERFORMANCE PADS)  11 Activates Hot Loop Performance Pad mode (SEE PERFORMANCE PADS)  12 Activates Loop Roll Performance Pad mode (SEE PERFORMANCE PADS)  13 AUTO LOOP MODE Activates Hot Cue (1-4) Performance Pad mode (SEE PERFORMANCE PADS)  14 HOT CUE MODE Activates Hot Cue (1-4) Performance Pad mode (SEE PERFORMANCE PADS)  15 CUE Cue selected channel in headphones  16 FILTER MIX MODE Filter mix mode for crossfader On/Off  17 CROSSFADER Crossfades the output sound between channels  18 CHANNEL FADERS Adjusts the Channel Output  18 CHANNEL FADERS Adjusts the Channel Output	5	LOAD	Load selected track to Deck 1/3 (Press twice to Instant Double)	
MASTER LEVEL Adjusts the master output's audio level  HEADPHONES MIX Adjusts headphone output between cue and master  HEADPHONES LEVEL Adjusts the headphone output level  Activates Sampler Performance Pad mode (SEE PERFORMANCE PADS)  Activates Sampler Bank Performance Pad mode (SEE PERFORMANCE PADS)  Activates Sampler Bank Performance Pad mode (SEE PERFORMANCE PADS)  Activates Hot Loop Performance Pad mode (SEE PERFORMANCE PADS)  Activates Hot Loop Performance Pad mode (SEE PERFORMANCE PADS)  Activates Loop Performance Pad mode (SEE PERFORMANCE PADS)  Activates Loop Roll Performance Pad mode (SEE PERFORMANCE PADS)  Activates Hot Cue (5-8) Performance Pad mode (SEE PERFORMANCE PADS)  CUE  Cue selected channel in headphones  Tap BPM of loaded track to selected deck (No Sync) / Edit Grid Mode (Sync)  Filter MIX MODE  Filter mix mode for crossfader On/Off  CROSSFADER  Crossfades the output sound between channels  CHANNEL FADERS  Adjusts the Channel Output  Channel Fader Start	6	BROWSER		Fast library scroll
9 HEADPHONES MIX Adjusts headphone output between cue and master 10 HEADPHONES LEVEL Adjusts the headphone output level 11 SAMPLER MODE Activates Sampler Performance Pad mode (SEE PERFORMANCE PADS) Activates Sampler Bank Performance Pad mode (SEE PERFORMANCE PADS) 12 MANUAL LOOP MODE Activates Manual Loop Performance Pad mode (SEE PERFORMANCE PADS) Activates Hot Loop Performance Pad mode (SEE PERFORMANCE PADS) 13 AUTO LOOP MODE Activates Auto Loop Performance Pad mode (SEE PERFORMANCE PADS) Activates Loop Roll Performance Pad mode (SEE PERFORMANCE PADS) 14 HOT CUE MODE Activates Hot Cue (1-4) Performance Pad mode (SEE PERFORMANCE PADS) Activates Hot Cue (5-8) Performance Pad mode (SEE PERFORMANCE PADS) 15 CUE Cue selected channel in headphones Tap BPM of loaded track to selected deck (No Sync) / Edit Grid Mode (Sync) 16 FILTER MIX MODE Filter mix mode for crossfader On/Off 17 CROSSFADER Crossfades the output sound between channels 18 CHANNEL FADERS Adjusts the Channel Output Channel Fader Start	7	LOAD	Load selected track to Deck 2/4 (Press twice to Instant Double)	
HEADPHONES LEVEL Adjusts the headphone output level Activates Sampler Performance Pad mode (SEE PERFORMANCE PADS) Activates Sampler Bank Performance Pad mode (SEE PERFORMANCE PADS)  Activates Hot Loop Performance Pad mode (SEE PERFORMANCE PADS)  Activates Hot Loop Performance Pad mode (SEE PERFORMANCE PADS)  Activates Hot Loop Performance Pad mode (SEE PERFORMANCE PADS)  Activates Hot Loop Performance Pad mode (SEE PERFORMANCE PADS)  Activates Loop Roll Performance Pad mode (SEE PERFORMANCE PADS)  Activates Loop Roll Performance Pad mode (SEE PERFORMANCE PADS)  Activates Hot Cue (5-8) Performance Pad mode (SEE PERFORMANCE PADS)  CUE Cue selected channel in headphones  Tap BPM of loaded track to selected deck (No Sync) / Edit Grid Mode (Sync)  Filter mix mode for crossfader On/Off  CROSSFADER Crossfades the output sound between channels  Channel Fader Start	8	MASTER LEVEL	Adjusts the master output's audio level	
Activates Sampler Performance Pad mode (SEE PERFORMANCE PADS)  Activates Sampler Bank Performance Pad mode (SEE PERFORMANCE PADS)  Activates Sampler Bank Performance Pad mode (SEE PERFORMANCE PADS)  Activates Hot Loop Performance Pad mode (SEE PERFORMANCE PADS)  Activates Hot Loop Performance Pad mode (SEE PERFORMANCE PADS)  Activates Loop Roll Performance Pad mode (SEE PERFORMANCE PADS)  Activates Loop Roll Performance Pad mode (SEE PERFORMANCE PADS)  Activates Hot Cue (5-8) Performance Pad mode (SEE PERFORMANCE PADS)  Cue selected channel in headphones  Tap BPM of loaded track to selected deck (No Sync) / Edit Grid Mode (Sync)  Filter mix mode for crossfader On/Off  Crossfades the output sound between channels  Activates Auto Loop Performance Pad mode (SEE PERFORMANCE PADS)  Activates Loop Roll Performance Pad mode (SEE PERFORMANCE PADS)  Activates Hot Cue (5-8) Performance Pad mode (SEE PERFORMANCE PADS)  Filter mix mode for crossfader On/Off  Crossfades the output sound between channels  Adjusts the Channel Output  Channel Fader Start	9	HEADPHONES MIX	Adjusts headphone output between cue and master	
mode (SEE PERFORMANCE PADS)  12 MANUAL LOOP MODE Activates Manual Loop Performance Pad mode (SEE PERFORMANCE PADS) Activates Hot Loop Performance Pad mode (SEE PERFORMANCE PADS)  13 AUTO LOOP MODE Activates Auto Loop Performance Pad mode (SEE PERFORMANCE PADS) Activates Loop Roll Performance Pad mode (SEE PERFORMANCE PADS)  14 HOT CUE MODE Activates Hot Cue (1-4) Performance Pad mode (SEE PERFORMANCE PADS) Activates Hot Cue (5-8) Performance Pad mode (SEE PERFORMANCE PADS)  15 CUE Cue selected channel in headphones Tap BPM of loaded track to selected deck (No Sync) / Edit Grid Mode (Sync)  16 FILTER MIX MODE Filter mix mode for crossfader On/Off  17 CROSSFADER Crossfades the output sound between channels  18 CHANNEL FADERS Adjusts the Channel Output Channel Fader Start	10	HEADPHONES LEVEL	Adjusts the headphone output level	
Activates Auto Loop Performance Pad mode (SEE PERFORMANCE PADS)  Activates Loop Roll Performance Pad mode (SEE PERFORMANCE PADS)  Activates Loop Roll Performance Pad mode (SEE PERFORMANCE PADS)  Activates Hot Cue (5-8) Performance Pad mode (SEE PERFORMANCE PADS)  CUE  Cue selected channel in headphones  Tap BPM of loaded track to selected deck (No Sync) / Edit Grid Mode (Sync)  Filter mix mode for crossfader On/Off  CROSSFADER  Crossfades the output sound between channels  Adjusts the Channel Output  Channel Fader Start	11	SAMPLER MODE	Activates Sampler Performance Pad mode (SEE PERFORMANCE PADS)	
(SEE PERFORMANCE PADS)  14 HOT CUE MODE Activates Hot Cue (1-4) Performance Pad mode (SEE PERFORMANCE PADS) Activates Hot Cue (5-8) Performance Pad mode (SEE PERFORMANCE PADS)  15 CUE Cue selected channel in headphones Tap BPM of loaded track to selected deck (No Sync) / Edit Grid Mode (Sync)  16 FILTER MIX MODE Filter mix mode for crossfader On/Off  17 CROSSFADER Crossfades the output sound between channels  18 CHANNEL FADERS Adjusts the Channel Output Channel Fader Start	12	MANUAL LOOP MODE	Activates Manual Loop Performance Pad mode (SEE PERFORMANCE PADS)	·
mode (SEE PERFORMANCE PADS)  15 CUE  Cue selected channel in headphones  Tap BPM of loaded track to selected deck (No Sync) / Edit Grid Mode (Sync)  16 FILTER MIX MODE  Filter mix mode for crossfader On/Off  CROSSFADER  Crossfades the output sound between channels  CHANNEL FADERS  Adjusts the Channel Output  Channel Fader Start	13	AUTO LOOP MODE	Activates Auto Loop Performance Pad mode (SEE PERFORMANCE PADS)	
(No Sync) / Edit Grid Mode (Sync)  16 FILTER MIX MODE Filter mix mode for crossfader On/Off  17 CROSSFADER Crossfades the output sound between channels  18 CHANNEL FADERS Adjusts the Channel Output Channel Fader Start	14	HOT CUE MODE	Activates Hot Cue (1-4) Performance Pad mode (SEE PERFORMANCE PADS)	,
17 CROSSFADER Crossfades the output sound between channels 18 CHANNEL FADERS Adjusts the Channel Output Channel Fader Start	15	CUE	Cue selected channel in headphones	·
18 CHANNEL FADERS Adjusts the Channel Output Channel Fader Start	16	FILTER MIX MODE	Filter mix mode for crossfader On/Off	
	17	CROSSFADER	Crossfades the output sound between channels	
19 FILTER Channel HP/LP combo filter	18	CHANNEL FADERS	Adjusts the Channel Output	Channel Fader Start
	19	FILTER	Channel HP/LP combo filter	




NOTE: The SHIFT button is used with other buttons that have shift modifier functions.

#	Pioneer DDJ-SB2 Control	Function	Shift Function
20	SHIFT	SHIFT button is used with other buttons that have shift modifier functions	
21	SYNC	Sync On	Sync Off (Press twice to return to Absolute Pitch when in Relative Mode)
22	CUE	Add or Jump to Temporary Cue	Jump to start of track (more than 2 Sec elapsed) Previous track (less than 2 sec elapsed)
23	PLAY/PAUSE	Play/Pause track	Stutter Play
24	PERFORMANCE PADS	Controls Performance Modes (SEE PERFORMANCE PADS FOR MORE INFORMATION)	
25	PAD TRANS	Enable pad transform mode	TAP tempo
26	JOG MODE	Toggles between Vinyl/Jog Modes	Activate Slip Mode
27	DECK	Toggle between decks 1/2 and 3/4	
28	PLATTER	Adjust/Scratch or Jog	
29	KEYLOCK	Enable Keylock	Cycle through available Tempo Range
30	PITCH FADER	Adjust Pitch	When in Sync mode, used to disable the Pitch Fader temporarily and change the zero position



# **Performance Pads**

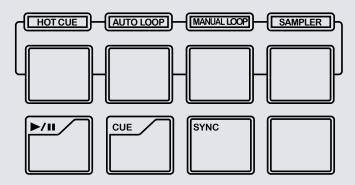

The performance pads have eight different modes you can select. The first four modes are; Hot Cue Mode (1-4), Auto Loop Mode, Manual Loop Mode and Sampler Mode. The second four modes; Hot Cue Mode (5-8), Roll, Cue Loop and Bank can be accessed by holding the **SHIFT** pad and pressing one of the Pad modes.

- Hot Cue (1-4) Mode: When pressing pads 1-4 you can add up to 4 Cue Points. Holding SHIFT and pressing pads 1-4 will delete the Cue Points.
- Auto Loop Mode: When pressing pads 1-4 you can activate an Auto Loop. (SEE LOOPING FOR MORE INFORMATION)
- Manual Loop Mode: The IN (Pad 1) and OUT (Pad 2) pads place the IN and OUT points of a manual loop. EXIT (PAD 3) will turn loop ON/OFF and 1/2X pad (Pad 4) will halve the loop length. (SEE LOOPING FOR MORE INFORMATION)
- Sampler Mode: Pads 1-4 Trigger Samples loaded in your Sample Banks. Holding SHIFT and pressing pads 1-4 will stop your samples. Or it will load the highlighted track in the library to that associated sample slot if they are empty.

The next four modes are activated by holding SHIFT and pressing the pad mode selection button. The next four modes are; Hot Cue Mode (5-8), Loop Roll Mode, Hot Loop Mode and Sampler Bank Mode.

- Hot Cue (5-8) Mode: When pressing pads 1-4 you can add up to 4 Cue Points. Holding SHIFT and pressing pads 1-4 will delete the Cue Points.
- Loop Roll Mode: When pressing pads 1-4 you can activate a loop roll. (SEE LOOPING FOR MORE INFORMATION)
- Cue Loop Mode: When pressing pads 1-4 it will triggers or set Cue points and enable an Auto Loop with the Cue point at it's start. Pressing pads 1-4 again will disable loop. Pressing Pad 4 while in this mode will 1/2 the current loop.
- Sampler Bank Mode: When pressing pads 1-4 you can cycle through SP-6 Sample Banks. Holding SHIFT and pressing pads 1-3 will change the sample player output and pad 4 will turn the SP-6 mute ON/OFF.

# **Pad Trans**

Press the PAD TRANS button (25) to enable pad transform. Once PAD TRANS is enabled, pressing the 1-4 performance pads will apply a transform effect over your audio at different values depending on which performance pad you hold down. The transform value will be relative to your tracks Beatgrid and/or BPM and will apply the effect post-fader (master output).



# Looping

You have the choice of Auto or Manual Looping within Serato DJ with the Pioneer DDJ-SB2.

**NOTE** You can also save a loop to the next available free loop slot in the software. To do this, click 
on an available loop slot. Your loops are saved to the file and recalled the next time it is loaded. They are not lost if the file is moved or renamed.

**Auto Loop Mode** 

DDJ-SB2 Control	Serato DJ function	Shift	
PAD 1	Auto Loop 1 Bar ON/OFF	1/2 Loop Length	
PAD 2	Auto Loop 2 Bar ON/OFF	2x Loop Length	
PAD 3	Auto Loop 4 Bar ON/OFF	Loop Shift Left (Up)	
PAD 4	Auto Loop 8 Bar ON/OFF	Loop Shift Right (Down)	

### **Manual Loop Mode**

DDJ-SB2 Control	Serato DJ function	Shift
PAD 1	Set loop in point (Loop not active)/Adjust loop in point (Loop active)	Not Mapped
PAD 2	Set loop out point (Loop in point set)/Adjust loop out point (Loop active)	Not Mapped
PAD 3	Reloop / Loop Exit	Loop ON/OFF
PAD 4	Halve Loop Length	Double Loop Length

### **Loop Roll Mode**

DDJ-SB2 Control	Serato DJ function	Shift
PAD 1	Loop Roll 1/8 Bar	Not Mapped
PAD 2	Loop Roll 1/4 Bar	Not Mapped
PAD 3	Loop Roll 1 Bar	Not Mapped
PAD 4	Loop Roll 2 Bar	Not Mapped

### **Cue Loop Mode**

DDJ-SB2 Control	Serato DJ function	Shift	
PAD 1	Play from Cue 1 and engage loop	Not Mapped	
PAD 2	Play from Cue 2 and engage loop	Not Mapped	
PAD 3	Play from Cue 3 and engage loop	Not Mapped	
PAD 4	Play from Cue 4 and engage loop	Not Mapped	



# DJ-FX

The DJ-FX in Serato DJ are powered by iZotope™. Click the FX tab open the FX panel. Select either 1, 2, 3, 4 or M to assign the selected effect bank to a deck or Master Output.

There are two available modes in the DJ-FX. Single FX Mode allows you to select one effect per FX bank, and has multiple parameters that can be adjusted. Multi FX Mode allows you to select up to three effects per FX bank, and adjust only one parameter, the FX Depth. The same effects available in Single FX mode are available in Multi FX mode, as well some additional presets.

You can select between the two FX modes by clicking either the Single FX

mode button

or Multi FX mode button

DDJ-SB2 Control	Single FX Mode	Multi FX Mode	Shift
FX 1 BUTTON	Effect On/Off	Slot 1 Effect On/Off	Slot 1 Select Effect
FX 2 BUTTON	Adjust FX parameter 2	Slot 2 Effect On/Off	Slot 2 Select Effect
FX 3 BUTTON	Adjust FX parameter 3	Slot 3 Effect On/Off	Slot 3 Select Effect
FX KNOBS	Adjust FX Parameter (1-3)	Adjust FX Parameter (1-3)	Adjust Beats Multiplier

# **MIDI**

The MIDI feature in Serato DJ provides the ability to remap Serato DJ software functions to your primary Serato DJ controller, interface or mixer. You can also assign controls to a secondary MIDI controller to further enhance your performance.

For more information on MIDI mapping with Serato DJ click here.

To remap your supported Serato DJ device, open the **SETUP** screen and click the **MIDI** tab. If your Serato DJ device supports hardware remapping it will show up in the **MIDI Devices** list at the top.

Select your connected device from the MIDI Devices list and make sure the "Allow Serato Hardware Remapping" option is checked.

### Allow Serato Hardware Remapping

Once checked, the MIDI assign button at the top of the screen will become available for you to start remapping.

### MIDI

You can save, edit or delete MIDI presets in the **MIDI** tab of the **SETUP** screen. Clicking '**Restore Defaults**' will erase any custom mappings for all connected devices and revert their functions back to default.

Download the Serato DJ software manual for further information.

**NOTE:** Official Serato Accessories do not currently support user remapping. Hardware features that cannot be remapped at this stage are Jogwheels/ Platters, Input Switches, Shift buttons and Performance Pad Mode buttons. Re-mapping any pad(s) in Hot Cue mode will also re-map the same pad in Saved Flip mode and vice versa.

**NOTE:** While in **PAD TRANS** mode, performance pads are not currently able to be mapped. Mappings will be erased once PAD TRANS is turned off.



# **Using the Tool Tips**

Click on the icon to enable Tool Tips. This is located in between the MIDI and setup button in the top right hand corner of the screen. Tool Tips provide a handy way to learn the various features of Serato DJ.

Move the mouse over a section of the screen to bring up a context sensitive tool tip. Holding the mouse over the button with Tool Tips turned on will show you a list of all keyboard shortcuts.

For more information about how to use Serato DJ, please go to our website www.serato.com or refer to the Serato DJ Software Manual.

For more information on your controller, please refer to the hardware manual.

For further help, please contact support@serato.com or go to www.serato.com/dj/support

