



# Pioneer DJ DDJ-REV1 Quick-Start Guide

# Setup

## Serato Software

The Pioneer DJ DDJ-REV1 is a “Serato DJ Lite hardware unlocked” device, meaning it works with Serato DJ Lite out of the box.

It is also a “paid upgrade to Serato DJ Pro device”, meaning it requires the purchase & activation of a Serato DJ Pro license, in order to be used with Serato DJ Pro.

You can also try Serato DJ Pro, before making a purchase.

[Click here to learn about buying or activating Serato DJ Pro](#)

or

[Click here to learn about trying Serato DJ Pro](#)


**Please ensure you have the latest version of Serato DJ Lite installed:**

[Click here to download Serato DJ Lite](#)

## Driver Software


The Pioneer DJ DDJ-REV1 does not require manufacturer specific drivers on either macOS or Windows operating systems, simply connect your DDJ-REV1 with a USB cable to your computer, and launch the latest version of Serato DJ Lite.

## Overview

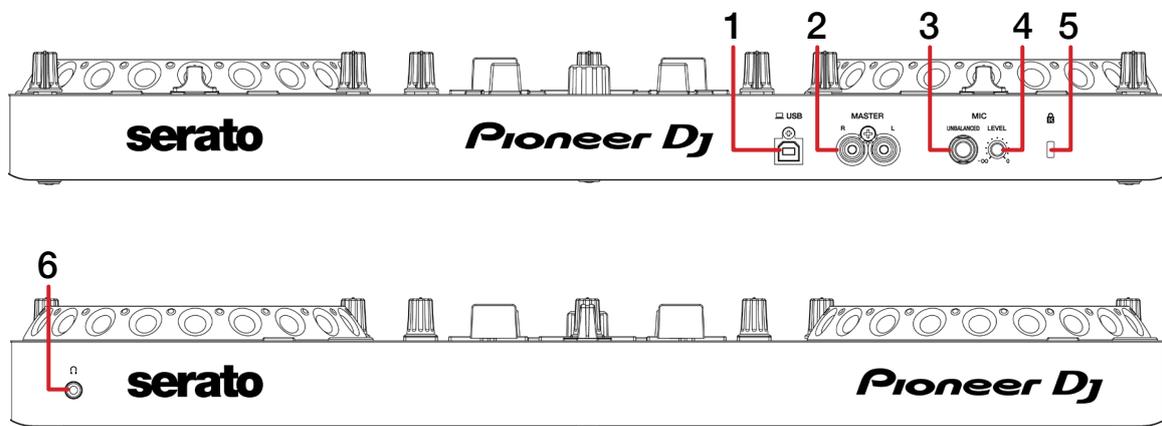

#	DDJ-REV1 CONTROL	FUNCTION
1	USB	Connect USB cable to PC
2	MASTER	Master output (RCA) to speakers
3	MIC (UNBALANCED)	Microphone input (TRS)
4	MIC (LEVEL)	Adjust microphone input level
5	KENSINGTON LOCK	Secure device
6	HEADPHONES	Connect headphones via 3.5mm audio output


# Overview

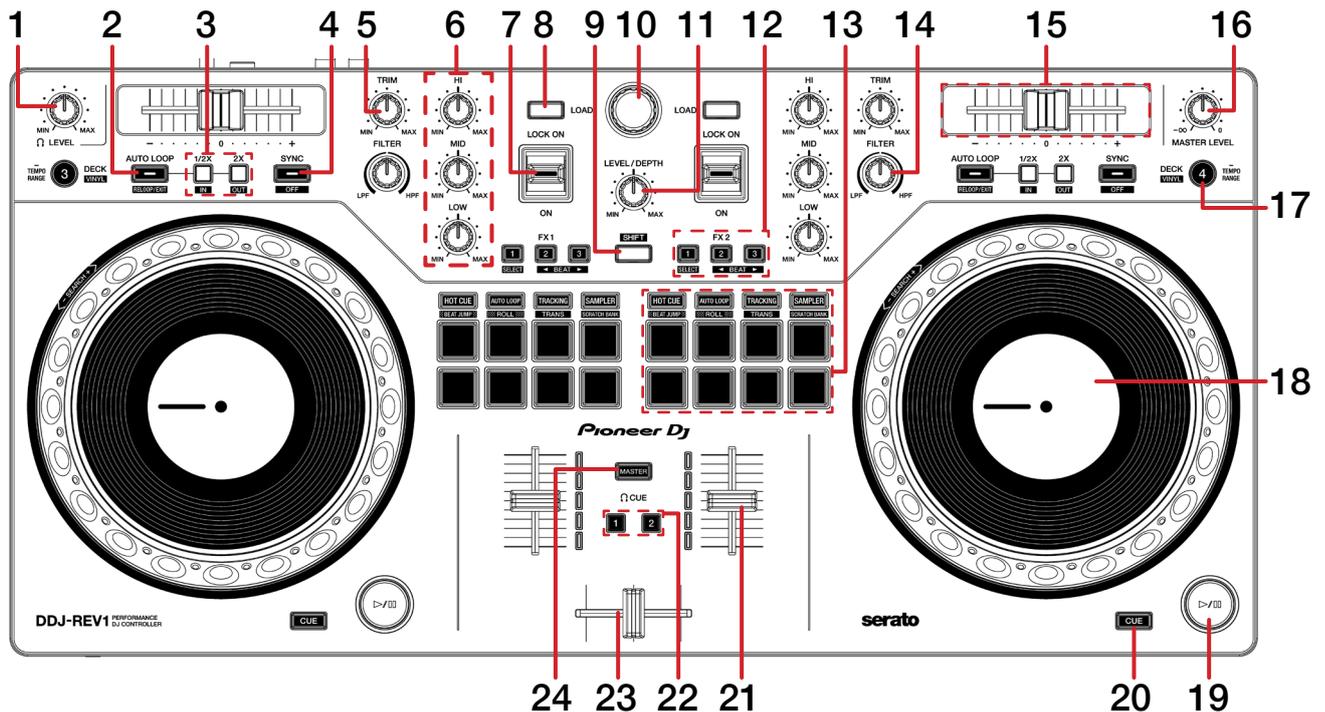

#	DDJ-REV1 CONTROL	FUNCTION	SHIFT FUNCTION
1	HEADPHONE LEVEL	Adjust headphone output level	-
2	AUTO LOOP	Enable/disable 4 beat loop	Jumps playhead to start of and enables current or last active loop or press again to exit active loop
3	1/2X - 2X	Half active loop length / Double active loop length	Set or Edit Loop in point / Set or Edit Loop out point
4	SYNC	Press to turn SYNC on	Disable Sync
5	TRIM	Adjust channel gain	-
6	EQ SECTION	Adjust channel equalizer (HI, MID, LOW)	-
7	FX PADDLE	Pull down to momentarily engage FX or Pull up to lock FX engage (FX Unit 1 or FX Unit 2)	-
8	LOAD 1 / 2	Load highlighted track to respective deck. Double press to Instant Double	Sort by BPM (left) / Sort by Artist (right)
9	SHIFT	Shift modifier. Hold while using another control for secondary function	-
10	BROWSE	Library Scroll. Press in to toggle forward between track and crate selection	Fast Library scroll. Press in to toggle back between track and crate selection
11	LEVEL / DEPTH	Turn to increase or decrease engaged FX amount	-
12	FX SECTION	<a href="#">SEE FX SECTION FOR MORE INFORMATION</a>	-
13	PERFORMANCE PADS	<a href="#">SEE PERFORMANCE PADS FOR MORE INFORMATION</a>	-
14	FILTER	Low & High pass combo filter (per channel)	-
15	TEMPO SLIDER	Adjust tempo/pitch	-
16	MASTER LEVEL	Adjust Master output level	-
17	DECK	Toggle between deck layer 1/3 or 2/4, per deck	Toggle vinyl mode per deck. Long press to toggle tempo range values
18	JOG WHEEL	Turn jog to pitch bend, or control waveform within Serato DJ in vinyl mode	-
19	PLAY / PAUSE	Toggles Play/Pause on selected deck	Stutter play
20	CUE	Cues from temp cue point/Set temp cue point	Load previous track to deck
21	CHANNEL FADER	Adjust channel volume	-
22	CHANNEL CUE	Press to cue channel for monitoring in headphones	Tap Tempo
23	CROSSFADER	Crossfade audio between channel 1-2	-
24	MASTER	Press to cue master channel for monitoring in headphones	-

# Performance Pads

The Pioneer DJ DDJ-REV1 comes with 8 performance pads, that can be used across 6 different performance pad modes. In all modes, with the exception of Tracking Scratch and Transform, Pad 5 loads the previous track, Pad 6 rewinds the playing track, Pad 7 is fast forward, and Pad 8 censors the playing track. Holding SHIFT while pressing Pad 8 reverses the playing track.

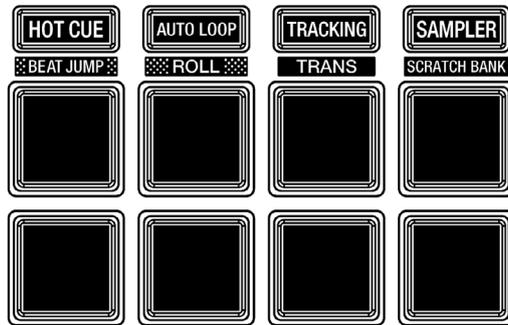

The modes consist of:

**HOT CUE mode:** Pads 1-4 trigger Serato DJ Lite Cue points, and if no Cue point is present on that slot/pad, pressing that pad will set a Cue point. Holding down the SHIFT button while pressing a pad will delete the Cue point from the respective pad/slot.

**AUTO LOOP mode:** Pads 1-4 trigger an autoloop of variable sizes.

**TRACKING mode:** Tracking Scratch mode allows you to automatically trigger Cue points while moving the jog wheel/platter, allowing for 'in-time' scratches without having to worry about perfect jog wheel/platter movements.

After entering Tracking Scratch mode, the corresponding deck will be ready for use, Scratch Tracking then uses the BPM of the opposite deck to determine the timing of the scratches. Pressing Pads 1-6 will select a Crossfader Pattern that is applied to the track on the opposite deck, and pressing the same Pad again will deselect the respective Crossfader Pattern.

Manipulate the jog wheel/platter to initiate Tracking Scratch, using the last triggered Cue point. If no Cue point has been triggered, the first Cue point will be used.

Press Pads 7-8 will half or double the speed of Tracking Scratch mode, for Crossfader Pattern pads 3, 4, or 5.

**SAMPLER mode:** Press pads 1-4 in this mode to trigger samples loaded into the Serato DJ Lite Sampler. Holding **SHIFT** while pressing a Pad will stop a currently playing Sampler slot, or load a new sample to the Sampler slot if empty.

**TRANS mode:** Hold **SHIFT** while pressing the **TRACKING** pad mode button, to enter **Transform** mode. In this mode holding Pads 1-8 triggers a predetermined 'transform' cut on the respective deck.

**SCRATCH BANK mode:** Hold **SHIFT** while pressing the **SAMPLER** pad mode button, to enter **Scratch Bank** mode. This mode allows you to assign files in your Serato DJ Lite library to a Pad. When Pads 1-4 are triggered, the corresponding file will be loaded to deck, allowing you to quickly load useful Scratch samples.

Click the Scratch Bank button  in the top tool bar of Serato DJ Lite to reveal the Scratch Bank Panel. In this panel you can load and eject files from the Scratch Banks, as well as choose the preferences you wish to load to the deck upon triggering the pad. These preferences include the start point of the file, Key Lock on/off and Repeat on/off. Clicking the  button in the top left corner of the panel will change between Advanced and Simple View.

Holding **SHIFT**, while pressing a Scratch Bank Pad that is already loaded to a virtual deck, will reload the previously loaded track to that virtual deck.

# DJ-FX

The DJ-FX in Serato DJ Lite are powered by iZotope™. Click the FX button  to open the FX panel.

 
Serato DJ Lite's Multi FX Mode allows you to select up to three effects per FX bank, and adjust one parameter, the FX Depth.



DDJ-REV1 Control	Multi FX mode	SHIFT function
1	Arm FX Slot 1 (hold with Slot select drop-down open, while turning Browse knob to cycle FX)	FX Select drop-down
2	Arm FX Slot 2 (hold with Slot select drop-down open, while turning Browse knob to cycle FX)	Beats multiplier decrease
3	Arm FX Slot 3 (hold with Slot select drop-down open, while turning Browse knob to cycle FX)	Beats multiplier increase
LEVEL/DEPTH	Increase FX level/depth (all slots)	-

 
## Help

### Show Tooltips

 
Click on the  button in the upper right-hand corner of Serato DJ Lite, then  to enable tooltips. Tool tips provide a handy way to learn the various features of Serato DJ Lite.

Move the mouse over a section of the screen to bring up a context sensitive tool tip.

### Watch Tutorials

Click on the  button in the upper right-hand corner of Serato DJ Lite, then  to launch your default internet browser and watch tutorials, to help you get familiar with Serato DJ Lite.

### Get Support

Click on the  button in the upper right-hand corner of Serato DJ Lite, then  to launch your default internet browser and navigate to the Serato DJ Lite knowledge base, where you can find helpful articles and guides on Serato DJ Lite. Alternatively, type in the   box, with keywords, to search the Serato DJ Lite knowledge base for specific, related topics.