



Numark MixTrack Platinum FX Quick-Start Guide

Setup

Serato Software

The Numark Mixtrack Platinum FX is a “Serato DJ Lite hardware unlocked” device, meaning it works with Serato DJ Lite out of the box.

It is also a “paid upgrade to Serato DJ Pro device”, meaning it requires the purchase & activation of a Serato DJ Pro license, in order to be used with Serato DJ Pro.

You can also try Serato DJ Pro, before making a purchase.

[Click here to learn about buying or activating Serato DJ Pro](#)

or

[Click here to learn about trying Serato DJ Pro](#)


Please ensure you have the latest version of Serato DJ Pro installed:

[Click here to download Serato DJ Pro](#)

Driver Software


The Numark MixTrack Platinum FX does not require manufacturer specific drivers on either Mac & Windows operating systems. Simply connect the device to your PC, and launch the latest version of Serato DJ Pro.

Overview

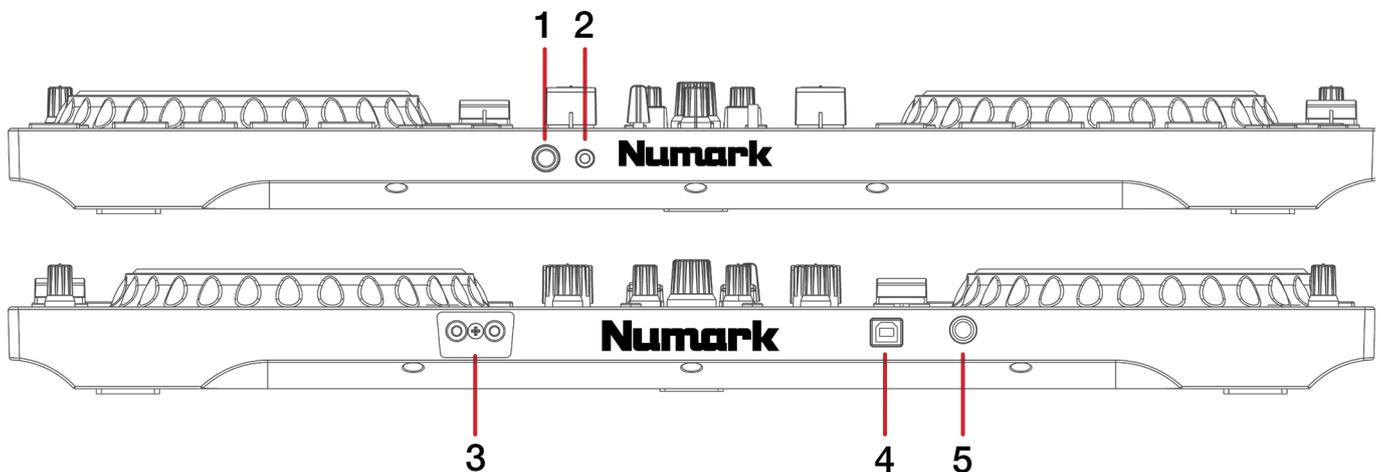

#	MixTrack Platinum FX CONTROL	FUNCTION
1	1/4" HEADPHONE JACK	Connect your 1/4" headphones to this output for cueing
2	1/8" HEADPHONE JACK	Connect your 1/8" headphones to this output for cueing
3	MASTER RCA OUTPUT	Use RCA cables to connect this output to a speaker or powered monitors
4	USB	Connect USB cable to this port from computer
5	MIC	Load selected track to deck 1

Overview

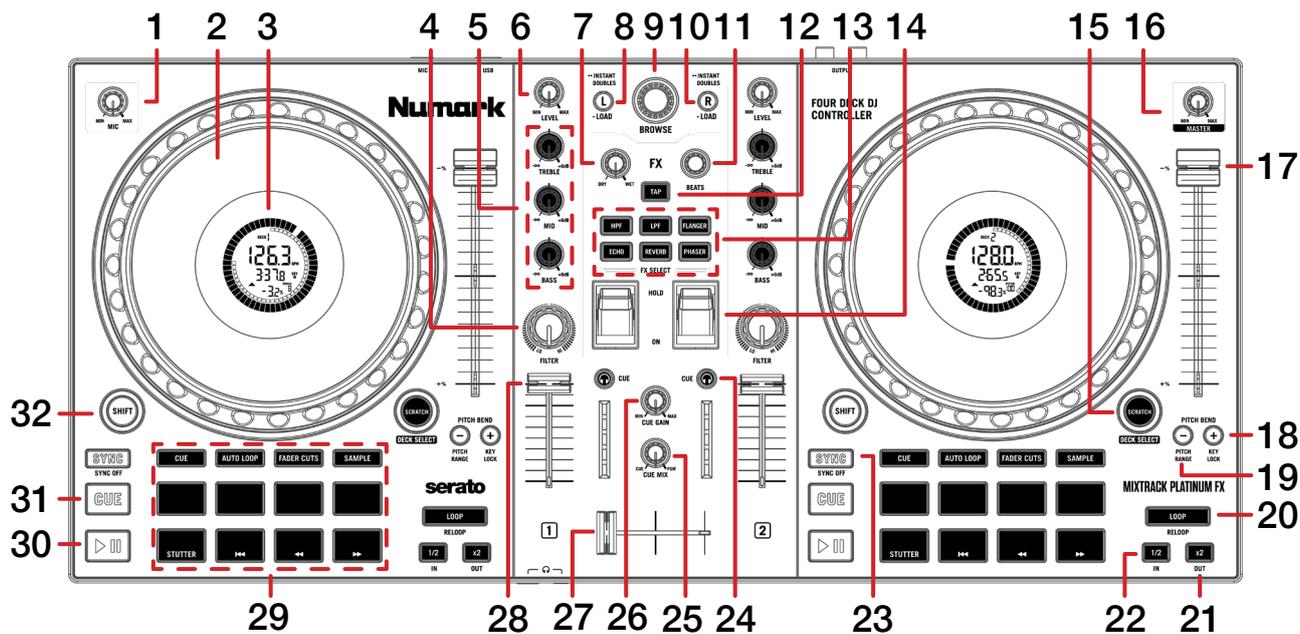


#	MixTrack Platinum FX CONTROL	FUNCTION	Shift
1	MIC VOLUME	Adjust the volume of the Mic	-
2	JOG WHEEL	Control the waveform within Serato DJ Pro	Platter skip
3	JOG WHEEL DISPLAY	Displays track information	-
4	HP/LP FILTER	Channel High and Low pass filter	-
5	CHANNEL EQ	Adjust channel EQ	-
6	CHANNEL LEVEL	Adjust channel gain	-
7	FX DRY/WET	Adjust FX depth parameter	-
8	LOAD CHANNEL 1	Load currently highlighted track to deck 1	-
9	BROWSE	Scroll library or crate list/Library back	Fast scroll/Add to Prepare crate
10	LOAD CHANNEL 2	Load currently highlighted track to deck 2	-
11	BEATS MULTIPLIER	Adjust beats multiplier	-
12	TAP FX TEMPO	Tap to get FX BPM value	-
13	FX SELECT	Loads selected FX to slot 1 (HPF,LPF,ECHO,REVERB,FLANGER, PHASER)	FX select slot 1
14	FX ON/OFF	Turn selected FX on/off	-
15	SCRATCH	Turn scratch mode on/off for the respective platter	Deck select
16	MASTER VOLUME	Adjust the master output volume	-
17	TEMPO SLIDER	Adjust playback tempo of the currently loaded track	Ignore tempo slider
18	PITCH BEND +	Pitch bend forward	Toggle Key Lock
19	PITCH BEND -	Pitch bend backward	Increase pitch range

#	MixTrack Platinum FX CONTROL	FUNCTION	SHIFT
20	LOOP ON/OFF	Enable the selected auto loop value	Reloop/Exit
21	LOOP DOUBLE (X2)	Double the size of the activated loop	Manual Loop Out
22	LOOP HALF (1/2)	Half the size of the activated loop	Manual Loop In
23	SYNC	Turn Sync on for the respective deck	Turn off Sync
24	PFL CUE	Enable to monitor the channel through the headphones	-
25	CUE MIX	Adjust the level of cue and master heard in the headphones	-
26	CUE GAIN	Adjust the volume of the headphones	-
27	CROSSFADER	Fade audio between the channels	-
28	CHANNEL FADER	Adjust channel volume	Fader start
29	PERFORMANCE PADS	SEE PERFORMANCE PAD SECTION FOR MORE INFOMATION	-
30	PLAY/PAUSE	Play or pause the currently loaded track	Stutter Play
31	CUE	Set/play from a tempory cue point	Previous Track
32	SHIFT	Used with other controls that have shift modifier functions	-

Performance Pads

The Numark MixTrack Platinum FX comes with 8 performance pads, that can be used across 6 different performance pad modes. These consist of:

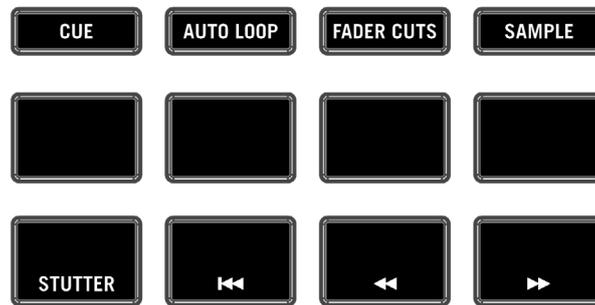

HOT CUE mode: Pads 1-8 trigger Serato DJ Pro Cue points, and if no Cue point is present on that slot/pad, pressing that pad will set a Cue point. Holding down the **SHIFT** button while pressing a pad will delete the Cue point from the respective pad/slot.

SAVED FLIP mode: Hold **SHIFT** while pressing the **HOT CUE** mode button to enter SAVED FLIP mode. This requires the Serato Flip expansion pack activated.

AUTO LOOP mode: Pads 1-8 trigger triggers an autoloop of variable sizes. Use the loop selection area in the Serato DJ Pro user interface, to influence the 8 available autoloop sizes.

FADER CUTS mode: Applies Fader Cuts to track on the corresponding deck. See the Numark Mixtrack Platinum FX Manual for more information.

SAMPLE mode: Press pads 1-8 in this mode to trigger samples loaded into the Serato DJ Pro Sampler.

PITCH PLAY mode: Hold **SHIFT** while pressing the **SAMPLE** mode button to enter PITCH PLAY mode.

This requires the Serato Pitch 'n Time DJ expansion pack activated, see the PITCH PLAY section for more information.

SCRATCH BANK mode: Hold **SHIFT** while pressing the **AUTOLOOP** mode button, to enter Scratch Bank mode. This mode allows you to assign files in your Serato DJ Pro library to a Pad. When Pads 1-8 are triggered, the corresponding file will be loaded to deck, allowing you to quickly load useful Scratch samples. Click the Scratch Bank button  in the top tool bar of Serato DJ Pro to reveal the Scratch Bank Panel. In this panel you can load and eject files from the Scratch Banks, as well as chose the preferences you wish to load to the deck upon triggering the pad. These preference include the start point of the file, Key Lock on/off and Repeat on/off. Clicking the  button in the top left corner of the panel will change between Advanced and Simple View.

Holding **SHIFT**, while pressing a Scratch Bank Pad that is already loaded to a virtual deck, will reload the previously loaded track to that virtual deck.

Pitch Play

Holding **SHIFT** and pressing the **SAMPLE** performance pad mode button on the Numark MixTrack Platinum FX will enable Pitch Play mode. In this mode you can play Cue Points at variable pitches.

The MixTrack Platinum FX has a fixed pitch range. The root key pad (0) is always lit white, which will play the cue point at its regular pitch.

Fixed Range: (Up 3/Down 4 Semitones)

0	+1	+2	+3
-4	-3	-2	-1

PITCH PLAY can only pitch one Cue point at a time. To change the selected Cue, hold the SHIFT button and press a performance pad where the cue point you want to select would be (as shown in the CUES performance pad mode). While holding SHIFT, press the corresponding performance pad for:

Cue 1	Cue 2	Cue 3	Cue 4
Cue 5	Cue 6	Cue 7	Cue 8

The selected cue point defaults to Cue Point 1 on track load, even if instant doubled. If a pad with no cue point is selected, then a new cue point will be created. Deleting a cue point however, is not possible in PITCH PLAY mode.

NOTE: Pitch Play mode is available once the Pitch 'n Time DJ Expansion Pack has been activated in the Expansions window, under the My Account drop-down. Make sure "Enable Pitch 'n Time DJ" is then checked in the Expansion Pack tab of the SETUP screen.

MIDI

The MIDI feature in Serato DJ Pro provides the ability to remap Serato DJ Pro software functions to your primary Serato controller, interface or mixer. You can also assign controls to a secondary MIDI controller to further enhance your performance.

[For more information on MIDI mapping with Serato DJ Pro click here](#)

To remap your supported Serato device, open the SETUP screen and click the MIDI tab. If your Serato device supports hardware remapping, it will show up in the MIDI Devices list at the top.

Select your connected device from the MIDI Devices list and make sure the “Allow Serato Hardware Remapping” option is checked.

Allow Serato Hardware Remapping

Once checked, the MIDI assign button at the top of the screen will become available for you to start remapping.

You can save, edit or delete MIDI presets in the MIDI tab of the SETUP screen. Clicking ‘Restore Defaults’ will erase any custom mappings for all connected devices and revert their functions back to default.

Help

Show Tooltips

Click on the **Help** button in the upper right-hand corner of Serato DJ Pro, then **Show tooltips** to enable tooltips. Tool tips provide a handy way to learn the various features of Serato DJ Pro.

Move the mouse over a section of the screen to bring up a context sensitive tool tip.

Watch Tutorials

Click on the **Help** button in the upper right-hand corner of Serato DJ Pro, then **Watch tutorials** to launch your default internet browser and watch tutorials, to help you get familiar with Serato DJ Pro.

Get Support

Click on the **Help** button in the upper right-hand corner of Serato DJ Pro, then **Get support** to launch your default internet browser and navigate to the Serato DJ Pro knowledge base, where you can find helpful articles and guides on Serato DJ Pro. Alternatively, type in the **Go** box, with keywords, to search the Serato DJ Pro knowledge base for specific, related topics.