

VERSION 1.1.2

QUICK-START GUIDE

PIONEER

DDJ-WeGO

serato



Installation and Setup

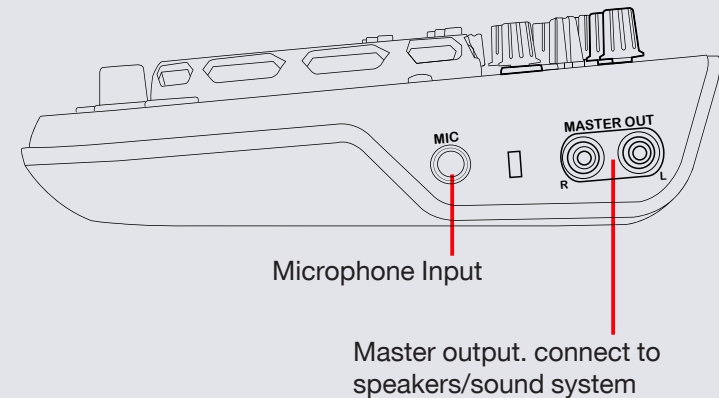
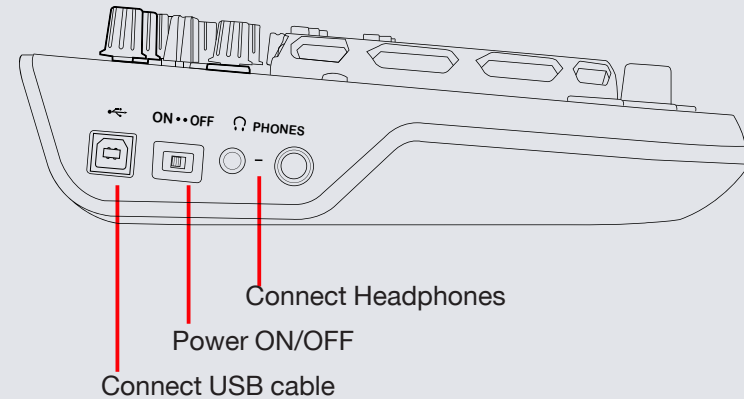
The Pioneer DDJ-WeGO is a class compliant USB plug and play device for Mac, however requires drivers for Windows. You will find these on the installation cd provided with your Pioneer-WeGO.

NOTE: Please ensure you have the latest available drivers AND firmware updates, which may be required in order to be compatible with Serato DJ. Please go to <http://serato.com/dj/support>



1. Download and Install the latest version of Serato DJ from <http://serato.com/dj/downloads>
2. Connect your Pioneer DDJ-WeGO to an available USB Port.
Open Serato DJ.

Serato DJ Activation

To find out how to activate Serato DJ by either starting your free 14 day trial, or purchasing a license for Serato DJ, [click here](#) for the most up to date information.




Looping

You have up to 8 loops per track in Serato DJ, and the choice between either manual or auto loops. You can choose whether you have 4 loops (and 4 cuepoints) showing on screen, or 8 loops. To switch between Manual and Auto looping, click  (Manual) or  (Auto) onscreen.



Looping is controlled by the AUTO LOOP knobs for each deck.

DDJ-WeGo Control	Auto Loop mode
AUTO LOOP (Click)	Auto Loop On/Off
AUTO LOOP (Twist)	Adjust Auto Loop Length
SHIFT + AUTO LOOP (Click)	Loop Roll On/Off

DJ-FX

The DJ-FX in Serato DJ are powered by iZotope™. Click the FX tab  to open the FX panel. Select either 1, 2 or M to assign the selected effect bank to a deck or Master Output.

There are two available modes in the DJ-FX. Single FX Mode allows you to select one effect per FX bank, and has multiple parameters that can be adjusted. Multi FX Mode allows you to select up to three effects per FX bank, and adjust only one parameter, the FX Depth. The same effects available in Single FX mode are available in Multi FX mode, as well some additional presets.

You can select between the two FX modes by clicking either the Single FX mode button  or Multi FX mode button .

DDJ-WeGO Control	Single FX Mode	Shift
CTRL A	Platter Filter On/Off and links platter to filter depth	Disable all FX
FX 1	Effect On/Off and links platter to FX Parameter 1	Select Effect
FX 2	Link platter to FX Parameter 3	
FX 3	Link platter to FX Parameter 5	
CTRL B	Link platter to beats multiplier	Disable all FX

DDJ-WeGO Control	Multi Fx Mode	Shift
CTRL A	Platter Filter On/Off and links platter to filter depth	Disable all FX
FX 1	Slot 1 Effect On/Off and links platter to FX Parameter	Select Effect in Slot 1
FX 2	Slot 2 Effect On/Off and links platter to FX Parameter	Select Effect in Slot 2
FX 3	Slot 3 Effect On/Off and links platter to FX Parameter	Select Effect in Slot 3
CTRL B	Link platter to beats multiplier	Disable all FX

NOTE: The platter can be linked to multiple parameters simultaneously.

Serato Video

Serato Video is a software plugin for Serato Software which adds the ability to playback and mix video files, use effects and fader transitions with your Serato DJ Controller, an additional MIDI controller or your mouse/keyboard.

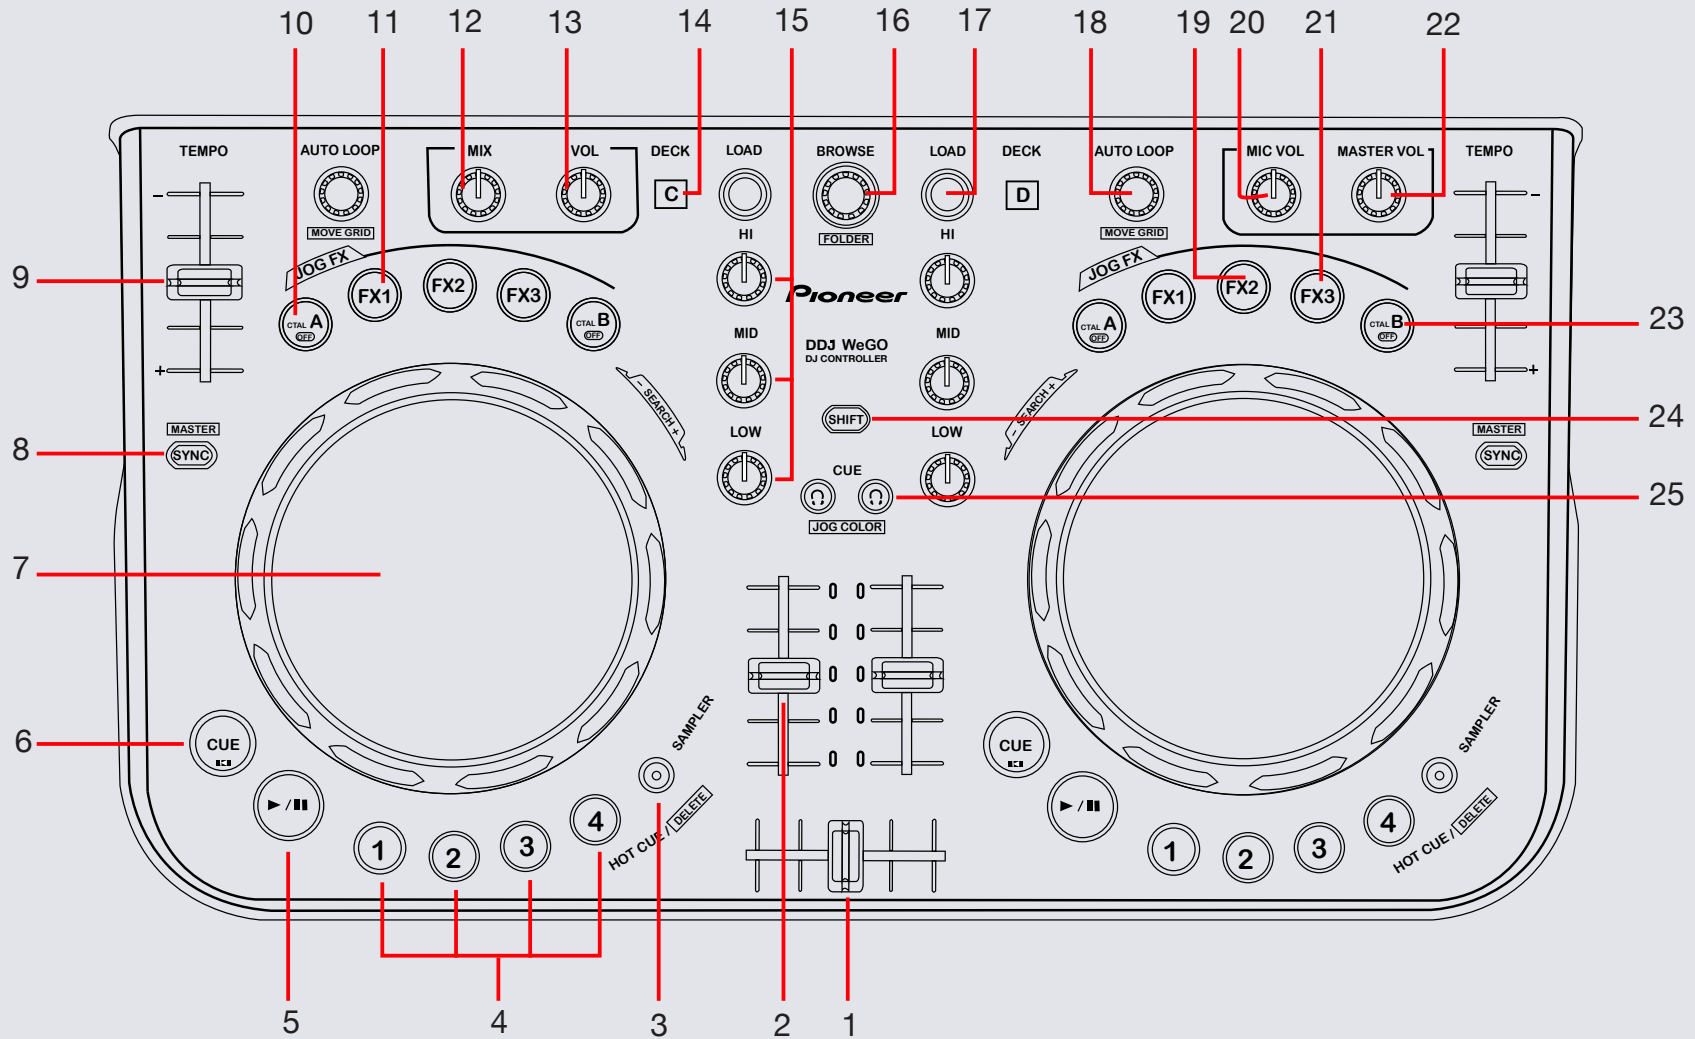
[For more information on Serato Video click here.](#)

MIDI

The MIDI control feature in Serato DJ provides the ability to map Serato DJ software functions to MIDI controller functions such as keyboards, triggers, sliders, and knobs. Integrating MIDI controllers into your Serato DJ setup can improve live performance usability, such as hitting pads on a MIDI controller to trigger Loops and Cue Points.

[For more information download the Serato DJ manual here.](#)

NOTE You can not MIDI Map your Mixtrack Pro, you will need to connect an additional MIDI controller to use these MIDI functions.





NOTE: SHIFT button is used with other buttons that have shift modifier functions

#	Pioneer DDJ-WeGO Control	Serato DJ Function	Shift Function
1	CROSS FADER	Crossfades between the left and right channels	
2	CHANNEL FADERS	Adjusts channel volume	
3	SAMPLER	Enables 1,2,3,4 to trigger Sampler slots	
4	1,2,3,4	Adds and triggers Cue Points/Triggers Sampler Slots	Delete Cue Points/Stop Sampler Slots
5	PLAY/PAUSE	Play/Pause	Stutter Play
6	CUE	Add or Jump to Temporary Cue	Jump to start of track (more than 2 sec elapsed) Previous track (less than 2 sec elapsed)
7	PLATTER	Touch the top to scratch or pitch bend. Moving the outside of the wheel will bend pitch of your track.	Beat Skip
8	SYNC	Sync On	Sync Off (Press twice to return to Absolute Pitch when in Relative Mode)
9	TEMPO FADER	Adjust Tempo	When in Sync mode, used to disable the Pitch Fader temporarily and change the zero position
10	CTRL A	Platter Filter On/Off and links platter to filter depth	Disable all FX
11	FX 1	Slot 1 Effect On/Off and links platter to FX Parameter	Select Effect in Slot 1
12	CUE MIX	Adjusts between Cue and Master in your headphones	
13	CUE VOL	Adjust headphone output	
14	DECK C & D	Select Active Deck 1/3 (Left Deck) or 2/4 (Right Deck)	
15	CHANNEL EQ	Adjust HI, MID and LOW	Adjust Platter Color
16	BROWSE	Scroll through library/crates.	Fast scroll
17	LOAD A/B	Load selected track to deck	Eject track from deck
18	AUTO LOOP	Auto Loop ON/OFF (click)/Adjust Auto Loop Length (twist)	Loop Roll On/Off (Click)/Adjust Beatgrid (Twist)

#	Pioneer DDJ-WeGO Control	Serato DJ Function	Shift Function
19	FX 2	Slot 2 Effect On/Off and links platter to FX Parameter	Select Effect in Slot 2
20	MIC VOL	Adjust Mic Level	
21	FX 3	Slot 3 Effect On/Off and links platter to FX Parameter	Select Effect in Slot 2
22	MASTER VOL	Controller master output volume	
23	CONTROL B	Link platter to beats multiplier	Disable all FX
24	SHIFT	SHIFT button is used with other buttons that have shift modifier functions	
25	CUE	Cue selected channel in headphones	Changes Jog Wheel Color

Using the Tool Tips

Click on the  icon to enable Tool Tips. This is located in between the MIDI and setup button in the top right hand corner of the screen. Tool Tips provide a handy way to learn the various features of Serato DJ.

Move the mouse over a section of the screen to bring up a context sensitive tool tip. Holding the mouse over the  button with Tool Tips turned on will show you a list of all keyboard shortcuts.

For more information about how to use Serato DJ, please go to our website www.serato.com or refer to the Serato DJ Software Manual. For more information on your controller, please refer to the hardware manual.

For further help, please contact support@serato.com or go to www.serato.com/dj/support