

# QUICK-START GUIDE

# RELOOP TERMINAL MIX 2

serato



# Installation and Setup


The Reloop Terminal Mix 2 is a class compliant USB plug and play device for Mac, however requires drivers for Windows. You will find these on the installation cd provided within your Reloop Terminal Mix 2.


**NOTE:** Please ensure you have the latest available drivers AND firmware updates, which may be required in order to be compatible with Serato DJ. Please go to <http://serato.com/dj/support>

1. Download and install the latest version of Serato DJ from <http://serato.com/dj/downloads>
2. After installing drivers, connect your Reloop Terminal Mix 2 to an available USB Port.
3. Open Serato DJ.

# Serato DJ Activation

To find out how to activate Serato DJ by either starting your free 14 day trial, or purchasing a license for Serato DJ, [click here](#) for the most up to date information.

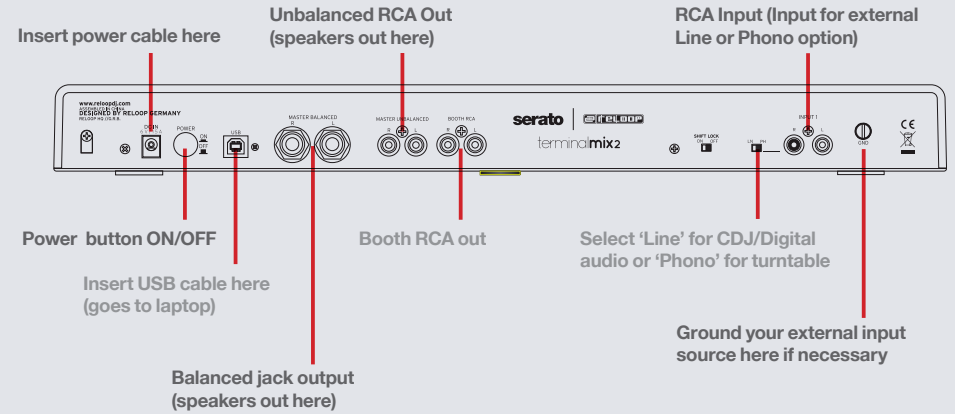

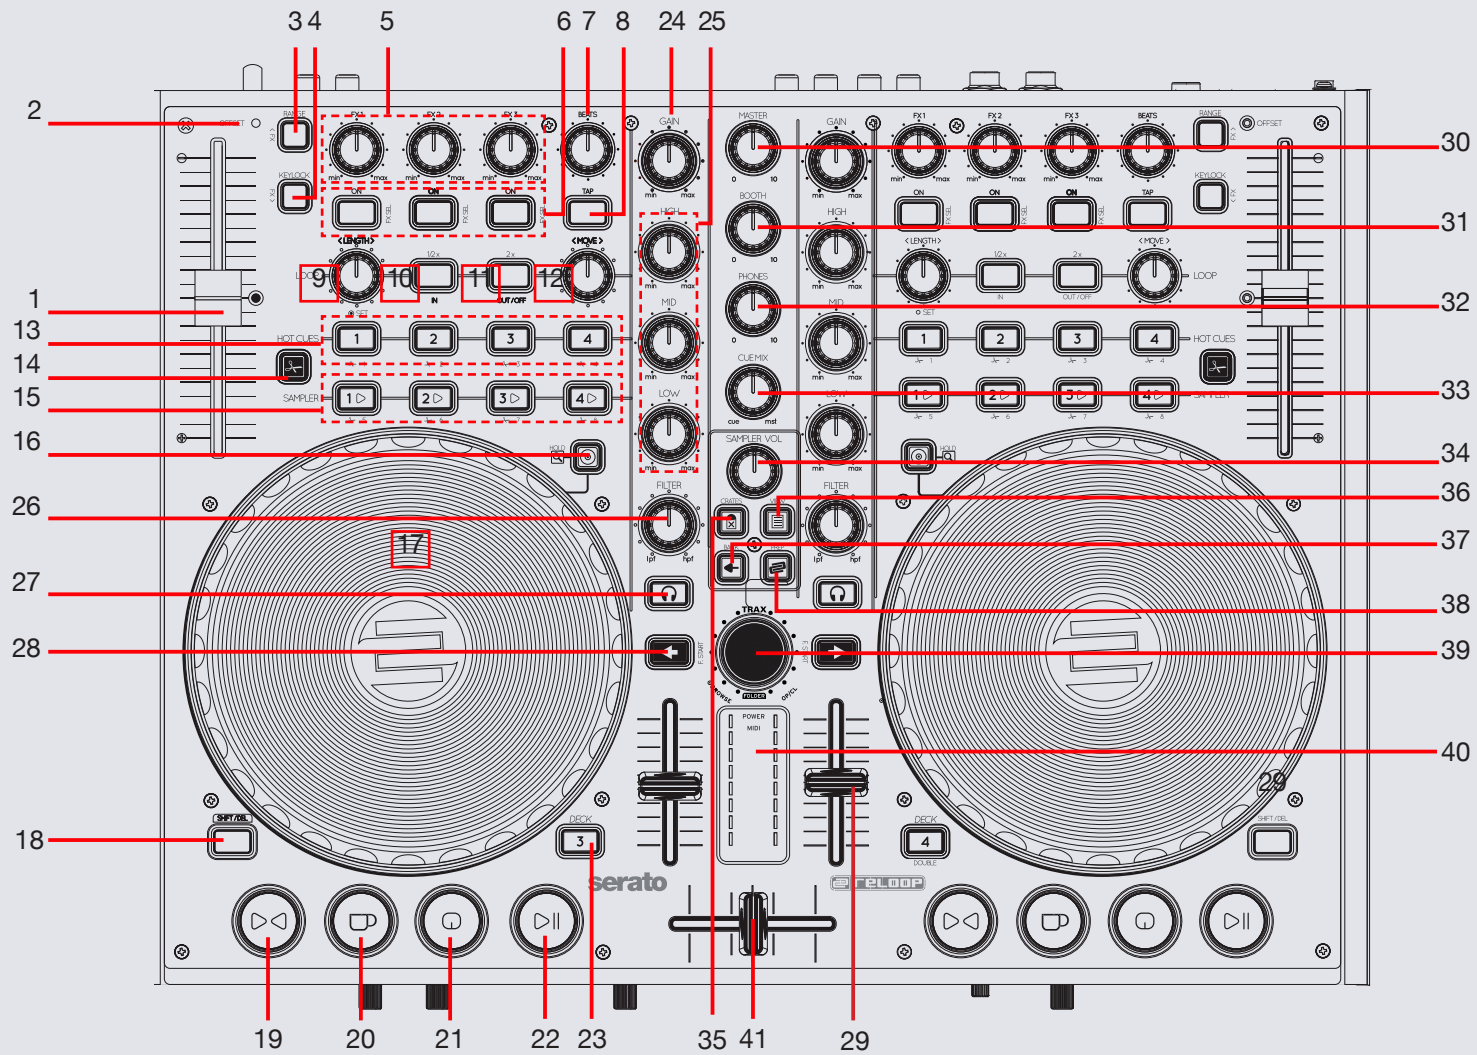

NOTE: SHIFT button is used with other buttons that have shift functions.

#	Reloop Terminal Mix 2 Control	Serato DJ Function	Shift Modification
1	TEMPO FADER	Adjust Tempo	When in Sync mode, used to disable the Pitch Fader temporarily and change the zero position
2	OFFSET LED	If you switch the deck and move the pitch fader the value will be stored. The LED shows whether the pitch fader is at its initial value when setting back.	
3	RANGE	Cycles through available Tempo Range options	Assign FX UNIT 1 to Active Deck
4	KEYLOCK	Keylock On/Off	Assign FX UNIT 2 to Active Deck
5	FX 1-3 (Knobs)	Adjust Slots 1-3 FX Parameters	
6	FXSEL 1-3 (Buttons)	Slots 1-3 Effect On/Off	
7	BEATS	Beats Multiplier	
8	TAP (Button)	Tap to the desired FX tempo. To return to AUTO mode, press and hold	
9	LOOP LENGTH (Knob)	Auto Loop On/Off or Exit Manual Loop (Click Knob) Auto Loop Length (Twist Knob)/Adjust Slicer Quantize Size (When in Slicer Mode)	Loop Roll On/Off(Click Knob) Loop Roll Loop Length (Twist Knob)/Adjust Slicer Domain Size (When in Slicer Mode)
10	1/2X	Halve Loop Length	Loop In/Adjust Loop In Position
11	2X	Double Loop Length	Loop Out/Adjust Loop Out Position
12	MOVE	Loop Shift left/right (Twist Knob) or Reloop (Click Knob)	
13	HOT CUES 1-4	Adds or triggers Cue Points 1-4	Delete Cue Points1-4
14	SCISSORS	Activate Slicer Mode	Activate Slicer Loop
15	SAMPLER 1-3/4	Trigger Samples 1-3 (Left Deck) or 4-6 (Right Deck)/Select Sample Bank	Stop Samples 1-3 (Left Deck) or 4-6 (Right Deck)
16	HOLD	Toggle between Scratch or Jog	Fast Library Scroll
17	JOG WHEEL	Scratch or Jog deck	Beat Skip
18	SHIFT/DEL	SHIFT button is used with other buttons that have shift modifier functions	
19	SYNC	Sync On	Sync Off (Press twice to return to Absolute Pitch when in Relative Mode)

serato





#	Reloop Terminal Mix 2 Control	Serato DJ Function	Shift Modification
20	CUP	Stutter Play	
21	CUE	Temporary Cue	Jump to start of track (more than 2 Sec elapsed) Previous track (less than 2 sec elapsed)
22	PLAY/PAUSE	Play/Pause	
23	DECK	Select Active Deck 1/3 (Left Deck) or 2/4 (Right Deck)	
24	GAIN	Adjust channel gain	
25	EQ	Adjust Low/Mid/High	
26	FILTER	LP/HP filter combo adjust	
27	CUE CHANNEL	Cue selected channel in headphones	
28	LOAD	Load track to selected deck	Activate Fader Start
29	CHANNEL FADER	Adjusts channel volume	
30	MASTER	Adjusts master volume	
31	BOOTH	Adjusts booth volume	
32	PHONES	Adjusts headphone volume	
33	CUE MIX	Adjusts between Cue and Master in your headphones	
34	SAMPLER VOL	Adjusts the master volume of the sample player	
35	CRATES	Cycle REC/FX/SP-6 Panels	Cycle SP-6/FX/REC panels
36	VIEW	Cycle view modes	Switch between 2 and 4 decks
37	BACK	Toggles focus between library/crates/open panels	
38	PREPARE	Loads track to prepare area	Open Prepare Panel
39	TRAX	Scroll through currently focused area	
40	VU METER	LED representation of Master Output	
41	CROSSFADER	Crossfades between the two channels	

NOTE: #28 LOAD When used with SHIFT, activates Fader Start for each deck. This means the track will stop when the channel fader is down, and the track will start when the channel fader is up. The LOAD button will flash when Fader Start is activated.

serato





## Looping

You have up to 8 loops per track in Serato DJ, and the choice between either manual or auto loops. You can choose whether you have 4 loops (and 4 cuepoints) showing on screen, or 8 loops. To switch between Manual and Auto looping, click  (Manual) or  (Auto) onscreen. You can also halve or double the loop length in either manual or auto modes. Press the 1/2X button to halve the loop length, hold the 2X button to double the loop length, or you can use the Loop Length Knob to do the same.

Reloop Terminal Mix 2 Control	Manual Loop mode
1/2X + SHIFT	Set loop in point (Loop not active)
1/2X + SHIFT	Adjust loop in point (Loop active)
2X + SHIFT	Set loop out point (If loop in point is set)
2X + SHIFT	Adjust loop out point (Loop active)
LENGTH (Click Knob)	Exit Loop (Loop Active)

**NOTE** The best way to edit the in and out points of a manual loop is with the jog wheel/platter on your Reloop Terminal Mix 2.

Reloop Terminal Mix 2 Control	Auto loop mode	Shift
LENGTH (Click Knob)	Auto Loop On/Off	Loop Roll On/Off
LENGTH (Twist Knob)	Loop Length Select	Loop Roll Length Select
MOVE	Loop Shift left/right (Twist Knob) or Reloop (Click Knob)	

**NOTE** You can also save a loop to the next available free loop slot in the software. To do this, either click the  button in the manual/auto loop tab or click  on an available loop slot. Your loops are saved to the file and recalled the next time it is loaded. They are not lost if the file is moved or renamed.


## Slicer

Press the **SCISSORS** button to activate Slicer Mode. Slicer Mode is when a specified range (or domain) is divided into eight equal sections, and these eight sliced sections are assigned to the respective **HOT CUE** buttons 1-4 and **SAMPLER** buttons 1-4. When the playhead reaches the end of the Slicer Domain, the entire Domain will shift to the right.



When in Slicer Mode, turn the **LOOP LENGTH** knob to set the quantization for the slicer function. The quantization can be set in four ways: 1/8, 1/4, 1/2 and 1. Hold **SHIFT** and turn the **LOOP LENGTH KNOB** to set the domain. The domain can be set to one of six settings: 2 beats, 4 beats, 8 beats, 16 beats, 32 beats or 64 beats.

**NOTE:** Beatgrids are required on your tracks in order to use Slicer Mode.

# DJ-FX

The DJ-FX in Serato DJ are powered by iZotope™. Click the FX tab  to open the FX panel. Select either 1, 2, 3, 4 or M to assign the selected effect bank to a deck or Master Output. To activate an effect, click the ON button on your FX UNIT in the software, or the FX1 ON button on your controller. You can adjust effect parameters by using either software controls, or the FX1/FX2/FX3 and FXSEL knobs/buttons on the controller.

There are two available modes in the DJ-FX. Single FX Mode allows you to select one effect per FX bank, and has multiple parameters that can be adjusted. Multi FX Mode allows you to select up to three effects per FX bank, and adjust only one parameter, the FX Depth. The same effects available in Single FX mode are available in Multi FX mode, as well some additional presets.

You can select between the two FX modes by clicking either the Single FX mode button  or Multi FX mode  button

Reloop Terminal Mix 2 Control	Single FX Mode	Multi FX Mode
Reloop Terminal Mix 2 Control	Single FX Mode	Multi FX Mode
TAP	Tap to the desired FX tempo. To return to AUTO mode, press and hold	Tap to the desired FX tempo. To return to AUTO mode, press and hold
SHIFT + FXSEL 1-3 Buttons	Select Effect	Select Effect in Slots 1-3
FXSEL 3 Button	Adjust Parameter 4	Slot 3 Effect On/Off
FXSEL 2 Button	Adjust Parameter 2	Slot 2 Effect On/Off
FXSEL 1 Button	Effect On/Off	Slot 1 Effect On/Off
FX3 Knob	Adjust Parameter 5	Adjust Slot 3 FX Parameter
FX2 Knob	Adjust Parameter 3	Adjust Slot 2 FX Parameter
FX1 Knob	Adjust Parameter 1	Adjust Slot 1 FX Parameter
BEATS	Adjust Beats Multiplier	Adjust Beats Multiplier

\*NOTE:\* Use SHIFT + RANGE to assign FX UNIT 1 to the Active Deck. Use SHIFT + KEYLOCK to assign FX UNIT 2 to the Active Deck.

# SERATO VIDEO

Serato Video is a software plugin for Serato Software which adds the ability to playback and mix video files, use effects and fader transitions with your Serato DJ Controller, an additional MIDI controller or your mouse/keyboard.

For more information on Serato Video go to <http://serato.com/video>

# MIDI

The MIDI control feature in Serato DJ provides the ability to map Serato DJ software functions to MIDI controller functions such as keyboards, triggers, sliders, and knobs. Integrating MIDI controllers into your Serato DJ setup can improve live performance usability, such as hitting pads on a MIDI controller to trigger Loops and Cue Points.

For more information download the Serato DJ manual by going to <http://serato.com/dj/downloads>


NOTE: You can not MIDI Map your Reelock Terminal Mix 2, you will need to connect an additional MIDI controller to use these MIDI functions.


**serato**





## Using the Tool Tips

Click on the  icon to enable Tool Tips. This is located in between the MIDI and setup button in the top right hand corner of the screen. Tool Tips provide a handy way to learn the various features of Serato DJ.

Move the mouse over a section of the screen to bring up a context sensitive tool tip. Holding the mouse over the  button with Tool Tips turned on will show you a list of all keyboard shortcuts.

For more information about how to use Serato DJ, please go to our website [www.serato.com](http://www.serato.com) or refer to the Serato DJ Software Manual. For more information on your controller, please refer to the hardware manual.

For further help, please contact [support@serato.com](mailto:support@serato.com) or go to [www.serato.com/dj/support](http://www.serato.com/dj/support)

**serato**

