

QUICK-START GUIDE

RELOOP BEATMIX 4

serato



DJ INTRO

Installation and Setup

The Reloop Beatmix 4 is a class compliant USB plug and play device and requires no further driver installation.

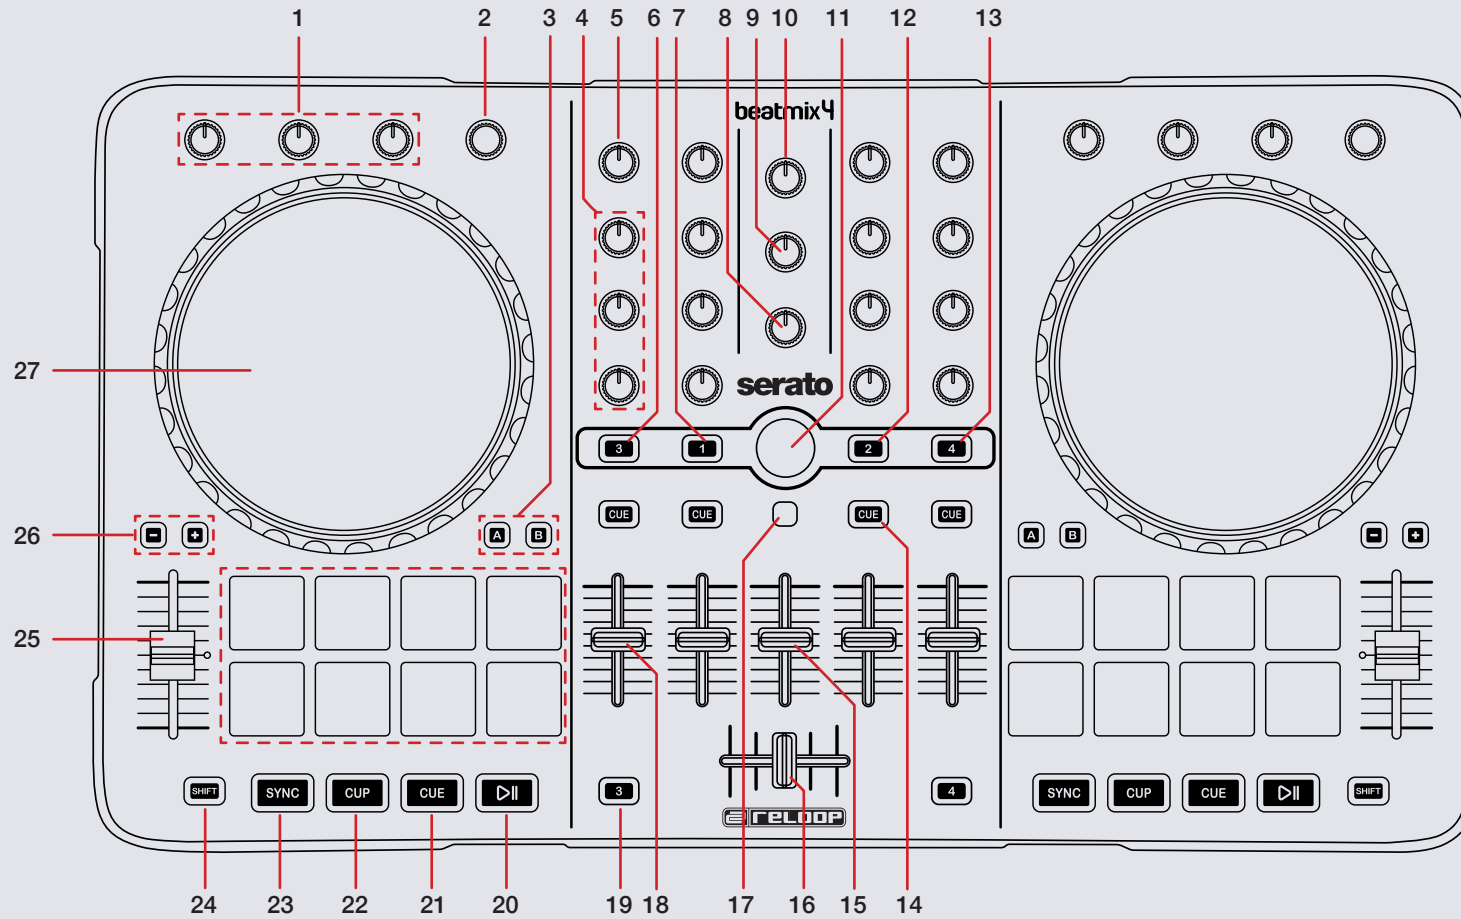
1. Download and install the latest version of Serato DJ Intro from <http://serato.com/dj-intro/downloads>
2. Connect your Reloop Beatmix 4 to an available USB Port.
3. Open Serato DJ Intro.

serato



DJ INTRO

Controller



#	Reloop Beatmix 4 Control	Serato DJ Function	Shift Function
1	FX UNIT	Adjust Slots 1-3 FX Parameters	Turn to select FX for slots 1-3
2	BEATS	Turn to adjust beats value for FX / Tap to the set FX tempo. To return to AUTO mode, press and hold	
3	PAD MODE	Alternate between different performance pad modes or split mode	
4	EQ	Adjust Low/Mid/High	
5	GAIN	Adjust channel gain	
6	3	Load track to deck 3	Use to activate channel fader start
7	1	Load track to deck 1	Use to activate channel fader start
8	CUE MIX	Adjusts between Cue and Master in your headphones	
9	PHONES	Adjusts headphone volume	
10	MASTER	Adjusts master volume	
11	LIBRARY SCROLL	Scroll through currently focused area. Press to navigate forward through open panels	
12	2	Load track to deck 2	Use to activate channel fader start
13	4	Load track to deck 4	Use to activate channel fader start
14	CUE	Cue selected channel in headphones	
15	SAMPLER	Adjusts sampler volume	
16	CROSSFADER	Crossfades between the two channels	
17	BACK	Press to navigate backward through open panels	
18	CHANNEL FADER	Adjusts channel volume	
19	DECK	Use to swap the deck layer so you can control decks 3 & 4	
20	PLAY/PAUSE	Play/Pause	
21	CUE	Temporary Cue	Jump to start of track (more than 2 Sec elapsed) Previous track (less than 2 sec elapsed)



#	Reloop Beatmix 4 Control	Serato DJ Function	Shift Function
22	CUP	Stutter Play	Press to change range of pitch fader
23	SYNC	Sync On	Sync Off
24	SHIFT	SHIFT button is used with other buttons that have shift modifier functions	
25	PITCH FADER	Adjust Tempo of playing track	When in Sync mode, used to disable the Pitch Fader temporarily and change the zero position
26	PITCH	Use to pitch bend playing track up or down	
27	PLATTER	Scratch or Jog deck	Beat skip



Performance Pads

There are multiple performance pad modes for the Reelock Beatmix 4. You can alternate between all 3 by using the PAD MODE buttons.

Pad Mode A

In this mode pads 1-4 set and trigger HOT CUES. If you press pads 1-4 with SHIFT held you can delete the cues you have already set. Pads 5-8 set AUTO LOOPS of 1,2,4 and 8 bars from left to right. When pads 5-8 are pressed with SHIFT they perform other looping functions. 5 performs loop on / off, 6 halves the loop length, 7 doubles the loop length and 8 is reloop.

Pad Mode B

In this mode pads 1-4 play samples 1-4 in the sample bank. Pads 5-8 will stop samples 1-4 from playing. When pads 5-8 are pressed with SHIFT they will eject the samples from each SP6 sample slot.

Pad Mode SPLIT

In this mode pads 1-4 set and trigger HOT CUES. If you press pads 1-4 with SHIFT held you can delete the cues you have already set. Pads 5-8 play samples 1-4 in the sample bank.



DJ-FX

 
You can have up to three different effects active per virtual deck within Serato DJ Intro with the Reloop Beatmix 4.

 
Reloop Beatmix 4 Control	Single FX mode	Shift
FX 1	Adjust Slot 1 Parameter & Effect On/Off when knob is turned	Select Effect in Slot 1
FX 2	Adjust Slot 2 Parameter & Effect On/Off when knob is turned	Select Effect in Slot 2
FX 3	Adjust Slot 3 Parameter & Effect On/Off when knob is turned	Select Effect in Slot 3

The effect time is set using the tracks BPM value, but by applying the Beats Multiplier you can increase or decrease the effect timing. Modify this by using the **BEATS** knob on the controller. Automatic tempo requires that the track on the deck assigned to the FX Unit has BPM information. Manual tempo mode allows you to tap in the tempo yourself.

NOTE: To change to Manual Tempo mode, simply tap the **BEATS** knob until a desired rate is established. To return to AUTO mode, click and hold **BEATS** for 1 second.

Using the Tool Tips

Click on the  icon to enable Tool Tips. This is located in next to the setup button in the top right hand corner of the screen. Tool Tips provide a handy way to learn the various features of Serato DJ Intro.

Move the mouse over a section of the screen to bring up a context sensitive tool tip. Holding the mouse over the  button with Tool Tips turned on will show you a list of all keyboard shortcuts.

For more information about how to use Serato DJ Intro, please go to our website www.serato.com or refer to the Serato DJ Intro Software Manual. For more information on your controller, please refer to the hardware manual.

For further help, please contact support@serato.com or go to www.serato.com/dj-intro/support

serato



DJ INTRO