

QUICK-START GUIDE

PIONEER DDJ-SZ

serato



Installation and Setup


The Pioneer DDJ-SZ is a class compliant USB plug and play device for Mac, however requires drivers for Windows. You will find these on the installation CD provided with your Pioneer DDJ-SZ.

NOTE: Please ensure you have the latest available drivers AND firmware updates, which may be required in order to be compatible with Serato DJ. Please go to <http://serato.com/dj/support>

1. Download and install the latest version of Serato DJ from <http://serato.com/dj/downloads>
2. Connect your Pioneer DDJ-SZ to an available USB Port.
3. Open Serato DJ.


NOTE: The Pioneer DDJ-SZ does not require a Serato DJ license purchase. When you first download Serato DJ you will see the MY SERATO panel appear on the right hand side for you to manage your Serato DJ licenses and Expansion Packs.

Simply tick the box DO NOT SHOW AGAIN in the bottom right hand corner, then click on **My Serato** which will hide this panel. Serato DJ will remember these settings for when you next open the software.

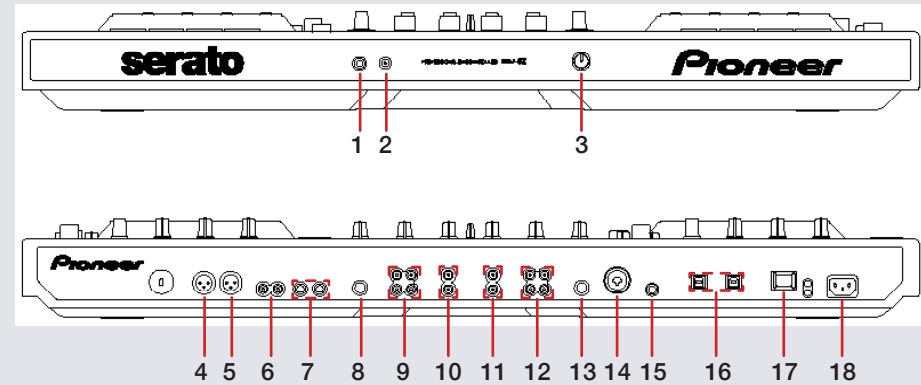

#	Pioneer DDJ-SZ Control	
1	HEADPHONE OUTPUT	12 CH3 PHONO/LINE INPUT
2	HEADPHONE OUTPUT	13 GROUND TERMINAL
3	CROSSFADER CURVE ADJUST	14 MIC 1
4	MASTER OUTPUT (XLR)	15 MIC 2
5	MASTER OUTPUT (XLR)	16 USB
6	MASTER OUTPUT (RCA)	17 STANDBY/ON
7	BOOTH OUTPUT (TRS)	18 POWER IN
8	GROUND TERMINAL	
9	CH4 PHONO/LINE INPUT	
10	CH2 CD INPUT	
11	CH1 CD INPUT	

Controller

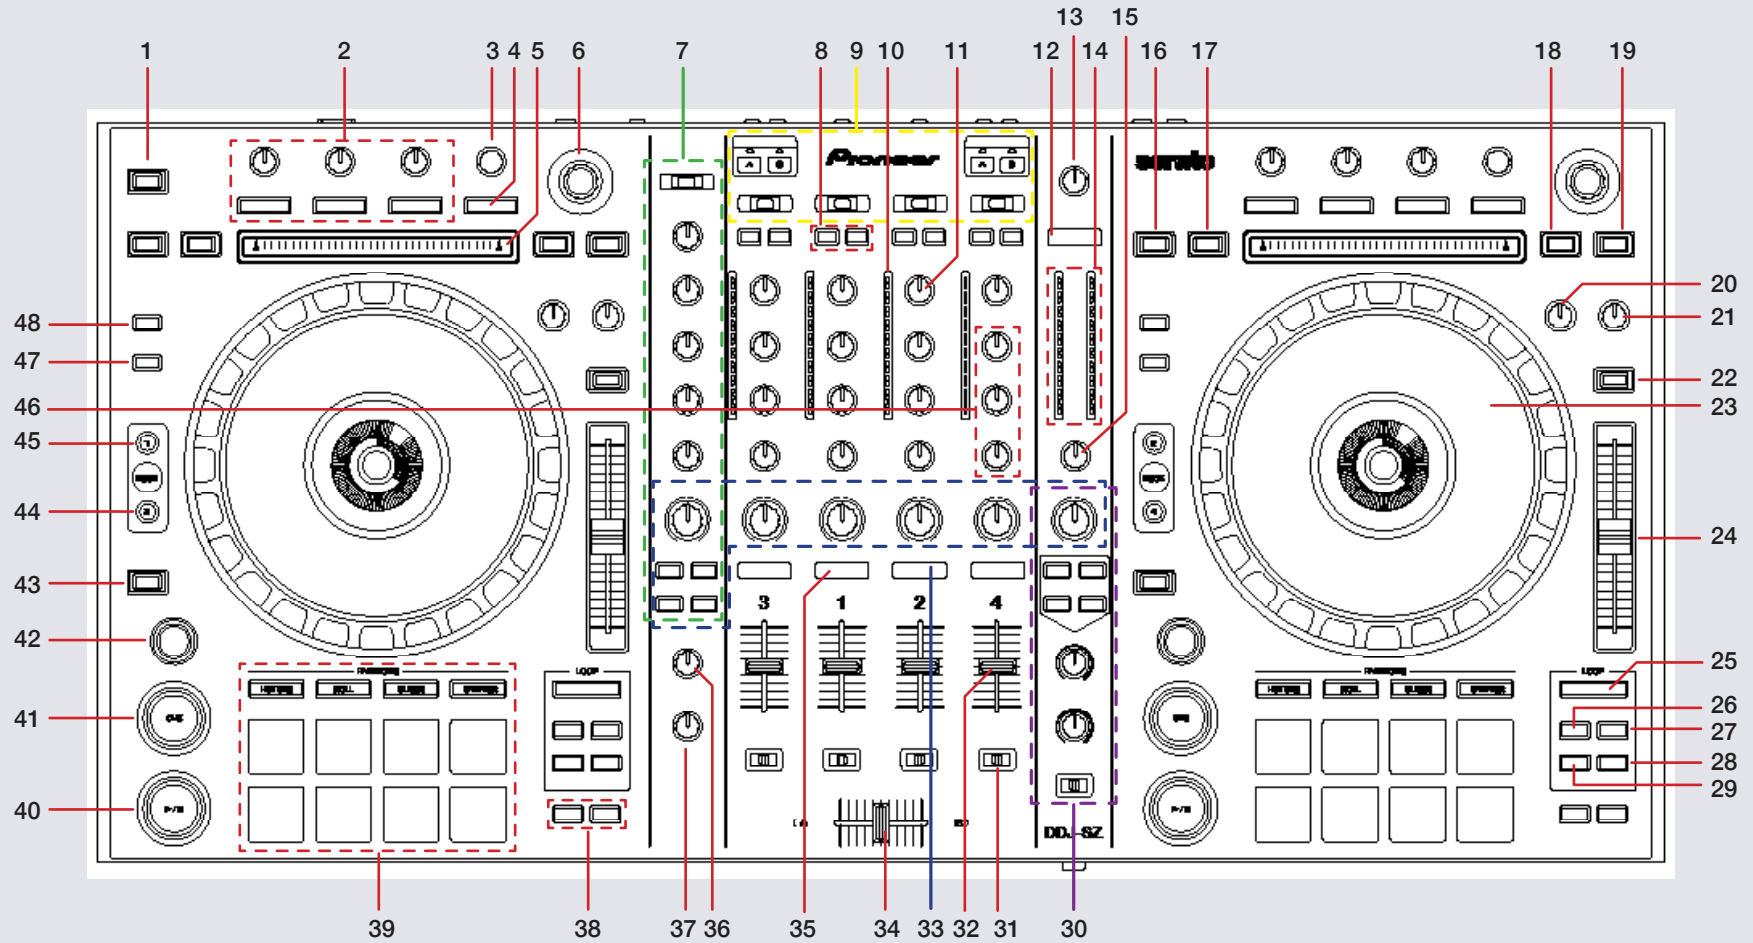

serato




NOTE: The **SHIFT** button is used with other buttons that have shift modifier functions.

#	Pioneer DDJ-SZ Control	Function	Shift Function
1	PANEL	Select panel (Rec/FX/SP-6)	
2	FX KNOBS	See FX section	
3	BEATS	Select FX beat parameter	
4	TAP	Tap to the desired FX tempo	Switch between singular & multi FX mode
5	NEEDLE SEARCH	When track is paused or platter is held, touch the needle search strip to scroll through track	
6	LOAD	Scroll through tracks/Press to load track to deck/Double tap for instant doubles	
7	MIC	See MIC section	
8	FX	Select FX unit	
9	CHANGEOVER UNIT	See CHANGEOVER UNIT section	
10	CHANNEL LED	Shows channel output	
11	TRIM	Adjusts the individual channel output gain	
12	MASTER CUE	Turn on master cue	
13	MASTER LEVEL	Adjusts the master sound level output	
14	MASTER EQ	Displays the master output's audio level	
15	BOOTH MONITOR	Adjust the Booth Output Volume	
16	CENSOR	Censor	Reverse
17	SLIP	Activate Slip Mode	Toggles between Vinyl/Jog Modes
18	BACK	Toggles focus between library, crates and open panels	Cycle View Modes
19	LOAD PREPARE	Press this to add a selected track to the list of tracks in the Prepare Panel	Cycle Files/Browse/Prepare/History
20	JOG FEELING ADJUST	Adjust platter sensitivity	
21	STOP TIME	Adjust time it takes for track to stop	
22	KEY LOCK/TEMPO RESET	Keylock/Hold for 1 second to reset BPM	Cycle through available Tempo Range
23	PLATTER	Adjust/Scratch or Jog	Skip

#	Pioneer DDJ-SZ Control	Function	Shift Function
26	1/2X	Halve Loop Length	Loop Shift/Beat Jump Left
27	2X	Double Loop Length	Loop Shift/Beat Jump Right
28	OUT	Set loop out point (Loop in point set)/Adjust loop out point (Loop active)	Loop Exit (Loop active)/ReLoop (Loop not active)
29	IN	Set loop in point (Loop not active)/Adjust loop in point (Loop active)	Saved Loop slot select
30	OSCILLATOR	See OSCILLATOR section	
31	A THRU B	Crossfader Assign Switch	
32	CHANNEL FADER	Adjusts the Channel Output	Fader Start
33	SOUND COLOR FX	See SOUND COLOR FX section	
34	CROSS FADER	Outputs the sound assigned with the crossfader assign switch	
35	CUE	Cue selected channel / Mic Talk Over when Mic is connected	Tap BPM of loaded track to selected deck
36	MIXING	Adjust headphone output between cue and master	
37	LEVEL	Adjust headphone output	
38	PARAMETER1	Use these to set the Loop Roll, Slicer and Sampler parameters	A secondary parameter for Slicer Mode when using Performance Pad
39	PERFORMANCE PADS	See PERFORMANCE PADS section	
40	PLAY/PAUSE	Play/Pause track	Stutter Play
41	CUE	Add or Jump to Temporary Cue	Jump to start of track (more than 2 Sec elapsed) Previous track (less than 2 sec elapsed)
42	SYNC	Sync On	Sync Off (Press twice to return to Absolute Pitch when in Relative Mode)
43	SHIFT	SHIFT button is used with other buttons that have shift modifier functions	
44	Deck Select (3)	Activates selected Deck	
45	Deck Select (1)	Activates selected Deck	
46	EQ	Adjust HI, MID and LOW	
47	GRID SLIDE	Slip Beatgrid	Clear Beatgrid
48	GRID ADJUST	Adjust Beatgrid	Set Beatgrid

Performance Pads

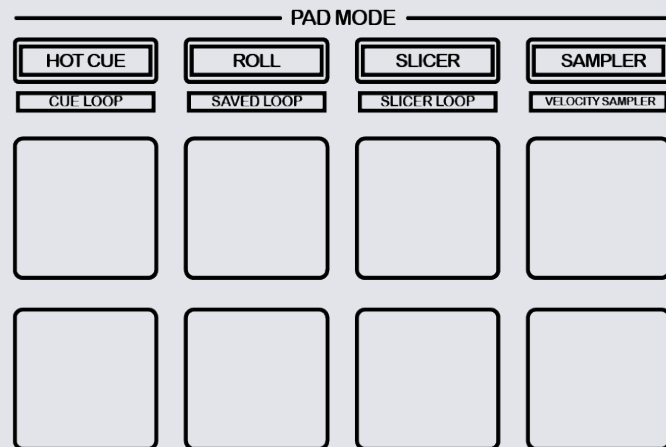

The performance pads have eight different modes you can select. The first four modes are; Hot Cue, Roll, Slicer and Sampler.

- **HOT CUE Mode:** When pressing buttons 1-8 you can add up to 8 Cue Points. Holding **SHIFT** and pressing buttons 1-8 will delete the Cue Points.
- **ROLL Mode:** When pressing buttons 1-8 you can activate a loop roll. The Loop Length is determined by the Auto Loop Range currently selected in the Auto Loop section in the software, which you can change this using the **PARAMETER1** buttons.
- **SLICER Mode:** A specified range (or domain) is divided into eight equal sections, and these eight sliced sections are assigned to the respective performance pads. Pressing **SLICER** once for the first mode, is a shifting Slicer Domain. Pressing **SLICER** twice, for the second mode is a fixed Slicer Domain

 
or "loop". Use **PARAMETER1** to set the quantization for the slicer function. The quantization can be set in four ways: 1/8, 1/4, 1/2 and 1. **PARAMETER2** (Hold **SHIFT** + **PARAMETER1**) sets the domain. The domain can be set to one of six settings: 2 beats, 4 beats, 8 beats, 16 beats, 32 beats or 64 beats.

- **SAMPLER Mode:** Buttons 1-6 Trigger Samples loaded in your Sample Banks. Use **PARAMETER1** to cycle through Sample Banks. Holding **SHIFT** and pressing buttons 1-6 will stop the sample playing. When a sample slot is empty, pressing the Buttons 1-6 + **SHIFT** will load the currently selected track in library panel to the corresponding sample slot. Sampler volume can be controlled using the **SAMPLER VOL** knob in the MIC section.

The next four modes are activated by holding **SHIFT** and pressing the pad mode selection buttons. The next four modes are; Hot Loop, Auto Loop, Manual Loop and Velocity Sampler.


- **CUE LOOP mode:** Press buttons 1-8 to trigger your hot cues. it will also enable an auto loop after the selected Cue Point with the current auto loop length. Use the **PARAMETER1** buttons to halve or double the loop length. **SEE LOOPING FOR MORE INFORMATION.**
- **SAVED LOOP mode:** Pressing buttons 1-8 can set, save and launch previously made Manual Loops. Use the **PARAMETER1** buttons to halve or double the loop length. **SEE LOOPING FOR MORE INFORMATION.**
- **SLICER LOOP mode:** Pressing buttons 1-8 can set, save and launch previously made Manual Loops. Use the **PARAMETER1** buttons to halve or double the loop length. **SEE LOOPING FOR MORE INFORMATION.**
- **VELOCITY SAMPLER Mode:** Buttons 1-6 behave in the same way as the standard sampler mode described above. However, in Velocity Sampler mode the volume of the sample will be affected by the amount of pressure applied to the button.

Looping

You have up to 8 loops per track in Serato DJ, and the choice between either manual or auto loops. You can choose whether you have 2 loops (and 8 cuepoints) showing on screen, or 8 loops. To store the currently active or most recently created loop, click  in the loop tab in the software.



DDJ-SZ Control	Serato DJ function	Shift
AUTO LOOP	Autoloop On/Off	Activate selected loop
2X	Double Loop Length	Loop Shift Right
1/2X	Halve Loop Length	Loop Shift Left
IN	Set loop in point (Loop not active)/Adjust loop in point (Loop active)	Saved Loop slot select
OUT	Set loop out point (Loop in point set)/Adjust loop out point (Loop active)	Loop Exit (Loop active)/Reloop (Loop not active)

DJ-FX

The DJ-FX in Serato DJ are powered by iZotope™. Click the FX tab  to open the FX panel. Select either 1, 2, 3, 4 or M to assign the selected effect bank to a deck or Master Output.


There are two available modes in the DJ-FX. Single FX Mode allows you to select one effect per FX bank, and has multiple parameters that can be adjusted. Multi FX Mode allows you to select up to three effects per FX bank, and adjust only one parameter, the FX Depth. The same effects available in Single FX mode are available in Multi FX mode, as well some additional presets.

You can select between the two FX modes by clicking either the Single FX mode

button  or Multi FX mode button  or by pressing SHIFT + TAP in the FX section on the DDJ-SZ.

DDJ-SZ Control	Single FX	Multi FX	Shift
ON (Button 1)	Effect On/Off	Slot 1 Effect On/Off	Slot 1 Select Effect
ON (Button 2)	Adjust Slot 2 FX Parameter	Slot 2 Effect On/Off	Slot 2 Select Effect
ON (Button 3)	Adjust Slot 4 FX Parameter	Slot 3 Effect On/Off	Slot 3 Select Effect
FX KNOB 1	Adjust Slot 1 FX Parameter	Adjust Slot 1 FX Parameter	
FX KNOB 2	Adjust Slot 3 FX Parameter	Adjust Slot 2 FX Parameter	
FX KNOB 3	Adjust FX Parameter 5	Adjust Slot 3 FX Parameter	
TAP	Tap to the desired FX tempo. To return to AUTO mode, press and hold	Tap to the desired FX tempo. To return to AUTO mode, press and hold	Toggle between Single/Multi FX Modes
BEATS (knob)	Adjust Beats Multiplier	Adjust Beats Multiplier	
FX 1/2	Assigns FX UNIT 1 or 2 to selected channel	Assigns FX UNIT 1 or 2 to selected channel	

Sound Color FX

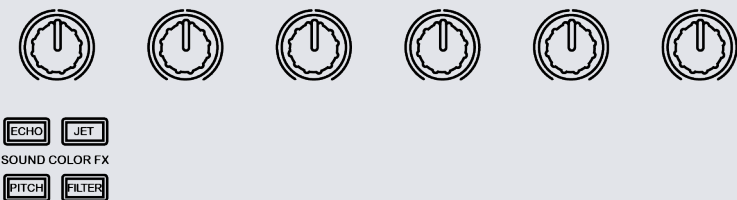

Sound Color FX are hardware effects built into the Pioneer DDJ-SZ. The 4 hardware effects are ECHO, JET, PITCH, and FILTER. These can be applied to each channel individually, the MIC channel, and the master channel. The Color FX knobs are used to control the depth of each effect.

Changeover Panel



Two USB ports enable two computers to be connected at the same time. A dedicated A/B button on each side of the controller enables DJs to split the controller and assign each half between the two USB ports. The INPUT SELECT switches allow you to switch individual channels between LINE, PHONO or USB for channels 3 and 4, and CD, or USB for channels 1 and 2.

Oscillator



The new Oscillator provides four types of sound effects: NOISE, SIREN, CYMBAL and HORN. Tapping each of the buttons activates the effect(s), which can also be modified in volume, and depth. You can also add SOUND COLOR FX to the sound effects with the FX knob above the oscillator effects buttons. OSC ASSIGN is used for assigning the sound effects to channels 3, 4, or MASTER.

MIC



The Pioneer DDJ-SZ has 2 MIC inputs, allowing you to use 2 MICs at anytime with this controller. The OFF/ON/TALK OVER switch is to switch your MIC on/off and onto 'TALK OVER' mode.



The LEVEL knobs are used to adjust the volume of the MICs, and the HI & LOW EQ knobs are used to adjust the EQ. You can also use the SOUND COLOR FX with your MIC.



The FX knob is used to control the depth of your select effect.



MIDI

The MIDI control feature in Serato DJ provides the ability to map Serato DJ software functions to MIDI controller functions such as keyboards, triggers, sliders, and knobs.

For more information download the Serato DJ manual by going to <http://serato.com/dj/downloads>

NOTE: You can not MIDI Map your Pioneer DDJ-SZ, you will need to connect an additional MIDI controller to use these MIDI functions.

Serato Flip

Flip is an Expansion Pack for Serato DJ. Flip controls are only available once the Flip expansion pack has been purchased and activated. The expansion pack can be purchased in-app through the Serato DJ Online window, or online at <http://serato.com/accessories>


In **Hot Cue** performance pad mode the Left and Right Parameter buttons are used to record and trigger Flips.

Control	Flip function	Shift
Left Parameter button	Starts the recording of a new Flip	Turns Flip Loop on/off
Right Parameter button	Starts the current Flip / re-trigger Flip	Turns current Flip On/Off

Press **Hot Cue** mode twice to enter Flip performance pad mode. Pressing pads 1-6 in will trigger saved Flips, pressing **SHIFT** + pads 1-6 will turn saved Flips on/off. Pressing an empty Flip slot will save any active Flip to that slot.

DVS Expansion

The Pioneer DDJ-SZ is Serato DVS Enabled. Use turntables or CD players to control Serato DJ using NoiseMap™ Control Tone records or CDs. You can enable CD and Vinyl control through the Setup screen in the software. For more information about the Serato DVS Expansion Pack, please visit <http://serato.com/accessories>

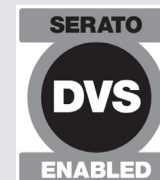

serato



Beat Jump

To activate **Beat Jump**, open the **Setup** screen and under the DJ preferences tab turn on “**Show Beat Jump Controls**”.

Show Beat Jump Controls

When you close the Setup screen you will see Beat Jump controls underneath the existing Auto Loop values on each deck. Checking this box will turn on Beat Jump features in the deck area and let you control Beat Jump from on your supported Serato DJ hardware.





When the Beat Jump option is enabled, controllers with 8 performance pads that have an **AUTO LOOP** or **LOOP ROLL** mode will use the bottom row of 4 pads (pads 5-8) as Beat Jump controls. This is designed to mirror the change in deck Auto Loop area (from 8 Auto Loop sizes to 4 Auto Loop sizes + Beat Jump controls).

Performance Pad Function	Pad 5	Pad 6	Pad 7	Pad 8
Beat Jump disabled	Auto Loop/ Loop Roll 5	Auto Loop/ Loop Roll 6	Auto Loop/ Loop Roll 7	Auto Loop/ Loop Roll 8
Beat Jump enabled	Beat Jump Left	Beat Select Left	Beat Select Right	Beat Jump Right

Controllers with Loop Shift controls can now do a Beat Jump by enabling Beat Jump in the Setup screen. Regular Loop Shift is still available if Beat Jump is disabled in the Setup screen.

Using the Tool Tips

Click on the  icon to enable Tool Tips. This is located in between the MIDI and setup button in the top right hand corner of the screen. Tool Tips provide a handy way to learn the various features of Serato DJ.

Move the mouse over a section of the screen to bring up a context sensitive tool tip. Holding the mouse over the  button with Tool Tips turned on will show you a list of all keyboard shortcuts.

For more information about how to use Serato DJ, please go to our website www.serato.com or refer to the Serato DJ Software Manual.

For more information on your controller, please refer to the hardware manual.

For further help, please contact support@serato.com or go to www.serato.com/dj/support