

**QUICK-START
GUIDE
NUMARK
MIXTRACK PRO III**

serato



DJ

Installation and Setup

The Numark Mixtrack Pro III requires drivers for both Mac and Windows. You will find these on the installation CD that is provided with your Numark Mixtrack Pro III, or go to <http://www.numark.com>

NOTE: Please ensure you have the latest available drivers AND firmware updates, which may be required in order to be compatible with Serato DJ. Please go to <http://serato.com/support> or visit the Numark website.

1. Download and install the latest version of Serato DJ from <http://serato.com/dj/downloads>
2. Connect your Numark Mixtrack Pro III to an available USB Port.
3. Open Serato DJ.

 
Serato DJ Activation

To find out how to activate Serato DJ by either starting your free 14 day trial, or purchasing a license for Serato DJ, [click here](#) for the most up to date information.

serato




Controller

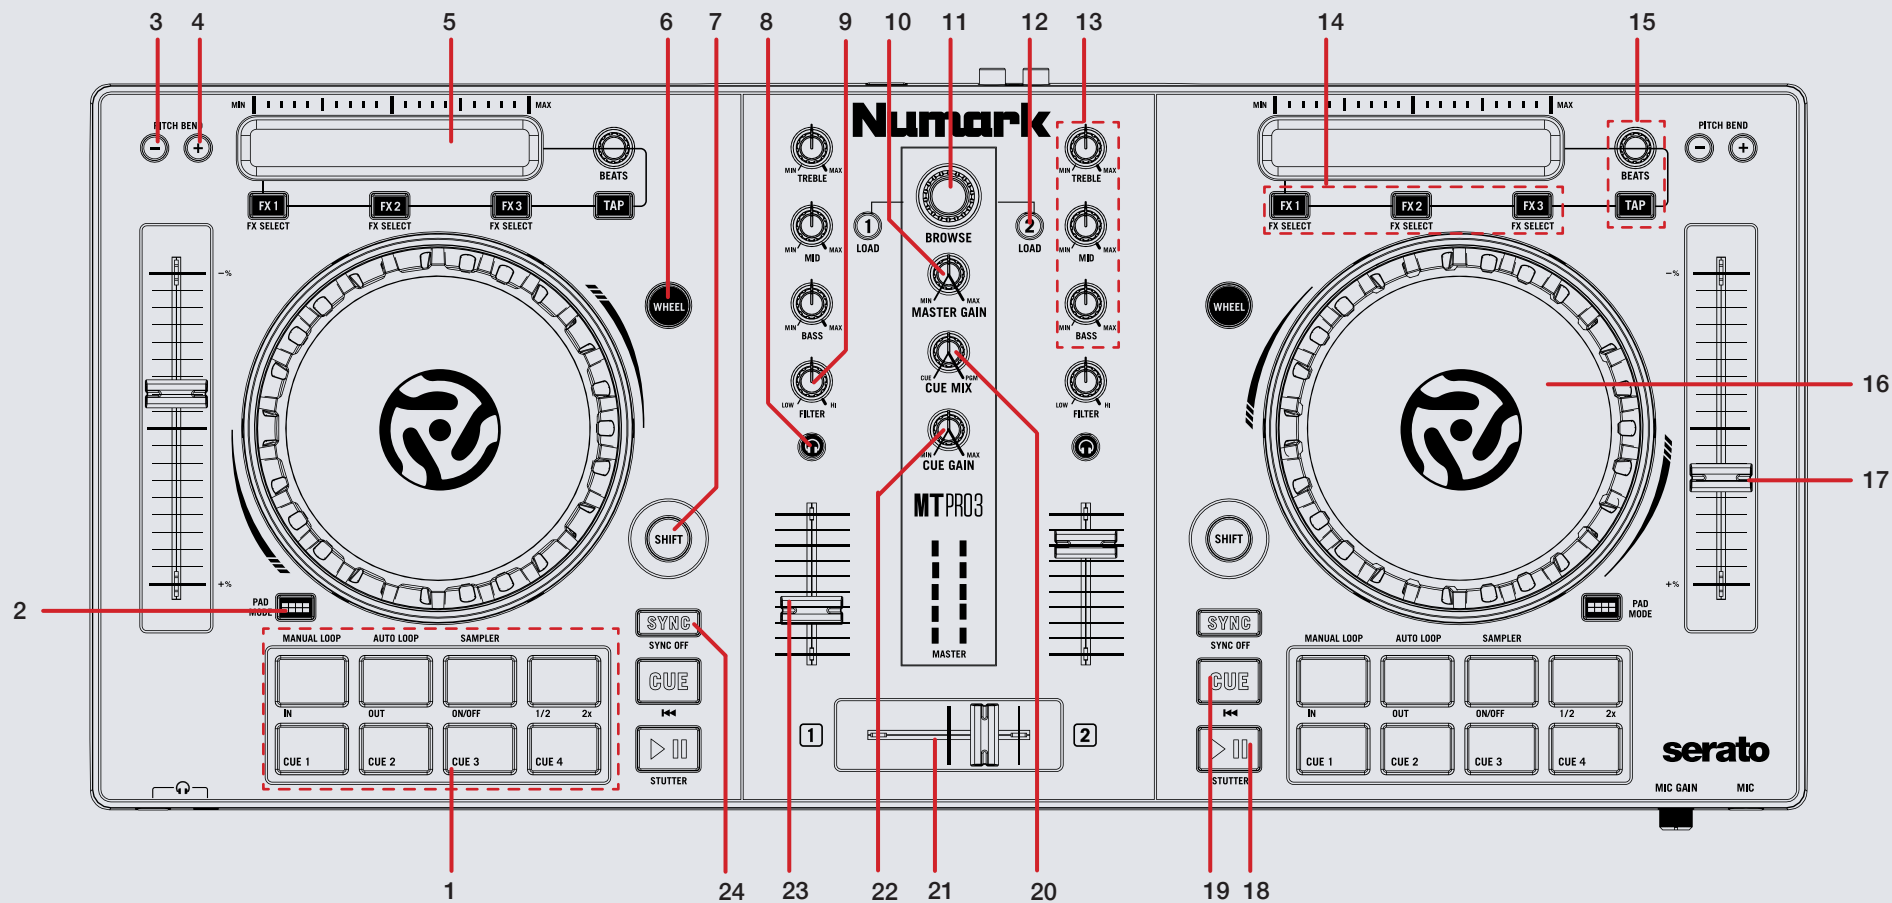


NOTE: The SHIFT button is used with other buttons that have shift modifier functions.

#	Mixtrack Pro III	Serato DJ Function	Shift
1	PERFORMANCE PADS	SEE PERFORMANCE PAD SECTION FOR MORE INFORMATION	
2	PAD MODE	Change Performance Pad mode	
3	PITCH NUDGE -	Pitch nudge backward	
4	PITCH NUDGE +	Pitch nudge forward	
5	TOUCH STRIP	Adjust FX parameter	Skip search through track
6	SCRATCH	Turn Scratch mode on for the platters	
7	SHIFT	Used with other controls that have shift modifier functions	
8	PFL CUE	Enable to monitor the channel through the headphones	
9	HP/LP FILTER	Channel HP/LP filter	
10	MASTER GAIN	Adjust master output gain	
11	BROWSE	Scroll to browse library or crate lists. Push to go Back	
12	LOAD DECK	Load currently highlighted track to respective deck	
13	CHANNEL EQ	Adjust channel EQ	
14	FX 1-3	FX 1-3 On/Off. Adjust parameters in Single FX mode.	FX select
15	BEATS MULTIPLIER	Adjust beats multiplier timing. Tap tempo.	
16	PLATTER	Adjust currently loaded track	
17	TEMPO FADER	Adjust playback tempo of currently loaded track	
18	PLAY/PAUSE	Play or pause currently loaded track	Stutter play
19	CUE	Set/play from temporary cue	
20	CUE MIX	Adjust Cue Mix	
21	CROSSFADER	Fade audio between channels	
22	CUE GAIN	Adjust headphone volume	
23	CHANNEL FADER	Adjust channel volume	
24	SYNC	SYNC On	SYNC Off

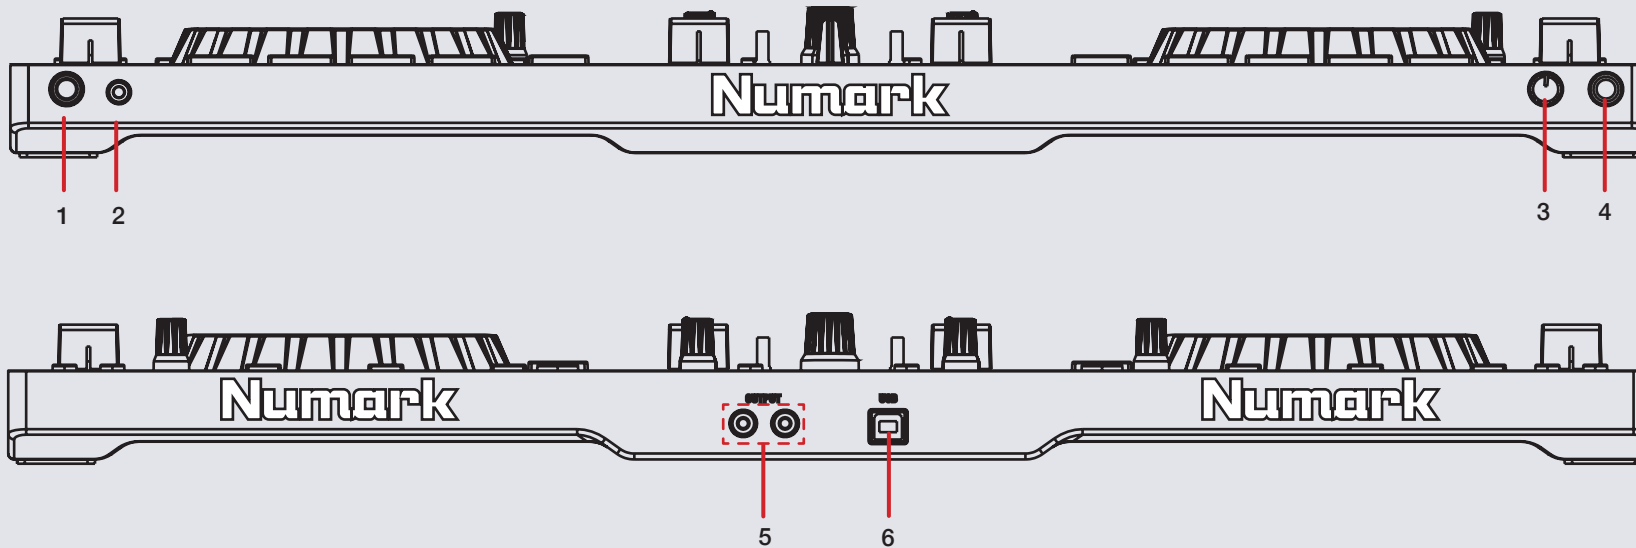 

#	Numark Mixtrack Pro III	Function
1	1/4" HEADPHONES	Connect your 1/4" headphones to this output for cueing
2	1/8" HEADPHONES	Connect your 1/8" headphones to this output for cueing
3	MIC GAIN	Adjust the input volume of the Mic
4	MIC	Connect an TRS or 1/4" jack microphone to this input
5	MASTER RCA OUTPUT	Use standard RCA cables to connect this output to a speaker or powered monitors
6	USB	Connect USB cable to this port from computer

 Performance Pads

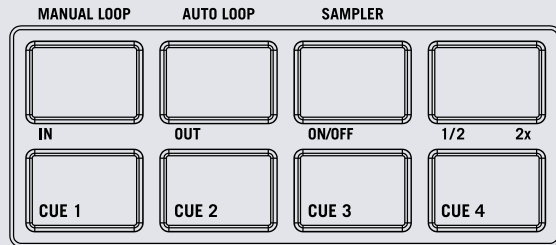


The bottom row of pads is dedicated to Cue Points:

- **CUES 1-4:** Pressing the bottom 4 pads will add and play up to 4 Cue Points. Holding **SHIFT** and pressing a pad will delete the specific Cue Points.



The top row of performance pads have different modes you can select. They are **Manual Loop mode**, **Auto Loop mode** and **Sampler mode**. Hold the **PAD MODE** button and press pads 1-3 to enable each performance pad mode.

- **AUTO 1/Manual Loop mode:** Pressing pad 1 will start and set a Manual Loop In point, pad 2 will set the Loop Out point and pads 3 and 4 will turn the Loop On/Off and Retrigger the loop.
- **AUTO 2/Auto Loop mode:** When pressing pads 1-4 you can activate Auto Loops of different sizes. Hold Shift and press pads 1-4 to enable Loop Rolls of that size.
- **AUTO 3/Sampler Mode:** Pads 1-4 will trigger samples loaded in slots 1-4 of your Sample Banks. Holding **SHIFT** and pressing pads 1-4 will stop the sample playing. When a sample slot is empty, pressing the pads 1-4 will load the currently selected track in library to the corresponding sample slot.

DJ-FX

The DJ-FX in Serato DJ are powered by iZotope™. Click the FX tab  to open the FX panel. Select either 1, 2 or M to assign the selected effect bank to a deck or Master Output.

There are two available modes in the DJ-FX. Single FX Mode allows you to select one effect per FX bank, and has multiple parameters that can be adjusted. Multi FX Mode allows you to select up to three effects per FX bank, and adjust only one parameter, the FX Depth. The same effects available in Single FX mode are available in Multi FX mode, as well some additional presets.

You can select between the two FX modes by clicking either the Single FX mode button  or Multi FX mode button  in the software.

Mixtrack Pro III Control	Single FX Mode	Multi FX Mode	Shift
FX 1	Turn FX slot On	Turn FX slot 1 On	Select next FX in slot (Multi FX only)
FX 2	Adjust FX parameter 1	Turn FX slot 2 On	Select next FX in slot (Multi) FX only
FX 3	Adjust FX parameter 2	Turn FX slot 3 On	Select next FX in slot (Multi FX only)
TAP	Tap DJ-FX tempo	Tap DJ-FX tempo	Change FX mode (Single/Multi)
BEATS	Adjust beats timing multiplier	Adjust beats timing multiplier	N/A
TOUCH STRIP	Adjust FX depth	Adjust FX depth	Skip search track


MIDI


The MIDI control feature in Serato DJ provides the ability to map Serato DJ software functions to MIDI controller functions such as keyboards, triggers, sliders, and knobs. Integrating MIDI controllers into your Serato DJ setup can improve live performance usability, such as hitting pads on a MIDI controller to trigger Loops and Cue Points.

For more information download the Serato DJ manual by going to <http://serato.com/dj/downloads>

NOTE: You can not MIDI Map your Numark Mixtrack Pro III, you will need to connect an additional MIDI controller to use the MIDI functions.

Using the Tool Tips

Click on the  icon to enable Tool Tips. This is located in between the MIDI and setup button in the top right hand corner of the screen. Tool Tips provide a handy way to learn the various features of Serato DJ.

Move the mouse over a section of the screen to bring up a context sensitive tool tip. Holding the mouse over the  button with Tool Tips turned on will show you a list of all keyboard shortcuts.

For more information about how to use Serato DJ, please go to our website www.serato.com or refer to the Serato DJ Software Manual. For more information on your controller, please refer to the hardware manual.

For further help, please contact support@serato.com or go to www.serato.com/support

serato

