

QUICK-START GUIDE

NUMARK MIXTRACK EDGE

serato



DJ INTRO

Installation and Setup

The Numark Mixtrack Edge is a class compliant USB plug and play device and requires no further driver installation.


1. Connect your Mixtrack Edge to an available USB Port
2. Open Serato DJ Intro

serato



DJ INTRO

Controller

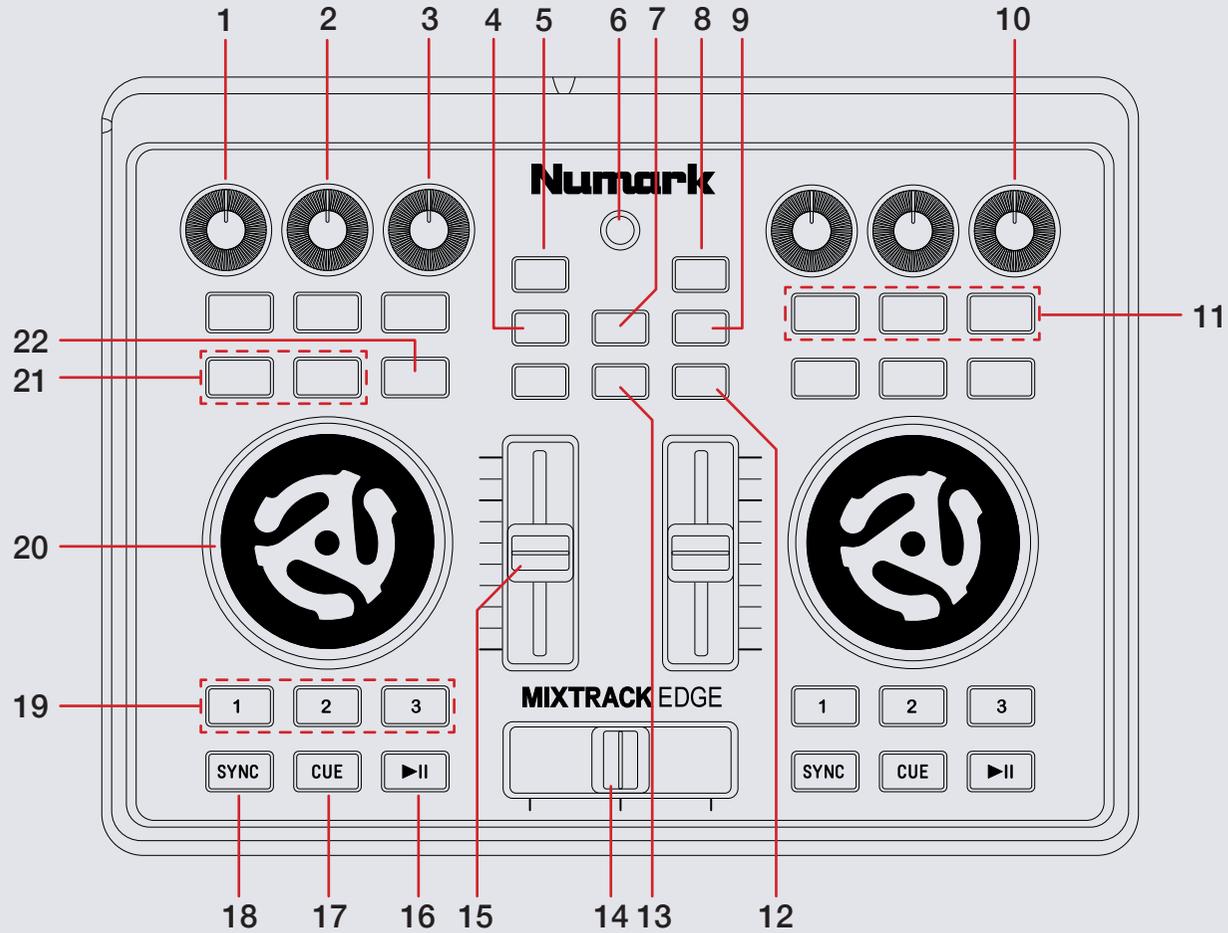

#	MixTrack Edge Control	Serato DJ Function	Shift Function	FX
1	HEADPHONE VOLUME KNOB	Controls Headphone Volume		
2	TREBLE EQ	Controls Treble		Control FX 1 Parameter
3	BASS EQ	Controls Bass		Control FX 1 Parameter
4	BROWSE	When selected you can browse through currently focused area (library/crates/open panels)with the platter		Turn on scratch mode
5	BACK	Navigates backward through open panels.		
6	FX	Turns effect unit on and off (See FX column)		
7	CUE MIX	When selected you can adjust volume with the platter.		
8	OPEN	Navigates forward through open panels.		
9	PITCH	When selected you can adjust pitch with the platter.		Turns on track search mode
10	MASTER	Controls Master Volume		
11	SAMPLE TRIGGERS	Triggers loaded samples.		FX triggers/adjust
12	CUE	Cue selected channel	Load	
13	SHIFT	Toggle shift controls		
14	CROSSFADER	Crossfades between the two channels		
15	CHANNEL FADER	Controls Channel Volume		
16	PLAY/PAUSE	Plays & Pauses Playing Track	Toggles stutter mode on/off.	
17	CUE	Cue selected channel / Mic Talk Over when Mic is connected		
18	SYNC	Turn sync on/off	Turn keylock on/off	
19	CUE TRIGGERS	Trigger cues 1, 2, and 3.	Delete cues 1, 2, and 3.	
20	PLATTER	Adjust selected function (pitch, cue mix, or browse).		



#	MixTrack Edge Control	Serato DJ Function	Shift Function	FX
21	LOOP IN/LOOP OUT	Set loop in point (Loop not active)/Adjust loop in point (Loop active)/Set loop out point (Loop in point set)/Adjust loop out point (Loop active)	1/2X & 2X (Adjusts FX Parameter)	
22	RELOOP	Reloop/Exit	Reloop/Exit	Control FX 1 Parameter

DJ-FX

You can have up to three different effects active per Virtual deck within Serato DJ Intro with the Mixtrack Edge.

See table above for functions

Looping

You have the choice of Auto or Manual looping within Serato DJ Intro with the Numark Mixtrack Edge.

MixTrack Edge	Manual Loop Mode
LOOP IN	Set loop in point (Loop not active)
LOOP IN	Edit start of loop point with platter (Loop active)
LOOP OUT	Set end of loop point (If Loop in point set)
LOOP OUT	Edit end of loop point (Loop active)
RELOOP	Exit Manual Loop

Using the Tool Tips

Click on the  icon to enable Tool Tips. This is located in next to the setup button in the top right hand corner of the screen. Tool Tips provide a handy way to learn the various features of Serato DJ Intro.

Move the mouse over a section of the screen to bring up a context sensitive tool tip. Holding the mouse over the  button with Tool Tips turned on will show you a list of all keyboard shortcuts.

For more information about how to use Serato DJ Intro, please go to our website www.serato.com or refer to the Serato DJ Intro Software Manual.

For more information on your controller, please refer to the hardware manual.

For further help, please contact support@serato.com or go to www.serato.com/dj-intro/support

serato



DJ INTRO