

# QUICK-START GUIDE NUMARK MIXTRACK PLATINUM

serato



DJ INTRO

# Installation and Setup

The Numark Mixtrack Platinum is a class compliant USB plug and play device and requires no further driver installation.

 
1. Download and install the latest version of Serato DJ Intro from <https://serato.com/dj/intro/downloads>
2. Connect your Numark Mixtrack Platinum to an available USB Port.
3. Open Serato DJ Intro.

**serato**



**DJ INTRO**


# Controller

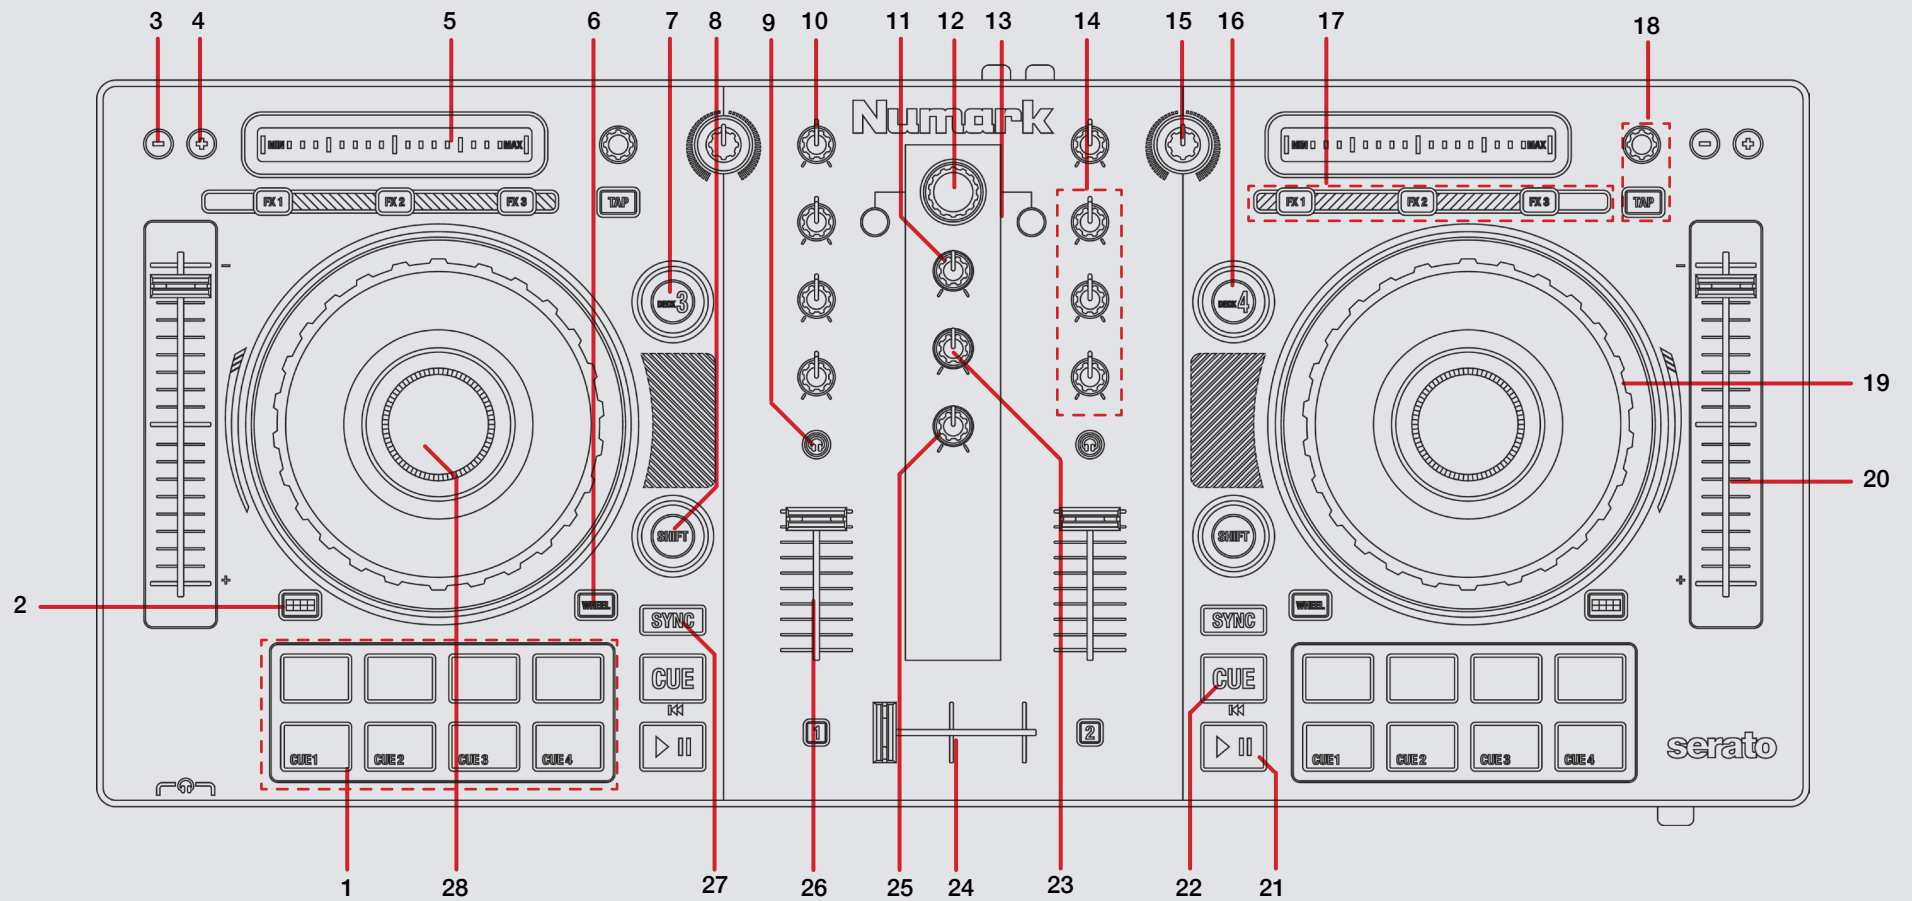

**NOTE:** The SHIFT button is used with other buttons that have shift modifier functions.


#	Mixtrack Platinum	Serato DJ Function	Shift
1	PERFORMANCE PADS	SEE PERFORMANCE PAD SECTION FOR MORE INFORMATION	
2	PAD MODE	Change Performance Pad mode	
3	PITCH BEND -	Pitch bend backward	
4	PITCH BEND +	Pitch bend foreward	
5	TOUCH STRIP	Adjust FX parameter	Skip search through track
6	SCRATCH	Turn Scratch mode on for the platters	
7	DECK 3	Change to DECK 3 on the left platter	
8	SHIFT	Used with other controls that have shift modifier functions	
9	PFL CUE	Enable to monitor the channel through the headphones	
10	CHANNEL GAIN	Adjust channel gain	
11	MASTER GAIN	Adjust master output gain	
12	BROWSE	Scroll to browse library or crate lists. Push to go Back	
13	LOAD DECK	Load currently highlighted track to respective deck	
14	CHANNEL EQ	Adjust channel EQ	
15	HP/LP FILTER	Channel HP/LP filter	
16	DECK 4	Change to DECK 4 on the right platter	
17	FX 1-3	FX 1-3 On/Off. Adjust parameters in Single FX mode.	FX select
18	BEATS MULTIPLIER	Adjust beats multiplier timing. Tap tempo.	
19	PLATTER	Adjust currently loaded track	
20	TEMPO FADER	Adjust playback tempo of currently loaded track	
21	PLAY/PAUSE	Play or pause currently loaded track	Stutter play
22	CUE	Set/play from temporary cue	
23	CUE MIX	Adjust Cue Mix	
24	CROSSFADER	Fade audio between channels	
25	CUE GAIN	Adjust headphone volume	
26	CHANNEL FADER	Adjust channel volume	
27	SYNC	SYNC On	SYNC Off
28	PLATTER DISPLAY	Shows track and deck information	



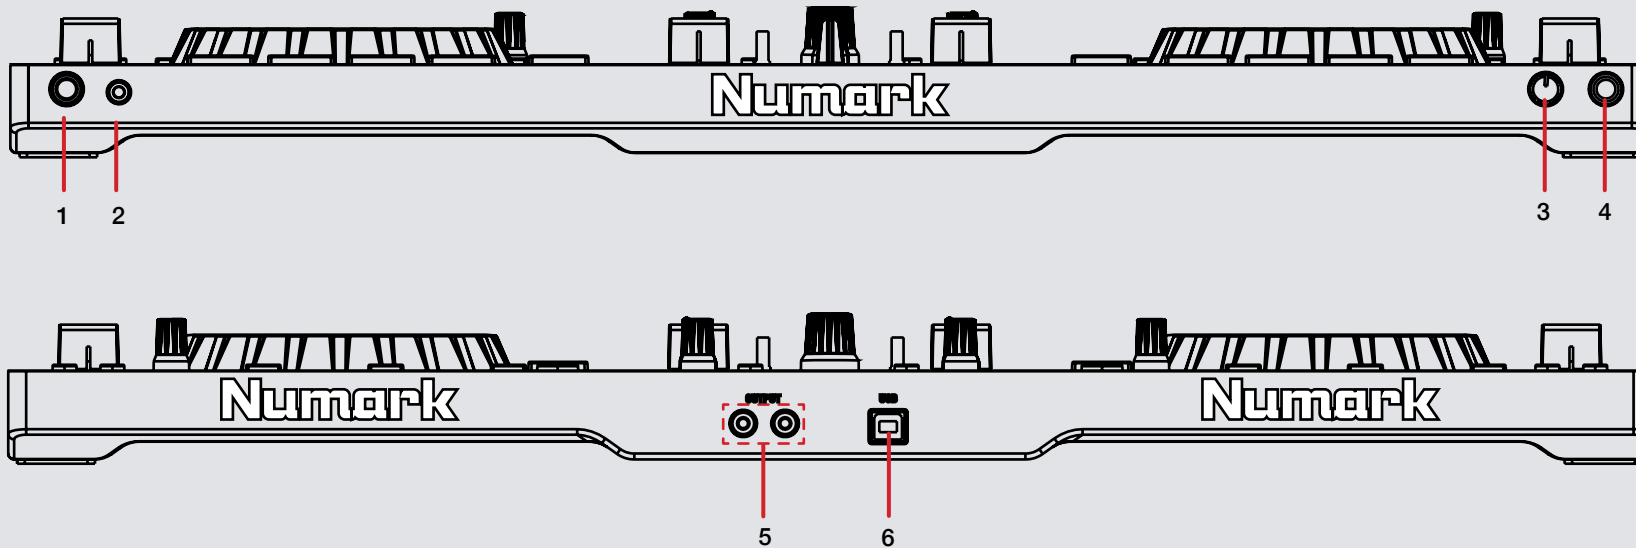 

#	Numark Mixtrack Platinum	Function
1	1/4" HEADPHONES	Connect your 1/4" headphones to this output for cueing
2	1/8" HEADPHONES	Connect your 1/8" headphones to this output for cueing
3	MIC GAIN	Adjust the input volume of the Mic
4	MIC	Connect an TRS or 1/4" jack microphone to this input
5	MASTER RCA OUTPUT	Use standard RCA cables to connect this output to a speaker or powered monitors
6	USB	Connect USB cable to this port from computer
 
# Performance Pads

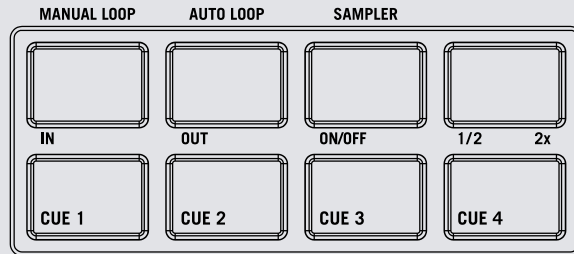

The bottom row of pads is dedicated to Cue Points:

- **CUES 1-4:** Pressing the bottom 4 pads will add up to 4 Cue Points. Holding **SHIFT** and pressing the Cue pads will delete the Cue Points.

The top row of performance pads have different modes you can select. They are Manual Loop mode, Auto Loop mode and Sampler mode. Hold the **PAD MODE** button and press pads 1-3 to enable each performance pad mode.


- **AUTO 1/Manual Loop mode:** Pressing pad 1 will start and set a Manual Loop In point, pad 2 will set the Loop Out point and pads 3 and 4 will turn the Loop On/Off and Retrigger the loop.
- **AUTO 2/Auto Loop mode:** When pressing pads 1-4 you can activate Auto Loops of 1, 2, 4, and 8 beat sizes.
- **AUTO 3/Sampler Mode:** Pads 1-4 will trigger samples loaded in slots 1-4 of your Sample Banks. Holding **SHIFT** and pressing pads 1-4 will stop the sample playing.


# DJ-FX

You can have up to three different effects active per Virtual deck within Serato DJ Intro with the Mixtrack Platinum.

Mixtrack Platinum Control	Serato DJ Intro function	Shift
FX 1-3	Turn FX slot On	Select next FX in slot
FX 2	Adjust FX parameter 1	Select next FX in slot
FX 3	Adjust FX parameter 2	Select next FX in slot
TAP	Tap DJ-FX tempo	N/A
BEATS	Adjust beats timing multiplier	N/A
TOUCH STRIP	Adjust FX depth	Skip search track

## Using the Tool Tips

Click on the  icon to enable Tool Tips. This is located in next to the setup button in the top right hand corner of the screen. Tool Tips provide a handy way to learn the various features of Serato DJ Intro.

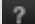Move the mouse over a section of the screen to bring up a context sensitive tool tip. Holding the mouse over the  button with Tool Tips turned on will show you a list of all keyboard shortcuts.

For more information about how to use Serato DJ Intro, please go to our website [www.serato.com](http://www.serato.com) or refer to the Serato DJ Intro Software Manual. For more information on your controller, please refer to the hardware manual.

For further help, please contact [support@serato.com](mailto:support@serato.com) or go to [www.serato.com/dj-intro/support](http://www.serato.com/dj-intro/support)

