




serato Studio

Akai MPK Mini MKIII Hardware Guide

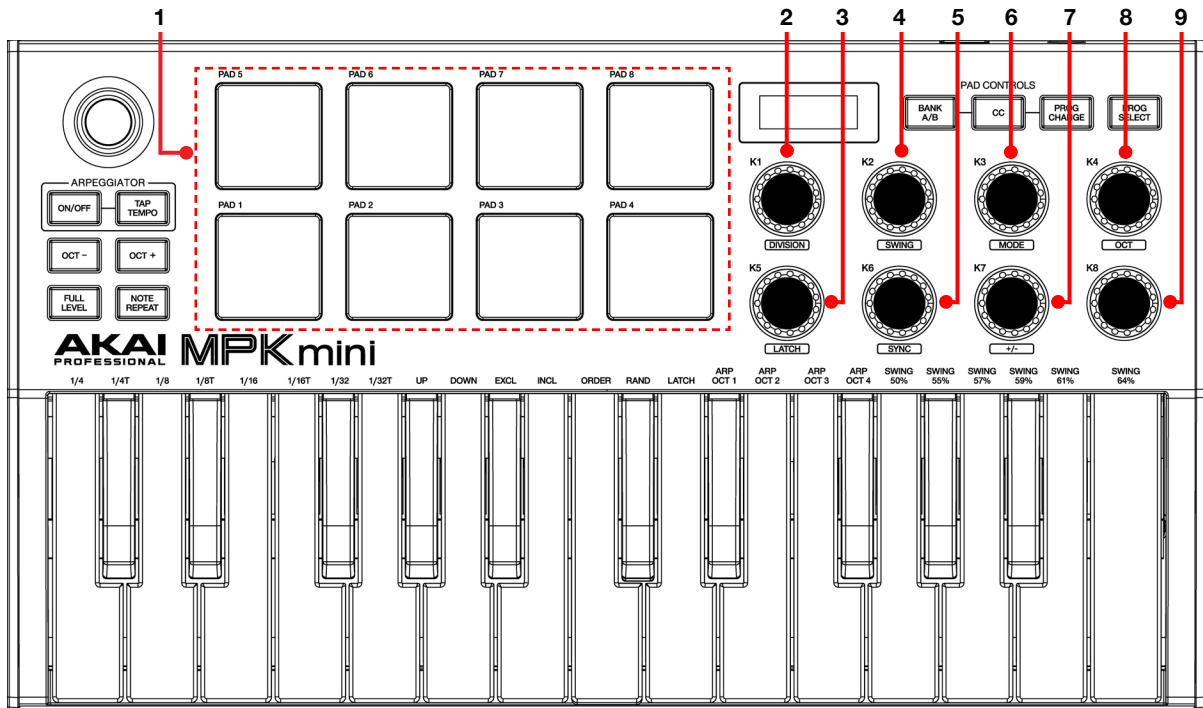


Drum deck mapping

#	Control	Drum Deck function
1	Pads 1-8	Trigger deck pads 1-8, or add selected sound in Files panel to deck pad if slot is empty
2	K1	Adjust Attack parameter for selected pad or pads
3	K5	Adjust tempo for selected pad or pads, range from -50% to 100%
4	K2	Adjust Release parameter for selected pad or pads
5	K6	Adjust keyshift value for selected pad or pads
6	K3	Toggle reverse for selected pad or pads
7	K7	Adjust Drum deck filter
8	K4	Toggle Voice mode for selected pad or pads
9	K8	Adjust Drum deck volume

Sample deck mapping (pad mode)

#	Control	Sample Deck function
1	Pads 1-8	Trigger deck pads 1-8, or add selected sound in Files panel to deck pad if slot is empty
2	K1	Adjust Attack parameter for selected pad or pads
3	K5	Adjust tempo for selected pad or pads, range from -50% to 100%
4	K2	Adjust Release parameter for selected pad or pads
5	K6	Adjust keyshift value for selected pad or pads
6	K3	Toggle reverse for selected pad or pads
7	K7	Adjust Sample deck filter
8	K4	Favorite selected pad or pads
9	K8	Adjust Sample deck volume

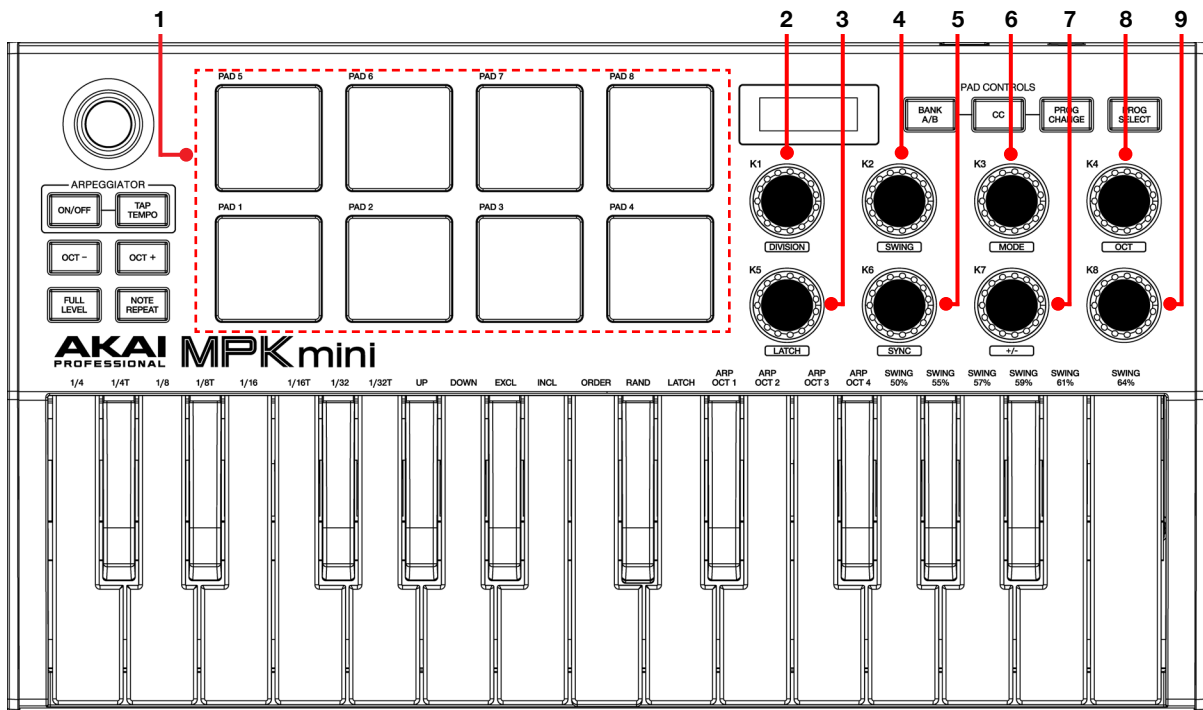

Sample deck mapping (Keyboard mode)

#	Control	Sample Deck function
1	Pads 1-8	Trigger related keyboard notes
2	K1	Adjust Attack parameter
3	K5	Adjust tempo, range from -50% to 100%
4	K2	Adjust Release parameter
5	K6	Adjust keyshift value
6	K3	Toggle reverse
7	K7	Adjust Sample deck filter
8	K4	Adjust glide parameter (requires Mono voice mode)
9	K8	Adjust Sample deck volume

Instrument deck mapping

#	Control	Instrument Deck function
1	Pads 1-8	Trigger related keyboard notes
2	K1	Adjust Attack parameter
3	K5	-
4	K2	Adjust Release parameter
5	K6	-
6	K3	Adjust glide parameter (requires Mono voice mode)
7	K7	Adjust Instrument deck filter
8	K4	Toggle Voice mode
9	K8	Adjust Instrument deck volume