



Numark  
MixTrack Platinum FX  
Quick-Start Guide

# Setup

## Serato Software

The Numark MixTrack Platinum FX is a “Serato DJ Lite hardware unlocked” device, meaning it works with Serato DJ Lite out of the box.

It is also a “paid upgrade to Serato DJ Pro device”, meaning it requires the purchase & activation of a Serato DJ Pro license, in order to be used with Serato DJ Pro.

You can also try Serato DJ Pro, before making a purchase.

[Click here to learn about buying or activating Serato DJ Pro](#)

or

[Click here to learn about trying Serato DJ Pro](#)

 
**Please ensure you have the latest version of Serato DJ Lite installed:**

[Click here to download Serato DJ Lite](#)

## Driver Software


The Numark MixTrack Platinum FX does not require manufacturer specific drivers on either Mac or Windows operating systems. Simply connect the device to your PC, and launch the latest version of Serato DJ Lite.

## Overview

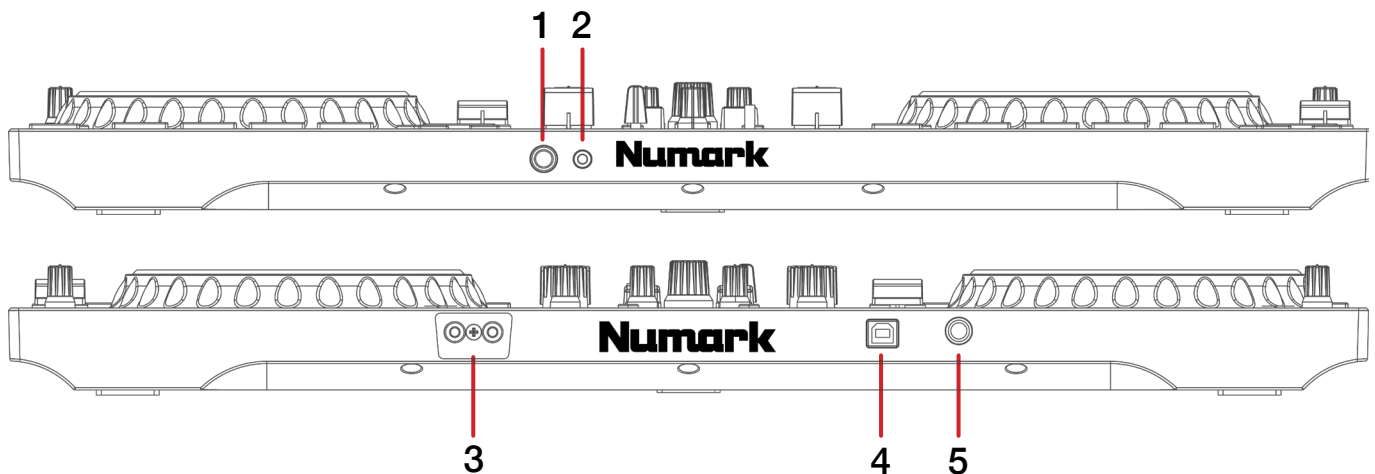

#	MixTrack Platinum FX CONTROL	FUNCTION
1	1/4" HEADPHONE JACK	Connect your 1/4" headphones to this output for cueing
2	1/8" HEADPHONE JACK	Connect your 1/8" headphones to this output for cueing
3	MASTER RCA OUTPUT	Use RCA cables to connect this output to a speaker or powered monitors
4	USB	Connect USB cable to this port from computer
5	MIC	Load selected track to deck 1
 
# Overview

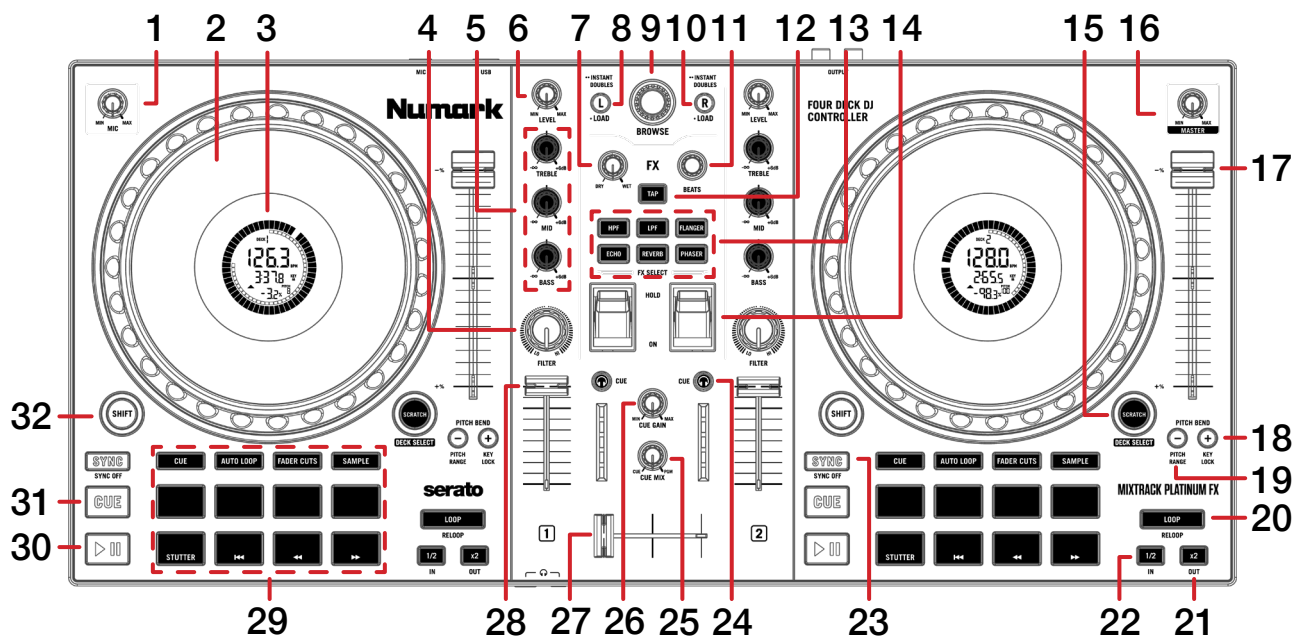

#	MixTrack Platinum FX CONTROL	FUNCTION	Shift
1	MIC VOLUME	Adjust the volume of the Mic	-
2	JOG WHEEL	Control the waveform within Serato DJ Pro	Platter skip
3	JOG WHEEL DISPLAY	Displays track information	-
4	HP/LP FILTER	Channel High and Low pass filter	-
5	CHANNEL EQ	Adjust channel EQ	-
6	CHANNEL LEVEL	Adjust channel gain	-
7	FX DRY/WET	Adjust FX depth parameter	-
8	LOAD CHANNEL 1	Load currently highlighted track to deck 1	-
9	BROWSE	Scroll library or crate list/Library back	Fast scroll/Add to Prepare crate
10	LOAD CHANNEL 2	Load currently highlighted track to deck 2	-
11	BEATS MULTIPLIER	Adjust beats multiplier	-
12	TAP FX TEMPO	Tap to get FX BPM value	-
13	FX SELECT	Loads selected FX to slot 1 (HPF,LPF,ECHO,REVERB,FLANGER, PHASER)	FX select slot 1
14	FX ON/OFF	Turn selected FX on/off	-
15	SCRATCH	Turn scratch mode on/off for the respective plater	Deck select
16	MASTER VOLUME	Adjust the master output volume	-
17	TEMPO SLIDER	Adjust playback tempo of the currently loaded track	Ignore tempo slider
18	PITCH BEND +	Pitch bend forward	Toggle Key Lock
19	PITCH BEND -	Pitch bend backward	Increase pitch range

#	MixTrack Platinum FX CONTROL	FUNCTION	SHIFT
20	LOOP ON/OFF	Enable the selected auto loop value	Reloop/Exit
21	LOOP DOUBLE (X2)	Double the size of the activated loop	Manual Loop Out
22	LOOP HALF (1/2)	Half the size of the activated loop	Manual Loop In
23	SYNC	Turn Sync on for the respective deck	Turn off Sync
24	PFL CUE	Enable to monitor the channel through the headphones	-
25	CUE MIX	Adjust the level of cue and master heard in the headphones	-
26	CUE GAIN	Adjust the volume of the headphones	-
27	CROSSFADER	Fade audio between the channels	-
28	CHANNEL FADER	Adjust channel volume	Fader start
29	PERFORMANCE PADS	<a href="#">SEE PERFORMANCE PAD SECTION FOR MORE INFORMATION</a>	-
30	PLAY/PAUSE	Play or pause the currently loaded track	Stutter Play
31	CUE	Set/play from a temporary cue point	Previous Track
32	SHIFT	Used with other controls that have shift modifier functions	-

## Help

### Show Tooltips

Click on the **Help** button in the upper right-hand corner of Serato DJ Lite, then **Show tooltips** to enable tooltips. Tool tips provide a handy way to learn the various features of Serato DJ Lite.

Move the mouse over a section of the screen to bring up a context sensitive tool tip.

### Watch Tutorials

 
Click on the **Help** button in the upper right-hand corner of Serato DJ Lite, then **Watch tutorials** to launch your default internet browser and watch tutorials, to help you get familiar with Serato DJ Lite.

### Get Support

Click on the **Help** button in the upper right-hand corner of Serato DJ Lite, then **Get support** to launch your default internet browser and navigate to the Serato DJ Lite knowledge base, where you can find helpful articles and guides on Serato DJ Lite. Alternatively, type in the  **Go** box, with keywords, to search the Serato DJ Lite knowledge base for specific, related topics.

# Performance Pads

The Numark MixTrack Platinum FX comes with 4 performance pads, that can be used across 5 different performance pad modes. These consist of:

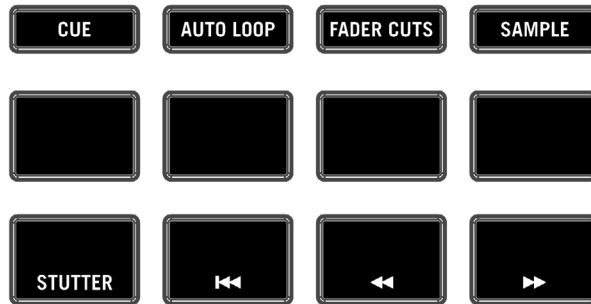


**HOT CUE mode:** Pads 1-4 trigger Serato DJ Lite Cue points, and if no Cue point is present on that slot/pad, pressing that pad will set a Cue point. Holding down the **SHIFT** button while pressing a pad will delete the Cue point from the respective pad/slot.

**AUTO LOOP mode:** Pads 1-4 trigger triggers an autoloop of variable sizes. Use the loop selection area in the Serato DJ Pro user interface, to influence the 4 available autoloop sizes.

**FADER CUTS mode:** Applies Fader Cuts to track on corresponding deck. See the Numark Mixtrack Platinum FX Manual for more information

**SAMPLE mode:** Press pads 1-4 in this mode to trigger samples loaded into the Serato DJ Lite Sampler.

**SCRATCH BANK mode:** Hold **SHIFT** while pressing the **AUTOLOOP** pad mode button, to enter Scratch Bank mode. This mode allows you to assign files in your Serato DJ Lite library to a Pad. When Pads 1-4 are triggered, the corresponding file will be loaded to deck, allowing you to quickly load useful Scratch samples. Click the Scratch Bank button  in the top tool bar of Serato DJ Lite to reveal the Scratch Bank Panel. In this panel you can load and eject files from the Scratch Banks

Holding **SHIFT**, while pressing a Scratch Bank Pad that is already loaded to a virtual deck, will reload the previously loaded track to that virtual deck.

**PADS 5-8 (In Order):** Stutter, Previous Track, Skip Backwards Skip Forward.