



# Reloop Ready Quick-Start Guide

# Setup

## Serato Software

The Reloop Ready is a “Serato DJ Lite hardware unlocked” device, meaning it works with Serato DJ Lite out of the box.

It is also a “paid upgrade to Serato DJ Pro device”, meaning it requires the purchase & activation of a Serato DJ Pro license, in order to be used with Serato DJ Pro.

You can also try Serato DJ Pro, before making a purchase.

[Click here to learn about buying or activating Serato DJ Pro](#)

or

[Click here to learn about trying Serato DJ Pro](#)

 
Please ensure you have the latest version of Serato DJ Lite installed:

[Click here to download Serato DJ Lite](#)

## Driver Software


The Reloop Ready does not require manufacturer specific drivers on Mac computers. Windows computers require a device driver to be installed. This can be downloaded from [Reloop's website](#).

## Overview

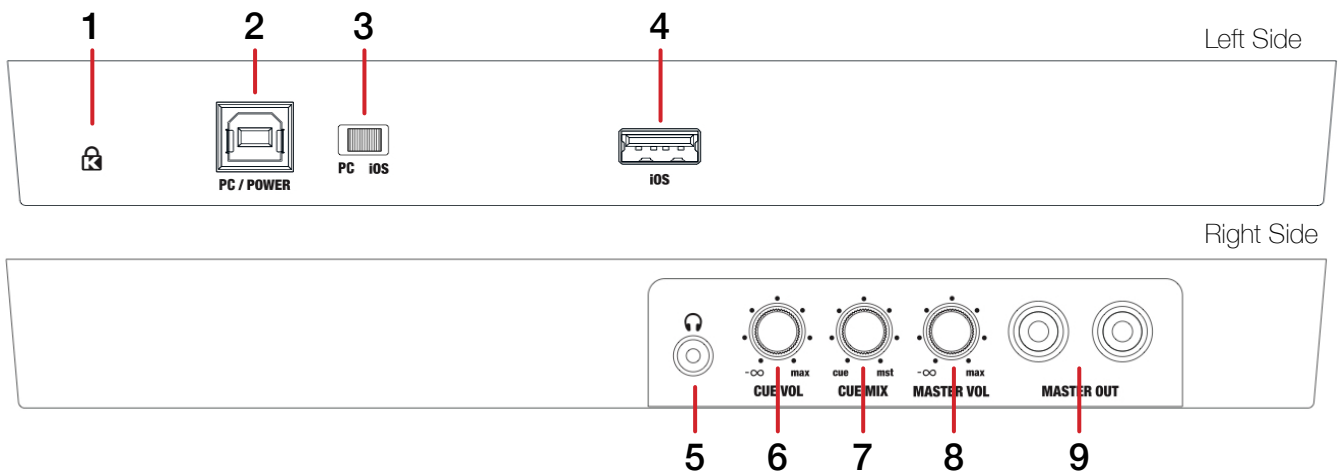

#	Reloop Ready CONTROL	FUNCTION
1	KENSINGTON LOCK	Connect your 1/4" headphones to this output for cueing
2	PC USB	Connect USB cable to this port from computer
3	PC/IOS SWITCH	Switch between PC (Serato) and IOS device
4	IOS USB	Used for IOS connection
5	1/8" HEADPHONE JACK	Connect your 1/8" headphones to this output for cueing
6	CUE VOL	Adjust the volume of the headphones
7	CUE MIX	Adjust the level of cue and master heard in the headphones
8	MASTER VOL	Adjust the master output volume
9	MASTER OUTPUT	Use RCA cables to connect this output to a speaker or powered monitors
 
# Overview

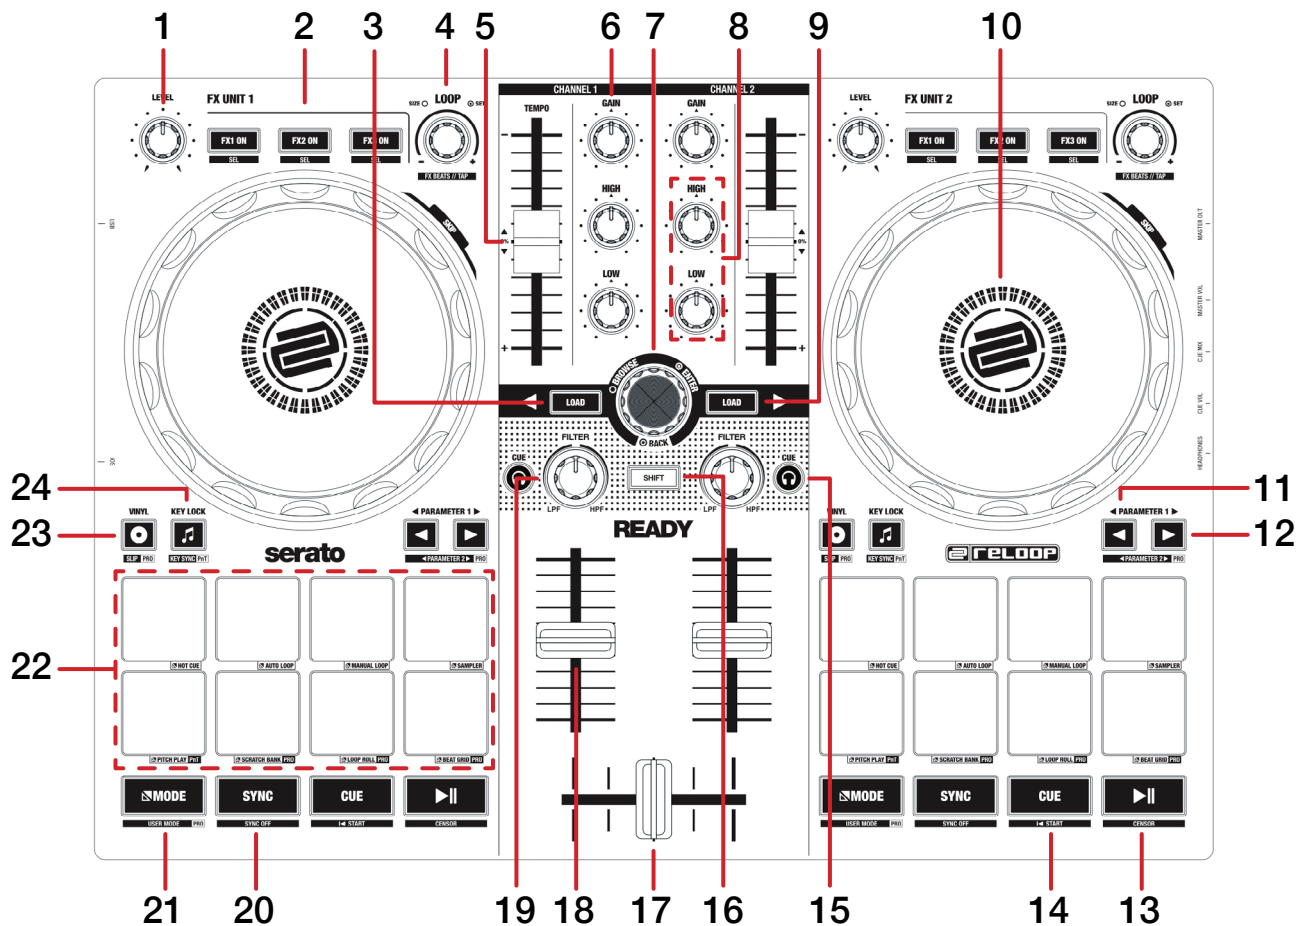


#	Ready CONTROL	FUNCTION	Shift
1	FX LEVEL	Adjust FX depth parameter for FX 1, 2 & 3	-
2	FX UNIT	Enable FX 1, 2 & 3	FX Select
3	LOAD CHANNEL 1	Load currently highlighted track to deck 1	-
4	LOOP	Scroll to choose size of loop, press to activate loop	FX Beat Select/Tap
5	TEMPO SLIDER	Adjust playback tempo of current loaded track	Ignore tempo slider
6	CHANNEL GAIN	Adjust channel gain	-
7	BROWSE	Scroll library or crate list/Library back	Fast scroll
8	CHANNEL EQ	Adjust channel EQ	-
9	LOAD CHANNEL 2	Load currently highlighted track to deck 2	-
10	JOG WHEEL	Control the waveform within Serato DJ Pro	Platter skip
11	PARAMETER LEFT	Adjust the pad mode parameters	-
12	PARAMETER RIGHT	Adjust the pad mode parameters	-
13	PLAY	Play or pause the currently loaded track	Censor
14	CUE	Set/play from a temporary cue point	Jump to start
15	HEADPHONE CUE	Enable to monitor the channel through the headphones	Adjust Tempo Range

# Overview

#	Ready CONTROL	FUNCTION	SHIFT
16	SHIFT	Used with other controls that have shift modifier functions	-
17	CROSSFADER	Fade audio between the channels	-
18	CHANNEL FADER	Adjust channel volume	-
19	CHANNEL FILTER	High and Low pass channel filter	-
20	SYNC	Turn Sync on for the respective deck	Turn off Sync
21	MODE	Hold and press in combination with a pad to select a pad mode	-
22	PERFORMANCE PADS	SEE PERFORMANCE PAD SECTION FOR MORE INFORMATION	-
23	VINYL	Turn vinyl mode on/off for the respective plater	-
24	KEYLOCK	Enable and disable Key Lock for deck	-

## Performance Pads

 The Reelock Ready can make use of 4 performance pads in Serato DJ Lite. These pads can be used across 5 different performance pad modes. Pads 5 - 8 are assigned to transport controls. **PADS 5-8 (In Order):** Reverse, Rewind, Fast Forward, Stutter Play. These consist of:

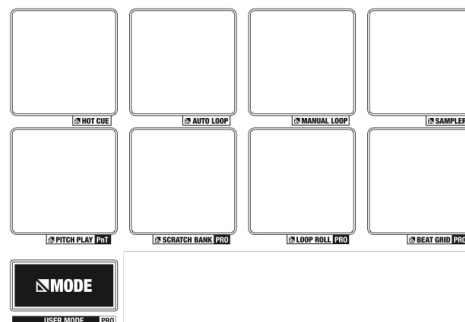

**HOT CUE mode:** Hold the **MODE** button and press **PAD 1** to select HOT CUE mode. In this mode pads 1-4 trigger Serato DJ Lite Cue points, and if no Cue point is present on that slot/pad, pressing that pad will set a Cue point. Holding down the **SHIFT** button while pressing a pad will delete the Cue point from the respective pad/slot.

**AUTO LOOP mode:** Hold the **MODE** button and press **PAD 2** to select AUTO LOOP mode. Pads 1-4 trigger trigger an autoloop of variable sizes. Use the **PARAMETER** buttons to shift the loop left or right.

**MANUAL LOOP mode:** Hold the **MODE** button and press **PAD 3** to select MANUAL LOOP mode. In this mode, **PAD 1** sets the in point and **PAD 2** sets the out point. **PAD 3** will Enable/Disable the loop and **PAD 4** will trigger Reelock.

**SAMPLER mode:** Hold the **MODE** button and press **PAD 4** to select SAMPLER mode. Press pads 1-4 in this mode to trigger samples loaded into the Serato DJ Pro Sampler.

**SCRATCH BANK mode:** Hold the **MODE** button while pressing the **PAD 7**, to enter Scratch Bank mode. This mode allows you to assign files in your Serato DJ Lite library to a Pad. When Pads 1-4 are triggered, the corresponding file will be loaded to deck, allowing you to quickly load useful Scratch samples.

Click the Scratch Bank button  in the top tool bar of Serato DJ Lite to reveal the Scratch Bank Panel. In this panel you can load and eject files from the Scratch Banks. Holding **SHIFT**, while pressing a Scratch Bank Pad that is already loaded to a virtual deck, will reload the previously loaded track to that virtual deck.

# Help

## Show Tooltips

Click on the **Help** button in the upper right-hand corner of Serato DJ Lite, then **Show tooltips** to enable tooltips. Tool tips provide a handy way to learn the various features of Serato DJ Lite.

Move the mouse over a section of the screen to bring up a context sensitive tool tip.

## Watch Tutorials

Click on the **Help** button in the upper right-hand corner of Serato DJ Lite, then **Watch tutorials** to launch your default internet browser and watch tutorials, to help you get familiar with Serato DJ Lite.

## Get Support

Click on the **Help** button in the upper right-hand corner of Serato DJ Lite, then **Get support** to launch your default internet browser and navigate to the Serato DJ Lite knowledge base, where you can find helpful articles and guides on Serato DJ Lite. Alternatively, type in the  **Go** box, with keywords, to search the Serato DJ Lite knowledge base for specific, related topics.