

# QUICK-START GUIDE

# VESTAX TYPHOON

serato



DJ


# Installation and Setup

The Vestax Typhoon is a class compliant USB plug and play device for both Mac and Windows and does not require any further driver installation.

1. Download and install the latest version of Serato DJ from <http://serato.com/dj/downloads>
2. Connect your Vestax Typhoon to an available USB Port.
3. Open Serato DJ.

## Serato DJ Activation

To find out how to activate Serato DJ by either starting your free 14 day trial, or purchasing a license for Serato DJ, [click here](#) for the most up to date information.

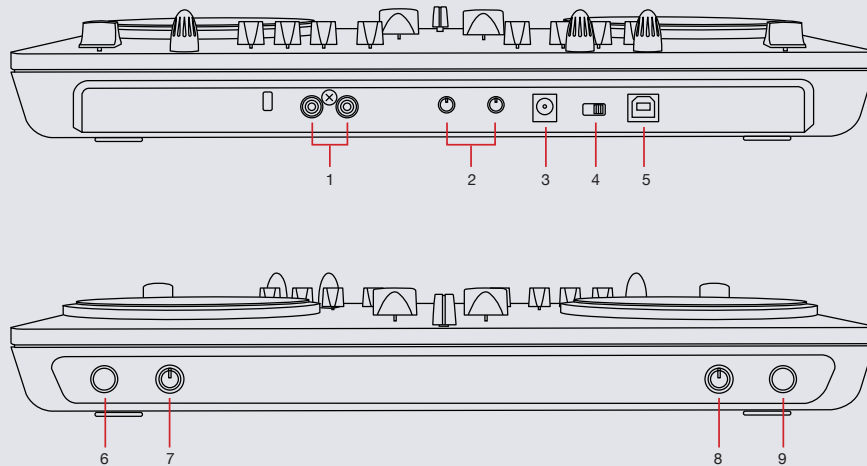



#	Vestax Typhoon Control	Function
1	MASTER OUT	RCA Master Output
2	TOUCH SENSOR LEVEL	Adjust level of touch sensitivity for the platters
3	ADAPTOR	To power Typhoon with optional DC adaptor
4	POWER SOURCE	Select between Adaptor, Off and USB
5	USB	For connecting the Typhoon to your computer
6	MIC IN	Microphone Input Socket.
7	MIC LEVEL	Hardware microphone input gain control
8	PHONES LEVEL	Adjust the volume of the headphone output
9	PHONES	6.5mm jack for headphone output



**NOTE:** The mic level can be further adjusted in the Serato DJ setup screen under the MIXER tab.

serato




# Looping

You have up to 8 loops per track in Serato DJ, and the choice between either manual or auto loops. You can choose whether you have 4 loops (and 4 cuepoints) showing on screen, or 8 loops. To switch between Manual and Auto looping, click  (Manual) or  (Auto) onscreen.



**NOTE:** You can also save a loop to the next available free loop slot in the software. To do this, either click the  button in the manual/auto loop tab or click  on an available loop slot. Your loops are saved to the file and recalled the next time it is loaded. They are not lost if the file is moved or renamed.

Typhoon Control	Function
LOOP SET	Auto Loop On/Off
LOOP -	Halve Loop Length
LOOP +	Double Loop Length

# DJ-FX

The DJ-FX in Serato DJ are powered by iZotope™. Click the FX tab  to open the FX panel. Select either 1, 2 or M to assign the selected effect bank to a deck or Master Output.

There are two available modes in the DJ-FX. Single FX Mode allows you to select one effect per FX bank, and has multiple parameters that can be adjusted. Multi FX Mode allows you to select up to three effects per FX bank, and adjust only one parameter, the FX Depth. The same effects available in Single FX mode are available in Multi FX mode, as well some additional presets.

You can select between the two FX modes by clicking either the Single FX mode button  or Multi FX mode button 

Typhoon Control	Single FX Mode	Multi FX Mode
FX 1 (button)	FX UNIT 1 Effect On/Off	FX UNIT 1 Slot 1 Effect On/Off
DRY/WET (FX 1)	Adjust FX Parameter 1	Adjust Slot 1 FX Parameter
FX 2 (button)	FX UNIT 2 Effect On/Off	FX UNIT 2 Slot 1 Effect On/Off
DRY/WET (FX 2)	Adjust FX Parameter 1	Adjust Slot 1 FX Parameter

# SERATO VIDEO

Serato Video is a software plugin for Serato Software which adds the ability to playback and mix video files, use effects and fader transitions with your Serato DJ Controller, an additional MIDI controller or your mouse/keyboard.

For more information on Serato Video go to <http://serato.com/video>


# MIDI

The MIDI control feature in Serato DJ provides the ability to map Serato DJ software functions to MIDI controller functions such as keyboards, triggers, sliders, and knobs. Integrating MIDI controllers into your Serato DJ setup can improve live performance usability, such as hitting pads on a MIDI controller to trigger Loops and Cue Points.

For more information download the Serato DJ manual by going to <http://serato.com/dj/downloads>

**NOTE:** You can not MIDI Map your Vestax Typhoon, you will need to connect an additional MIDI controller to use these MIDI functions.

# Controller

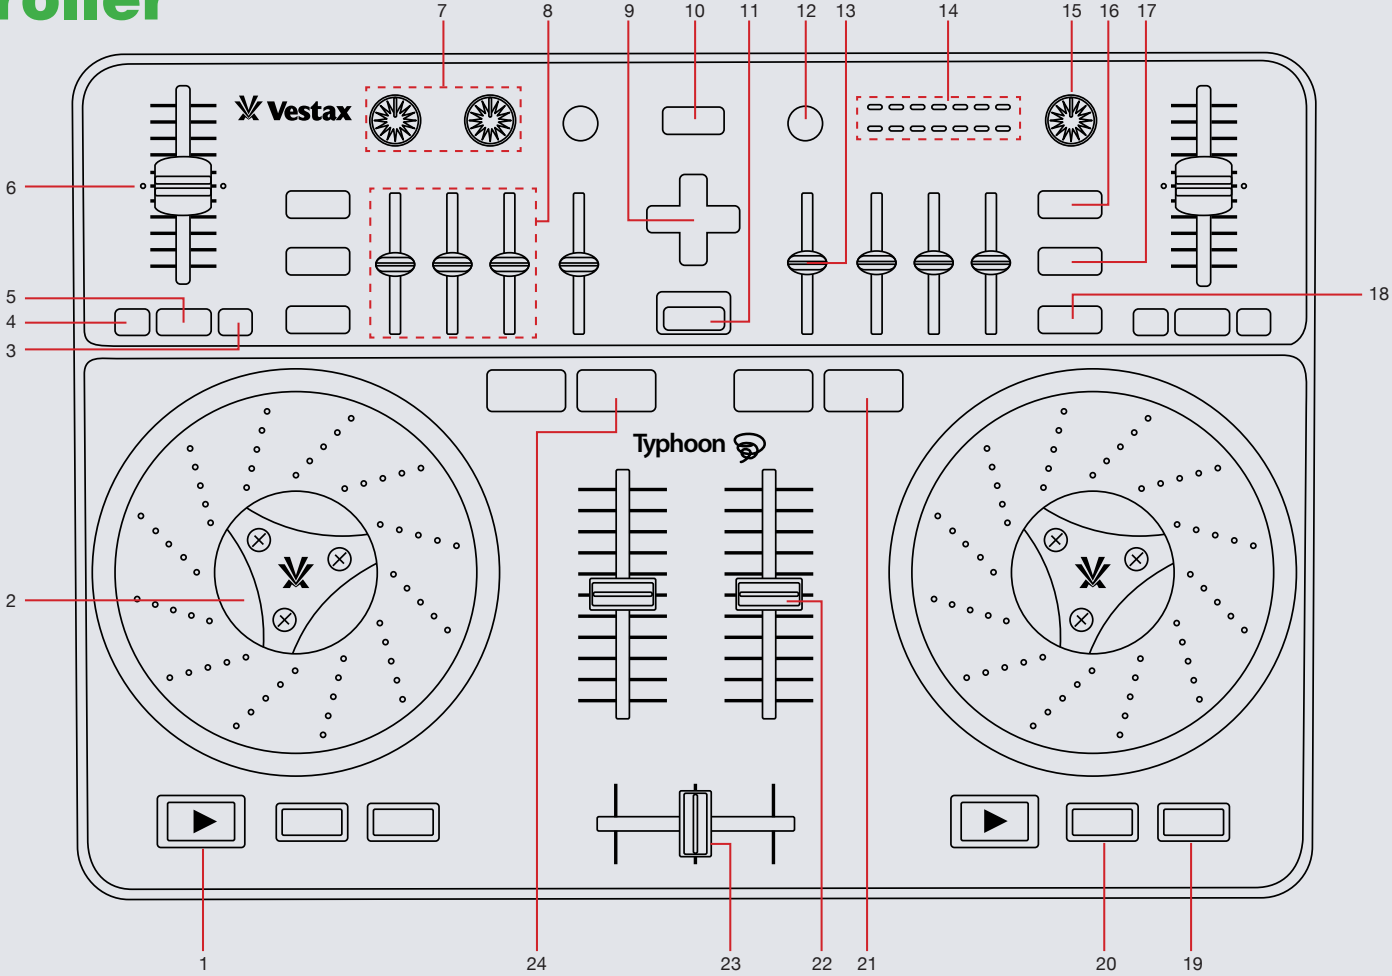

**NOTE:** SHIFT button is used with other buttons that have shift modifier functions


	Numark N4 Control	Function	SHIFT Function
1	PLAY/PAUSE	Play/Pause track	Stutter Play
2	PLATTER	Touch the top to scratch or jog. Moving the outside of the wheel will jog.	
3	+	Pitch bend up	
4	-	Pitch bend down	
5	SYNC	Sync On	
6	TEMPO FADER	Adjust Tempo	
7	DRY/WET (FX1/2)	Adjust FX UNIT 1/2 Slot 1 FX Parameter	
8	EQ	Adjust the High, Mid and Low Frequencies for each channel	
9	NAVIGATION	Library Scroll Up/Down or LOAD 1/2 to load track to selected deck (Tap twice for Instant Double)	
10	SONG LIST	Toggle open panels	
11	SHIFT	The SHIFT button is used with other buttons that have shift modifier functions	
12	FX 1/2	FX UNIT 1/2 Slot 1 Effect On/Off	
13	GAIN	Adjust gain for selected channel	
14	LED METER	Monitors the audio levels of the Master Output	
15	OUTPUT	Adjust Master Output	
16	LOOP SET	Auto Loop On/Off	
17	LOOP -	Halve Loop Length	
18	LOOP +	Double Loop Length	
19	CUP	Stutter Play	Load Next Track
20	CUE	Add/Trigger temporary cue	Jump to start of track (more than 2 Sec elapsed) Previous track (less than 2 sec elapsed)


21	FILTER	Activate platter filter mode. The Platter now acts as a combo filter.
22	CHANNEL FADER	Adjust Channel Volume
23	CROSSFADER	Fade between the two channels
24	CUE	Cue selected channel

**NOTE:** When using the CUE function, you can adjust the CUE MIX between the cue output and the master output. This is done by using CUE MIX found in the SETUP screen under the MIXER tab.

**NOTE:** Due to Vestax Typhoon mapping limitations, there is no Sync Off functionality. To turn Sync Off, click the OFF button on screen in Serato DJ

## Using the Tool Tips

Click on the  icon to enable Tool Tips. This is located in between the MIDI and setup button in the top right hand corner of the screen. Tool Tips provide a handy way to learn the various features of Serato DJ.

Move the mouse over a section of the screen to bring up a context sensitive tool tip. Holding the mouse over the  button with Tool Tips turned on will show you a list of all keyboard shortcuts.

For more information about how to use Serato DJ, please go to our website [www.serato.com](http://www.serato.com) or refer to the Serato DJ Software Manual. For more information on your controller, please refer to the hardware manual.

For further help, please contact [support@serato.com](mailto:support@serato.com) or go to [www.serato.com/dj/support](http://www.serato.com/dj/support)

serato

