

QUICK-START GUIDE

PIONEER DDJ-SB

serato




DJ INTRO

Installation and Setup

The Pioneer DDJ-SB is a class compliant USB plug and play device for Mac, however requires drivers for Windows. You will find these on the installation CD provided with your Pioneer DDJ-SB.


NOTE: Please ensure you have the latest available drivers AND firmware updates, which may be required in order to be compatible with Serato DJ Intro. Please go to <http://serato.com/dj-intro/support>

1. Download and install the latest version of Serato DJ Intro from <http://serato.com/dj-intro/downloads>
2. Connect your Pioneer DDJ-SB to an available USB Port.
3. Open Serato DJ Intro.

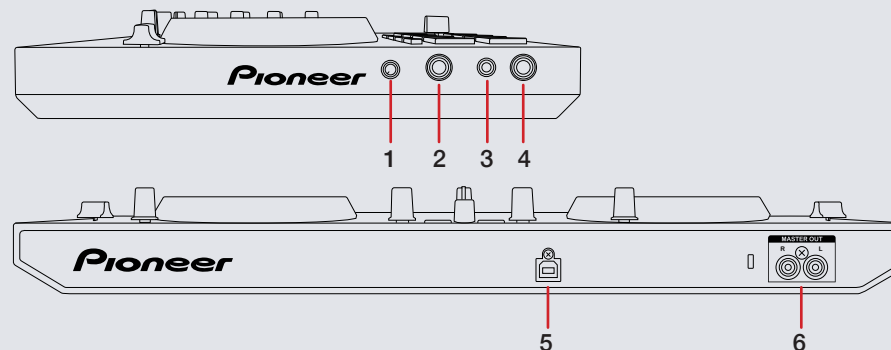

#	Pioneer DDJ-SB Control
1	Mic Level Adjust
2	Mic Input (1/4")
3	Headphone Output (1/8")
4	Headphone Output (1/4")
5	USB
6	Master Output

Controller

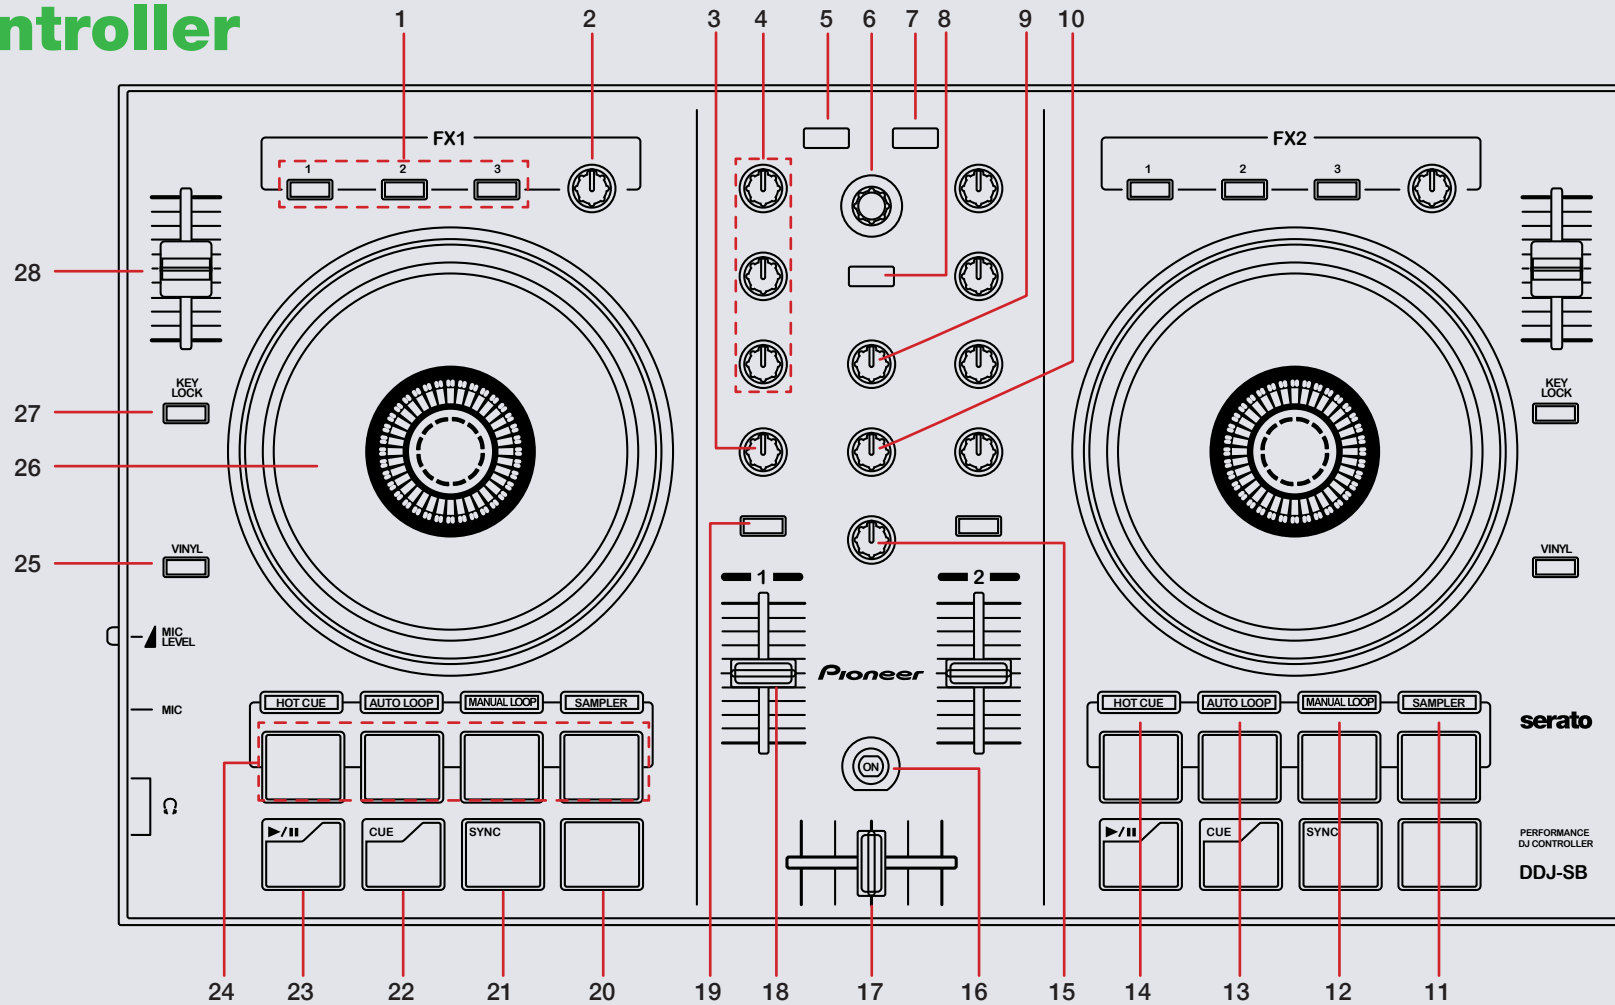


NOTE: The **SHIFT** button is used with other buttons that have shift modifier functions.

#	Pioneer DDJ-SB Control	Function	Shift Function
1	FX BUTTONS (P1,2,3)	Slot 1-3 Effect On/Off	Slot 1-3 Select Effect
2	FX KNOBS	Adjust Slot 1-3 FX Parameter	Adjust Beats Multiplier
3	FILTER	LP/HP filter combo adjust	
4	EQ (knobs)	Adjust HI, MID and LOW	
5	LOAD	Load selected track to Deck 1 (Press twice to Instant Double)	
6	BROWSER	Browses through currently focused area (library/crates/open panels) Click to move between library and crates	
7	LOAD	Load selected track to Deck 2 (Press twice to Instant Double)	
8	BACK	Toggles focus between library, crates and open panels	
9	MASTER LEVEL	Adjusts the master output's audio level	
10	HEADPHONES MIX	Adjusts headphone output between cue and master	
11	SAMPLER MODE	Activates Sampler Performance Pad mode (SEE PERFORMANCE PADS)	
12	MANUAL LOOP MODE	Activates Manual Loop Performance Pad mode (SEE PERFORMANCE PADS)	
13	AUTO LOOP MODE	Activates Auto Loop Performance Pad mode (SEE PERFORMANCE PADS)	
14	HOT CUE MODE	Activates Hot Cue (1-4) Performance Pad mode (SEE PERFORMANCE PADS)	
15	HEADPHONES LEVEL	Adjusts the headphone output level	
16	FILTER MIX MODE	Filter mix mode for crossfader On/Off	
17	CROSSFADER	Crossfades the output sound between Deck 1 & 2	
18	CHANNEL FADERS	Adjusts the Channel Output	
19	CUE	Cue selected channel in headphones	
20	SHIFT	SHIFT button is used with other buttons that have shift modifier functions	
21	SYNC	Sync On	Sync Off (Press twice to return to Absolute Pitch when in Relative Mode)

NOTE: The **SHIFT** button is used with other buttons that have shift modifier functions.

#	Pioneer DDJ-SB Control	Function	Shift Function
22	CUE	Add or Jump to Temporary Cue	Jump to start of track (more than 2 Sec elapsed) Previous track (less than 2 sec elapsed)
23	PLAY/PAUSE	Play/Pause track	Stutter Play
24	PERFORMANCE PADS	Controls Performance Modes (SEE PERFORMANCE PADS FOR MORE INFORMATION)	
25	JOG MODE	Toggles between Vinyl/Jog Modes	
26	PLATTER	Adjust/Scratch or Jog	Search
27	KEYLOCK	Enable Keylock	Cycle through available Tempo Range
28	PITCH FADER	Adjust Pitch	When in Sync mode, used to disable the Pitch Fader temporarily and change the zero position

Performance Pads

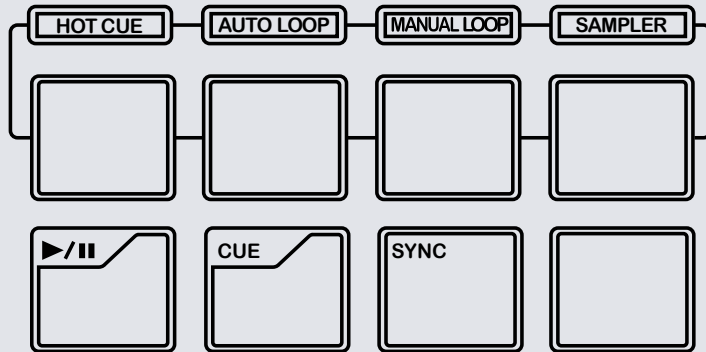

The performance pads have eight different modes you can select. The first four modes are; Hot Cue Mode (1-4), Auto Loop Mode, Manual Loop Mode and Sampler Mode.

- Hot Cue (1-4) Mode: When pressing pads 1-4 you can add up to 4 Cue Points. Holding SHIFT and pressing pads 1-4 will delete the Cue Points.
- Auto Loop Mode: When pressing pads 1-4 you can activate an Auto Loop. (SEE LOOPING FOR MORE INFORMATION)
- Manual Loop Mode: The IN (Pad 1) and OUT (Pad 2) pads place the IN and OUT points of a manual loop. EXIT (PAD 3) will turn loop ON/OFF and 1/2X pad (Pad 4) will halve the loop length. (SEE LOOPING FOR MORE INFORMATION)
- Sampler Mode: Pads 1-4 Trigger Samples loaded in your Sample Banks. Holding SHIFT and pressing pads 1-4 will stop your samples.

Looping

You have the choice of Auto or Manual looping within Serato DJ Intro with the DDJ-SB.

Auto Loop Mode

DDJ-SB Control	Serato DJ function
PAD 1	Auto Loop 1 Bar ON/OFF
PAD 2	Auto Loop 2 Bar ON/OFF
PAD 3	Auto Loop 4 Bar ON/OFF
PAD 4	Auto Loop 8 Bar ON/OFF

Manual Loop Mode


DDJ-SB Control	Serato DJ function	Shift
PAD 1	Set loop in point (Loop not active)/Adjust loop in point (Loop active)	Not Mapped
PAD 2	Set loop out point (Loop in point set)/Adjust loop out point (Loop active)	Not Mapped
PAD 3	Reloop / Loop Exit	Loop ON/OFF
PAD 4	Halve Loop Length	Double Loop Length


DJ-FX

You can have up to three different effects active per Virtual deck within Serato DJ Intro with the Pioneer DDJ-SB.

DDJ-SB Control	Serato DJ function	Shift
FX P1 BUTTON	Slot 1 Effect On/Off	Slot 1 Select Effect
FX P2 BUTTON	Slot 2 Effect On/Off	Slot 2 Select Effect
FX P3 BUTTON	Slot 3 Effect On/Off	Slot 3 Select Effect
FX KNOBS	Adjust FX Parameter (1-3)	Adjust Beats Multiplier

Using the Tool Tips

Click on the  icon to enable Tool Tips. This is located in next to the setup button in the top right hand corner of the screen. Tool Tips provide a handy way to learn the various features of Serato DJ Intro.

Move the mouse over a section of the screen to bring up a context sensitive tool tip. Holding the mouse over the  button with Tool Tips turned on will show you a list of all keyboard shortcuts.

For more information about how to use Serato DJ Intro, please go to our website www.serato.com or refer to the Serato DJ Intro Software Manual.

For more information on your controller, please refer to the hardware manual.

For further help, please contact support@serato.com or go to www.serato.com/dj-intro/support

serato



DJ INTRO