



Pioneer DJ XDJ-XZ Quick-Start Guide

Setup

Serato Software

The Pioneer XDJ-XZ is a “Serato DJ Pro hardware unlocked” device, meaning it works with Serato DJ Pro out of the box.

Please ensure you have the latest version of Serato DJ Pro installed:

[Click here to download Serato DJ Pro](#)


Connection

The Pioneer XDJ-XZ requires manufacturer specific drivers on both Mac & Windows operating systems. You must download and install the driver, as well as the latest firmware (**version 1.10 or higher**) from Pioneer's website, [here](#).

Once the driver is installed and firmware updated, follow the steps below to connect your XDJ-XZ with Serato DJ Pro:


1. Launch the latest version of Serato DJ Pro, and connect the USB cable from your computer to the XDJ-XZ.
2. Power on the XDJ-XZ, and press the **LINK** button in the source select area. Press the flashing **LOAD 1 & 2** buttons in turn to assign each deck for control. Press the **SHORTCUT** button and then use the on-screen controls to swap between deck layers 1/3 & 2/4, or double press **SHIFT** on the device

Overview

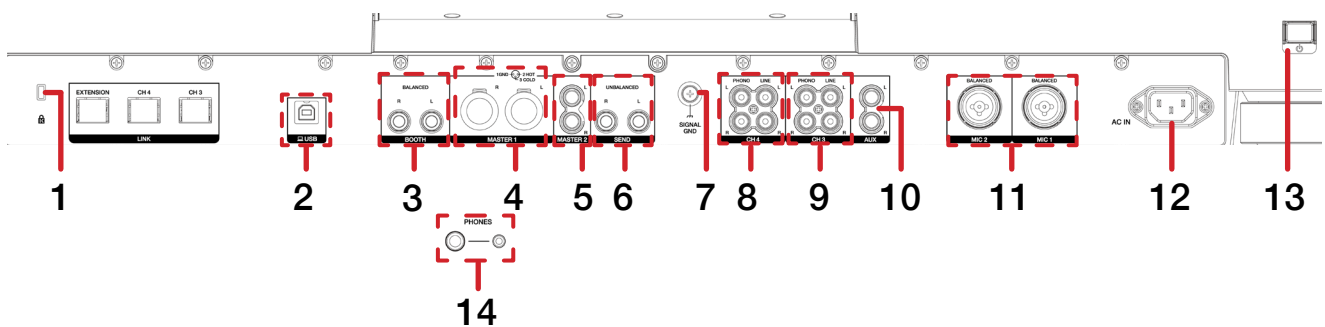

#	XDJ-XZ CONTROL	FUNCTION
1	KENSINGTON LOCK	Secure device
2	USB	Connect USB cable from PC
3	BOOTH	Booth 1/4" output
4	MASTER 1	XLR Master output
5	MASTER 2	RCA Master output
6	SEND	
7	SIGNAL GND	Connect grounding wire
8	CH4 LINE/PHONO	Channel 4 RCA input
9	CH3 LINE/PHONO	Channel 3 RCA input
10	AUX	
11	MIC 2 & MIC 1	(2) XLR & 1/4" dual microphone input
12	AC IN	Connect power input
13	ON/OFF SWITCH	Press to turn device power on / off
14	PHONES	1/4" & 1/8" headphone output

Overview

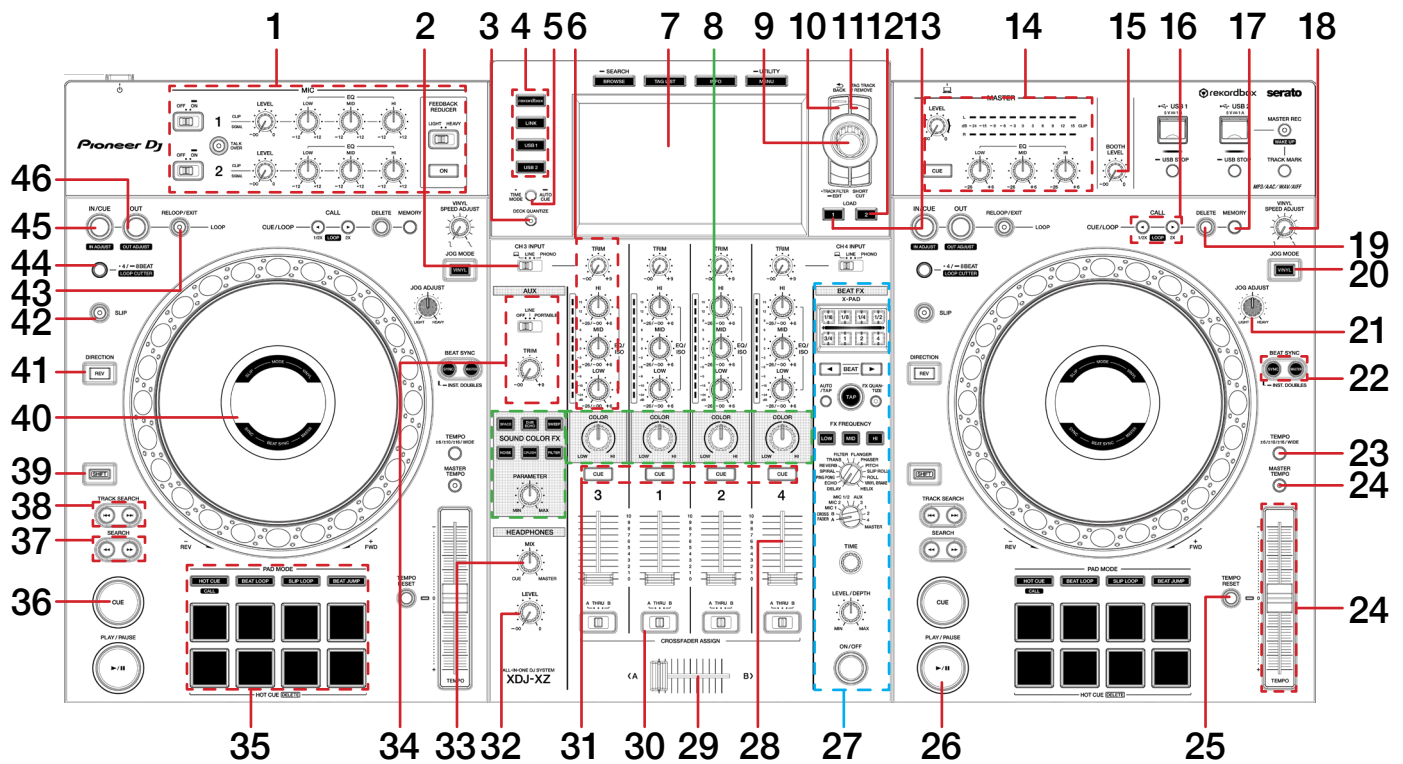


#	PIONEER DJ XDJ-XZ CONTROL	FUNCTION	SHIFT FUNCTION
1	MIC SECTION	MIC Toggle/MIC1 level/MIC2 level/MIC Hi & Low EQ	-
2	INPUT SELECT	Toggle between inputs per deck 3 & 4 (per side)	-
3	QUANTIZE	Toggle Quantize	-
4	SOURCE	Select source for control (LINK for Serato DJ Pro)	-
5	TIME MODE	Toggle between time elapsed / time remaining	-
6	CHANNEL TRIM/EQ	Adjust Hi/Mid/Low EQ & gain per channel	-
7	DISPLAY	Display track information	-
8	COLOR FX	Adjust Color FX per channel / Choose Color FX / Adjust Color FX parameter	-
9	BROWSE	Turn to scroll Library. Press in to toggle forward between Library & Crate list	Fast Library scroll
10	BACK	Toggle focus back between Library & Crate list	Activate Autoloop
11	TAG TRACK	Add track to prepare	-
12	LOAD 1	Load selected track to active deck 1	Instant Double
13	LOAD 2	Load selected track active deck 2	Instant Double
14	MASTER SECTION	Adjust Master EQ, Master Level, Toggle Master Cue	-
15	BOOTH LEVEL	Adjust Booth output gain	-
16	1/2x & 2x LOOP	Halve or double active loop / Slot select when loop inactive	-
17	MEMORY	Loop Slot Save	-
18	VINYL SPEED ADJUST	Adjust Play Stop time	-
19	DELETE	Loop Slot Delete	-
20	JOG MODE	Toggle vinyl mode per deck	-

Overview

#	PIONEER DJ XDJ-XZ CONTROL	FUNCTION	SHIFT FUNCTION
21	JOG ADJUST	Adjust jog feel	-
22	SYNC / MASTER	Press SYNC to toggle sync on, press MASTER to toggle sync off (per deck)	-
23	TEMPO	Cycle pitch range per deck	-
24	TEMPO SLIDER	Adjust tempo/pitch per deck	Ignore tempo/pitch adjustment per deck
25	TEMPO RESET	Toggle Keylock on / off per deck	-
26	PLAY / PAUSE	Toggle Play / Pause per deck	Stutter Play
27	BEAT FX SECTION	Beat FX controls	-
28	CHANNEL FADER	Adjust channel volume	Fader start
29	CROSS FADER	Crossfade audio between channel A-B	Crossfader start
30	CROSSFADER ASSIGN	Assign crossfader to channel A/THRU/B	-
31	CHANNEL CUE	Press per channel to cue for monitoring in headphones	Tap Tempo
32	HEADPHONES LEVEL	Adjust headphone output level	-
33	HEADPHONES MIX	Adjust headphone mix between Cue / Master	-
34	AUX SECTION	Adjust AUX volume / Select AUX source	-
35	PERFORMANCE PADS	SEE PERFORMANCE PADS SECTION FOR MORE INFORMATION	-
36	CUE	Set Temp Cue point / Cue from set Temp Cue point	-
37	SEARCH	Press and hold left button to rewind through currently loaded track / Press and hold right button to fast forward through currently loaded track	-
38	TRACK SEARCH	Press left button to load previous track, press right button to load next track	-
39	SHIFT	Use in conjunction with other controls as modifier. Double press to swap deck layer (per deck)	-
40	JOG WHEEL / JOG DISPLAY	Control waveform within Serato DJ Pro in vinyl mode, or pitch bend with vinyl mode off. Display shows track information	Fast waveform scroll in vinyl mode / aggressive pitch bend in vinyl mode off
41	DIRECTION / REVERSE	Press to toggle reverse on playing track (per deck)	-
42	SLIP	Toggle Slip mode	-
43	RELOOP / EXIT	Exit Loop	-
44	4 / 8 BEAT	Press for 4 Beat Autoloop when loop inactive / Hold for 8 Beat Autoloop when loop inactive / Halve loop when loop active	-
45	IN / CUE	Set Loop In point / Edit Loop In point	-
46	OUT	Set Loop Out point / Edit Loop Out point	-

Performance Pads

The Pioneer DJ XDJ-XZ comes with 8 RGB performance pads, that can be used across 8 different performance pad modes.

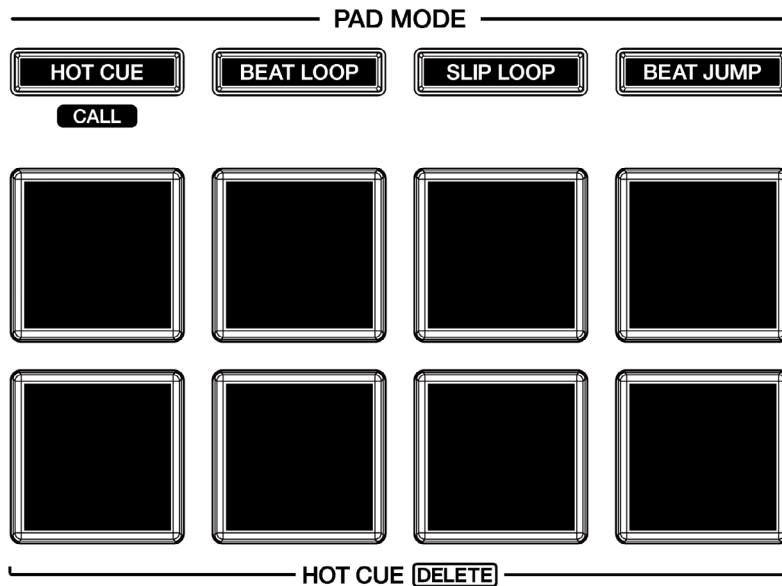

These consist of:


HOT CUE mode: Pads 1-8 trigger Serato DJ Pro Cue points, and if no Cue point is present on that slot/pad, pressing that pad will set a Cue point. Holding SHIFT while pressing a pad will clear the Cue point from that pad/slot.

AUTOLOOP mode: Press the BEAT LOOP pad mode button to enter AUTOLOOP mode. In this mode pressing pads 1-8 activates an autoloop of varying sizes. Press the same pad again to exit the autoloop. Use the 'Shift Autoloop range' controls in Serato DJ Pro to change the 8 selected loop size options

ROLL mode: Press the SLIP LOOP pad mode button to enter LOOP ROLL mode. In this mode holding pads 1-8 activates a loop roll of varying sizes. Release the pad to exit the Loop Roll. Use the 'Shift Autoloop range' controls in Serato DJ Pro to change the 8 selected loop size options.

SAMPLER mode: Press the BEAT JUMP pad mode button to enter SAMPLER mode. Press pads 1-8 to trigger samples loaded into the Serato DJ Pro Sampler. Hold SHIFT while pressing a pad to stop the sample playback once triggered, or load a sample to the respective Sampler slot if no sample is loaded.

Performance Pads

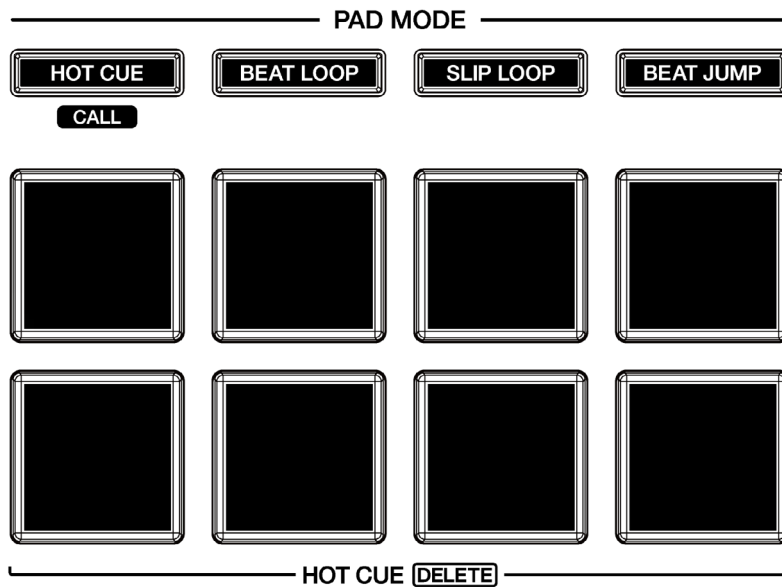

SAVED FLIP mode: Hold SHIFT while pressing the HOT CUE pad mode button to enter SAVED FLIP mode.

In this mode, pads 1-8 trigger Serato DJ Pro saved Flips. Holding SHIFT while pressing the same pad again will toggle the Saved Flip on or off.

SLICER mode: Hold SHIFT while pressing the BEAT LOOP pad mode button to enter SLICER mode. In this mode a specified range (or domain) is divided into eight equal sections, and these eight sliced sections are assigned to the respective performance pads (1-8), and can be triggered by pressing them. The domain shifts as the track duration elapses.

SLICER LOOP mode: Hold SHIFT while pressing the SLIP LOOP pad mode button to enter SLICER LOOP mode. Same as Slicer mode (see above), but uses a fixed Slicer Domain or "loop".

PITCH PLAY mode: Hold SHIFT while pressing the BEAT JUMP pad mode button to enter PITCH PLAY mode. PITCH PLAY mode requires the Serato Pitch 'n Time DJ expansion pack to be activated, see the PITCH PLAY section for more information.

Pitch Play

Holding SHIFT and pressing the BEAT JUMP performance pad mode button on the XDJ-XZ will enable Pitch Play mode. In this mode you can play Cue Points over variable pitch.

The root key pad (0) is always lit white, which will play the cue point at it's regular pitch.

In Pitch Play mode, pressing a pad will pitch the currently selected cue point up or down within a range, as illustrated below:

(Up 3/Down 4 Semitones)

0	+1	+2	+3
-4	-3	-2	-1

PITCH PLAY can only pitch one Cue point at a time. To change the selected Cue, hold the SHIFT button and press a performance pad where the cue point you want to select would be (as shown in the CUES performance pad mode). While holding SHIFT, press the corresponding performance pad for:

Cue 1	Cue 2	Cue 3	Cue 4
Cue 5	Cue 6	Cue 7	Cue 8

The selected cue point defaults to Cue Point 1 on track load, even if instant doubled. If a pad with no cue point is selected, then a new cue point will be created. Deleting a cue point however, is not possible in PITCH PLAY mode.

NOTE: Pitch Play mode is available once the Pitch 'n Time DJ Expansion Pack has been activated in the MY SERATO window. Make sure "Enable Pitch 'n Time DJ" is checked in the Expansion Pack tab of the SETUP screen.


DVS

The Pioneer XDJ-XZ is 'paid upgrade to Serato DVS hardware', meaning it requires activation of a Serato DVS license to allow you to use turntables or CD players to control Serato DJ Pro using NoiseMap™ Control Tone records or CDs. Serato DVS can be activated using an included voucher, or by purchasing it directly from store. serato.com.


You can find out more and purchase DVS, by visiting our website [here](#).

Beat Jump

To activate Beat Jump, open the Setup screen and under the DJ preferences tab turn on "Show Beat Jump Controls".



When you close the Setup screen you will see Beat Jump controls underneath the existing Auto Loop values on each deck. Checking this box will turn on Beat Jump features in the deck area and let you control Beat Jump from on your supported Serato DJ Pro hardware.



When the Beat Jump option is enabled, the LOOP ROLL & AUTO LOOP performance pad mode will use the bottom row of 4 pads (pads 5-8) as Beat Jump controls. This is designed to mirror the change in deck Auto Loop area (from 8 Auto Loop sizes to 4 Auto Loop sizes + Beat Jump controls).

MIDI

The MIDI feature in Serato DJ Pro provides the ability to remap Serato DJ Pro software functions to your primary Serato controller, interface or mixer. You can also assign controls to a secondary MIDI controller to further enhance your performance.

[For more information on MIDI mapping with Serato DJ Pro click here](#)

To remap your supported Serato device, open the SETUP screen and click the MIDI tab. If your Serato device supports hardware remapping, it will show up in the MIDI Devices list at the top.

Select your connected device from the MIDI Devices list and make sure the “Allow Serato Hardware Remapping” option is checked.

Allow Serato Hardware Remapping

Once checked, the MIDI assign button at the top of the screen will become available for you to start remapping.

NOTE: The XDJ-XZ has two MIDI components which detail Deck control & Mixer individually, and must be enabled individually for mapping of the full device.

You can save, edit or delete MIDI presets in the MIDI tab of the SETUP screen. Clicking ‘Restore Defaults’ will erase any custom mappings for all connected devices and revert their functions back to default.

Help

Show Tooltips

Click on the **Help** button in the upper right-hand corner of Serato DJ Pro, then **Show tooltips** to enable tooltips. Tool tips provide a handy way to learn the various features of Serato DJ Pro.

Move the mouse over a section of the screen to bring up a context sensitive tool tip.

Watch Tutorials

Click on the **Help** button in the upper right-hand corner of Serato DJ Pro, then **Watch tutorials** to launch your default internet browser and watch tutorials, to help you get familiar with Serato DJ Pro.

Get Support

Click on the **Help** button in the upper right-hand corner of Serato DJ Pro, then **Get support** to launch your default internet browser and navigate to the Serato DJ Pro knowledge base, where you can find helpful articles and guides on Serato DJ Pro. Alternatively, type in the **Search help** **Go** box, with keywords, to search the Serato DJ Pro knowledge base for specific, related topics.